

SERVICE FLASH

DW0905

Dishwasher Door Drops Below 90°

BRAND Electrolux

MODEL/SERIAL # EIDW6105GB EIDW6305GB EIDW6405TH EWDW6505GB
EIDW6105GS EIDW6305GS EWDW6505GS
EIDW6105GW EIDW6305GW EWDW6505GW

With serial numbers after TH909XXXXX through serial number TH921XXXXX.

PROBLEM The door, when fully opened, goes down more than 90°. Then as the lower rack is pulled from the tub, the lower rack rolls off the door and onto the floor.

CAUSE The hinge stop has bent in, allowing the door to drop too far down.

SOLUTION The hinge stops on both hinges need to be opened up and a hinge stop wedge installed, this will keep the door at the proper angle. A service kit has been assembled which supplies two wedges, one for each hinge, (See Figure 1) and an instruction sheet which shows how to install the wedges properly. The part number for the kit is 154775901.

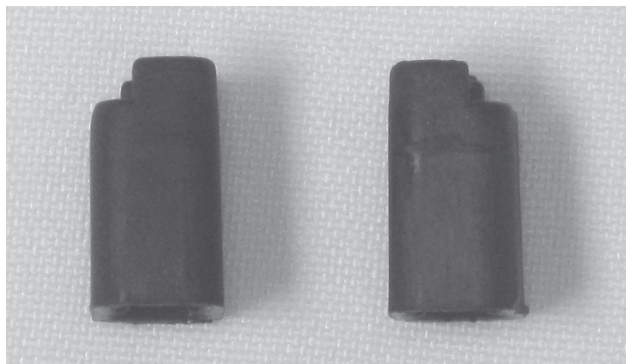


Figure 1