


175D2750G227-175D2750G227

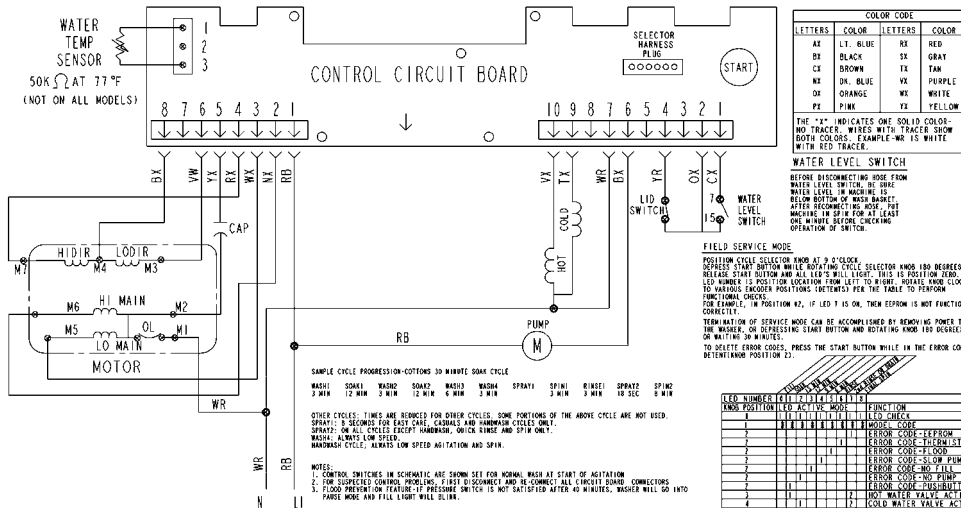

COLOR CODE			
LETTERS	COLOR	LETTERS	COLOR
AX	LT. BLUE	RX	RED
BX	BLACK	SX	GRAY
CX	BROWN	TX	TAN
NX	DK. BLUE	VX	PURPLE
OX	ORANGE	WX	WHITE
PX	PINK	YX	YELLOW

THE "X" INDICATES ONE SOLID COLOR-NO TRACER. WIRES WITH TRACER SHOW BOTH COLORS. EXAMPLE-WR IS WHITE WITH RED TRACER.

WATER LEVEL SWITCH

BEFORE DISCONNECTING HOSE FROM WATER LEVEL SWITCH, BE SURE WATER LEVEL IN MACHINE IS BELOW BOTTOM OF WASH BASKET. AFTER RECONNECTING HOSE, PUT MACHINE IN SPIN FOR AT LEAST ONE MINUTE BEFORE CHECKING OPERATION OF SWITCH.

LED NUMBER	1	2	3	4	5	6	7	8	9	10	11	12
WASH POSITION	I	I	I	I	I	I	I	I	I	I	I	I
LED CHECK												
MODEL CODE												
ERROR CODE-EPROM												
ERROR CODE-THERMISTOR												
ERROR CODE-FLOOD												
ERROR CODE-SLOW PUMP												
ERROR CODE-NO FILL												
ERROR CODE-NO PUMP												
ERROR CODE-PUSHBUTTON												
HOT WATER VALVE ACTIVE												
COLD WATER VALVE ACTIVE												
SLOW AGITATE (DRY) #												
FAST AGITATE (DRY) #												
PUMP												
SPIN												

- MODEL DEPENDANT**
- LED ON
 - DEPRESS START BUTTON WILL CHANGE LED TO NET
 - LED ON IF THE FILL CYCLE IS SATISFIED

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK:

THE POWER MUST BE DISCONNECTED BEFORE SERVICING BY UNPLUGGING THE MACHINE OR DISCONNECTING THE CIRCUIT BREAKER.

THE MACHINE MUST BE ELECTRICALLY GROUNDING THROUGH THE LEAD IN THE 3-PRONG POWER CORD THE CORD MUST BE PLUGGED INTO A GROUNDING APPLIANCE OUTLET THAT HAS BEEN PROPERLY INSTALLED. IF LOCAL CODES REQUIRE AN ADDITIONAL GROUND CONNECTION, USE A #6 GAUGE OR LARGER WIRE TO CONNECT THE WASHER CABINET TO AN ESTABLISHED GROUND. IN ALL CASES, THE GROUNDING METHOD MUST COMPLY WITH ALL LOCAL ELECTRICAL CODES AND ORDINANCES.

Pub No. 31-15933