


COLOR CODE			
LETTERS	COLOR	LETTERS	COLOR
AX	LT. BLUE	RX	RED
BX	BLACK	SX	GRAY
CX	BROWN	GX	GREEN
NX	DK. BLUE	VX	PURPLE
OX	ORANGE	WX	WHITE
PX	PINK	YX	YELLOW

THE "X" INDICATES ONE SOLID COLOR-NO TRACER WIRES WITH TRACER SHOW BOTH COLORS, EXAMBLE-MR IS WHITE WITH RED TRACER.

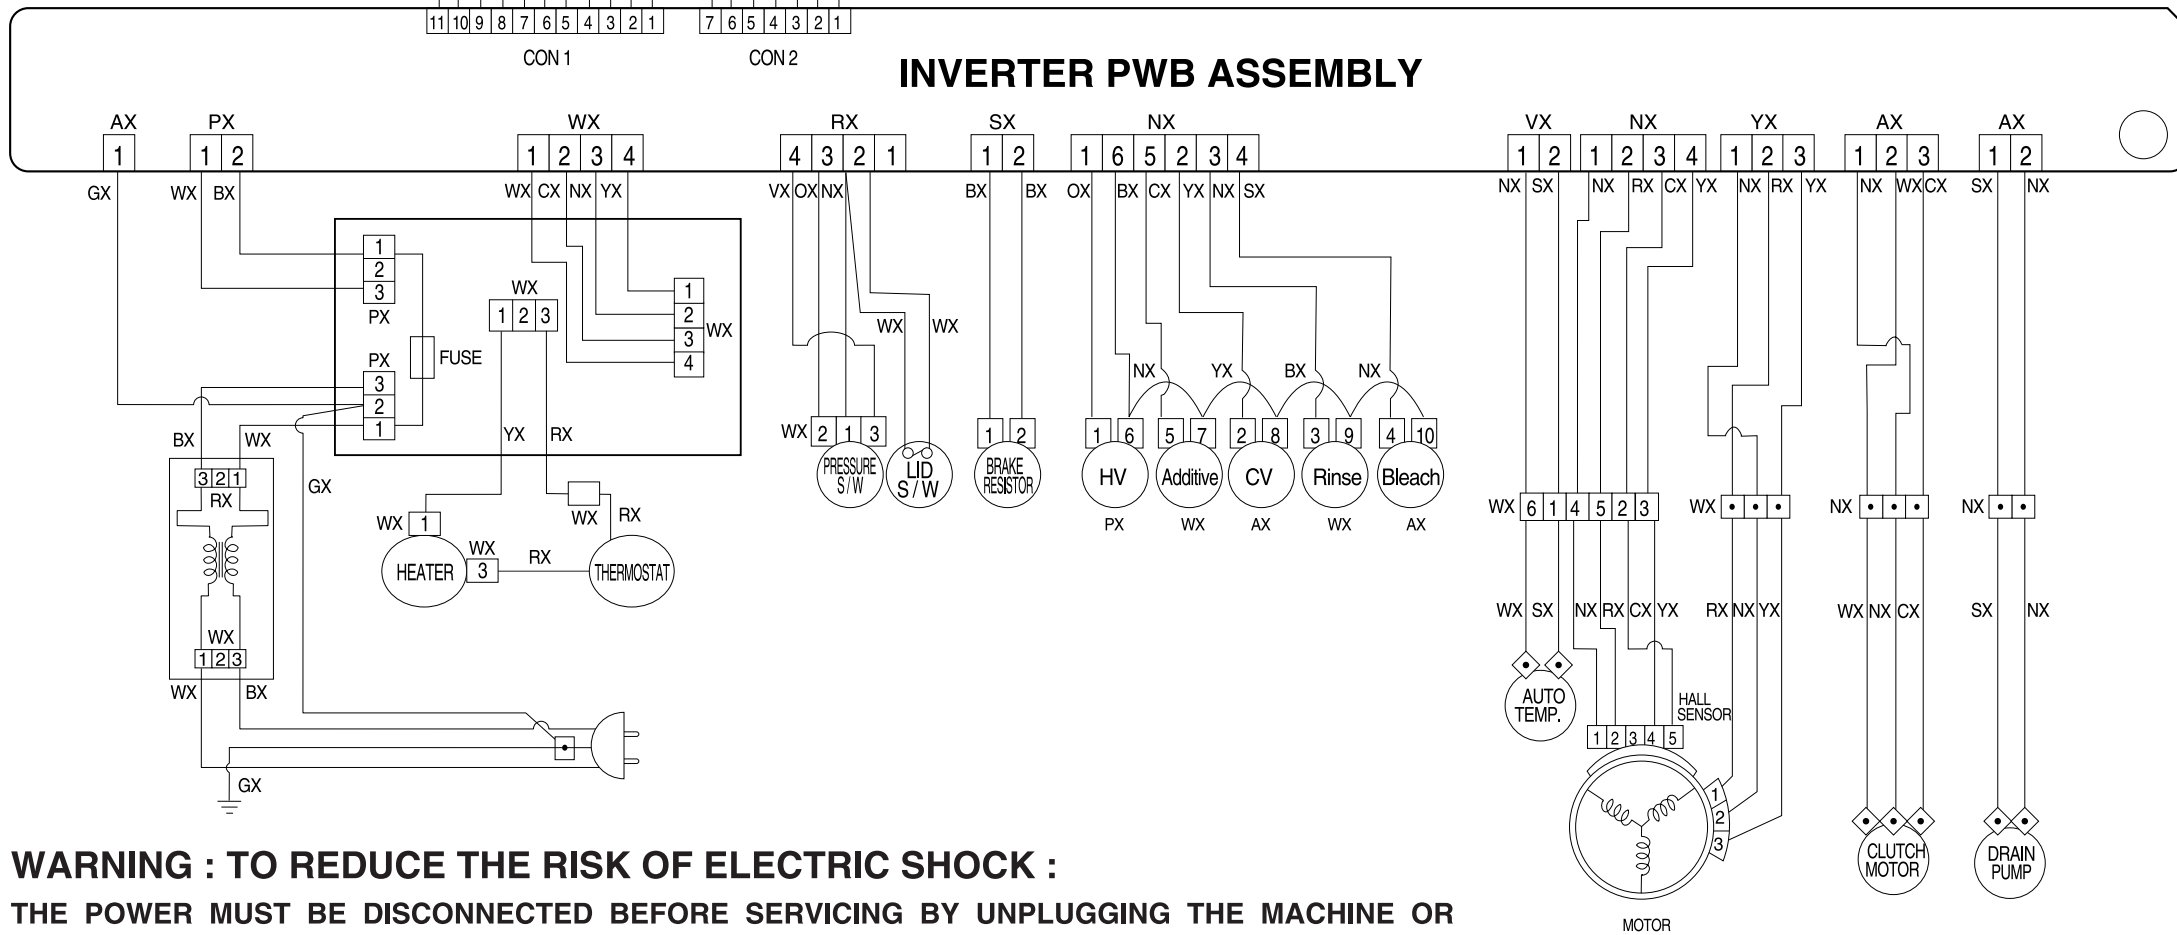

WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK :

THE POWER MUST BE DISCONNECTED BEFORE SERVICING BY UNPLUGGING THE MACHINE OR DISCONNECTING THE CIRCUIT BREAKER.

THE MACHINE MUST BE ELECTRICALLY GROUNDED THROUGH THE LEAD IN THE 3-PRONG POWER CORD THE CORD MUST BE PLUGGED INTO A APPLIANCE OUTLET THAT HAS BEEN PROPERLY INSTALLED. IF LOCAL CODES REQUIRE AN ADDITIONAL GROUND CONNECTION, USE A 15 GAUGE OR LARGER WIRE TO CONNECT THE WASHER CABINET TO AN ESTABLISHED GROUND. IN ALL CASES, THE GROUNDING METHOD MUST COMPLY WITH ALL LOCAL ELECTRICAL CODES AND ORDINANCES.