




# MICROWAVE OVEN

MC1015WB

MC1015BB

# SERVICE *Manual*

## MICROWAVE OVEN

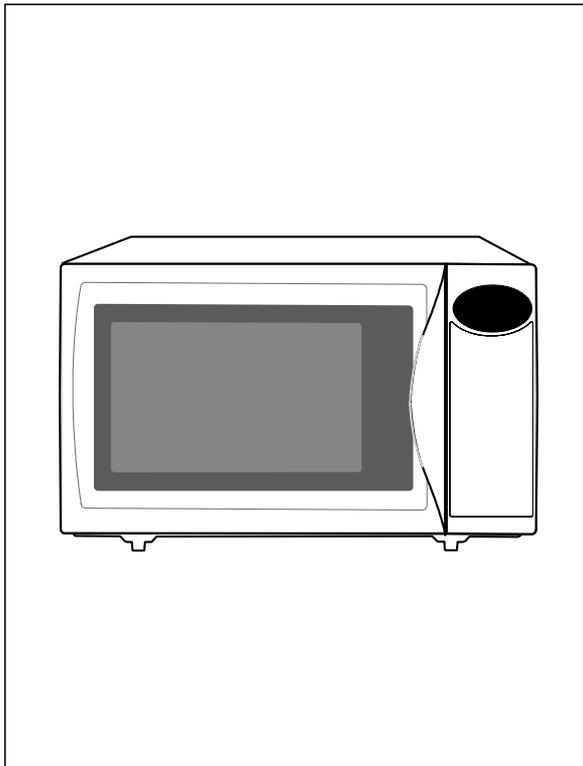

SEA

## CONTENTS

- 1. Precaution
- 2. Specifications
- 3. Operating Instructions
- 4. Disassembly and Reassembly
- 5. Alignment and Adjustments
- 6. Troubleshooting
- 7. Exploded Views and Parts List
- 8. PCB Diagrams
- 9. Schematic Diagrams

## **PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- (a) Do not operate or allow the oven to be operated with the door open.
  - (b) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
    - (1) Interlock operation,
    - (2) proper door closing,
    - (3) seal and sealing surfaces (arcing, wear, and other damage),
    - (4) damage to or loosening of hinges and latches,
    - (5) evidence of dropping or abuse.
  - (c) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connections.
  - (d) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
  - (e) A Microwave leakage check to verify compliance with the Federal performance standard should be performed on each oven prior to release to the owner.
-

---

# 1. Precaution

---

Follow these special safety precautions. Although the microwave oven is completely safe during ordinary use, repair work can be extremely hazardous due to possible exposure to microwave radiation, as well as potentially lethal high voltages and currents.

## 1-1 Safety precautions (⚠)

---

1. All repairs should be done in accordance with the procedures described in this manual. This product complies with Federal Performance Standard 21 CFR Subchapter J(DHHS).
  2. Microwave emission check should be performed prior to servicing if the oven is operative.
  3. If the oven operates with the door open :  
Instruct the user not to operate the oven and contact the manufacturer and the center for devices and radiological health immediately.
  4. Notify the Central Service Center if the microwave leakage exceeds  $5 \text{ mW/cm}^2$ .
  5. Check all grounds.
  6. Do not power the MWO from a "2-prong" AC cord. Be sure that all of the built-in protective devices are replaced. Restore any missing protective shields.
  7. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including: nonmetallic control knobs and compartment covers.
  8. Make sure that there are no cabinet openings through which people --particularly children --might insert objects and contact dangerous voltages. Examples: Lamp hole, ventilation slots.
  9. Inform the manufacturer of any oven found to have emission in excess of  $5 \text{ mW/cm}^2$  ,  
Make repairs to bring the unit into compliance at no cost to owner and try to determine cause.  
Instruct owner not to use oven until it has been brought into compliance.
- CENTRAL SERVICE CENTER**
10. Service technicians should remove their watches while repairing an MWO.
  11. To avoid any possible radiation hazard, replace parts in accordance with the wiring diagram. Also, use only the exact replacements for the following parts:  
Primary and secondary interlock switches, interlock monitor switch.
  12. If the fuse is blown by the Interlock Monitor Switch: Replace all of the following at the same time: Primary, door sensing switch and power relay, as well as the Interlock Monitor Switch. The correct adjustment of these switches is described elsewhere in this manual. Make sure that the fuse has the correct rating for the particular model being repaired.
  13. Design Alteration Warning:  
Use exact replacement parts only, i.e., only those that are specified in the drawings and parts lists of this manual. This is especially important for the Interlock switches, described above. Never alter or add to the mechanical or electrical design of the MWO. Any design changes or additions will void the manufacturer's warranty. Always unplug the unit's AC power cord from the AC power source before attempting to remove or reinstall any component or assembly.
  14. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.
  15. Some semiconductor ("solid state") devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs). Examples include integrated circuits and field -effect transistors. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground.
  16. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the positive lead; always remove the instrument's ground lead last.

## 1-2 Special Servicing Precautions (Continued)

17. When checking the continuity of the switches or transformer, always make sure that the power is OFF, and one of the lead wires is disconnected.
18. Components that are critical for safety are indicated in the circuit diagram by shading, ⚠ or ⚡ .
19. Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

## 1-3 Special High Voltage Precautions

1. High Voltage Warning  
Do not attempt to measure any of the high voltages --this includes the filament voltage of the magnetron. High voltage is present during any cook cycle.  
Before touching any components or wiring, always unplug the oven and discharge the high voltage capacitor (See Figure 1-1)
2. The high-voltage capacitor remains charged about 30 seconds after disconnection. Short the negative terminal of the high-voltage capacitor to the oven chassis. (Use a screwdriver.)
3. High voltage is maintained within specified limits by close-tolerance, safety-related components and adjustments. If the high voltage exceeds the specified limits, check each of the special components.

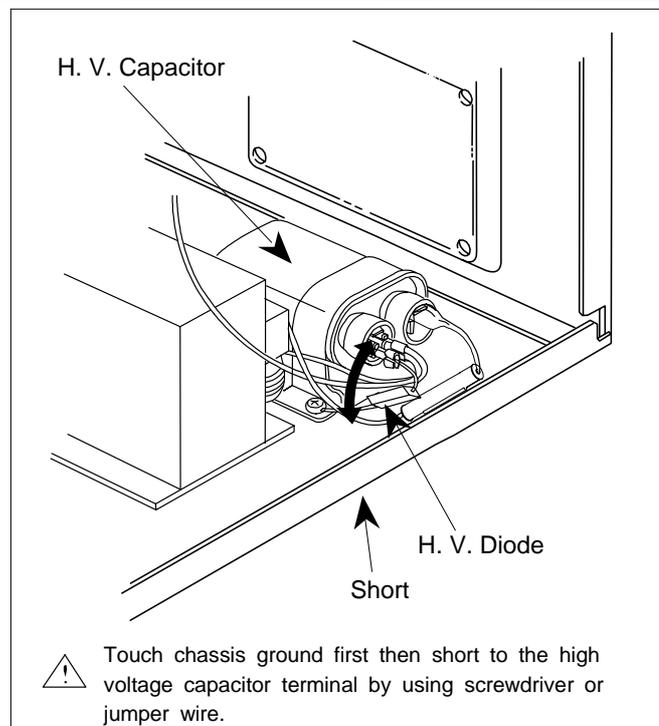


Fig. 1-1 Discharging High Voltage Capacitor

### PRECAUTION

There exists HIGH VOLTAGE ELECTRICITY with high current capabilities in the circuits of the HIGH VOLTAGE TRANSFORMER secondary and filament terminals. It is extremely dangerous to work on or near these circuits with the oven energized.  
DO NOT measure the voltage in the high voltage circuit including filament voltage of magnetron.

### PRECAUTION

Never touch any circuit wiring with your hand nor with uninsulated tool during operation.

### PRECAUTION

Servicemen should remove their watches whenever working close to or replacing the magnetron.

---

## 2. Specifications

---


### 2-1 Table of Specifications

---


TIMER	99 MINUTES 99SECONDS
POWER SOURCE	120V 60Hz, AC
POWER CONSUMPTION	MICROWAVE : 1,500W CONVECTION : 1600W
OUTPUT POWER	FROM 100 TO 1000W(10 LEVEL POWER) (IEC-705 TEST PROCEDURE)
OPERATING FREQUENCY	2,450MHz
MAGNETRON	OM75P(31)
COOLING METHOD	COOLING FAN MOTOR
OUTSIDE DIMENSIONS	625(W) x 390(H) x 575(D)mm
NET WEIGHT	26.0 kg
SHIPPING WEIGHT	28.0 kg

# 3. Operating Instructions

## 3-1 Control Panel

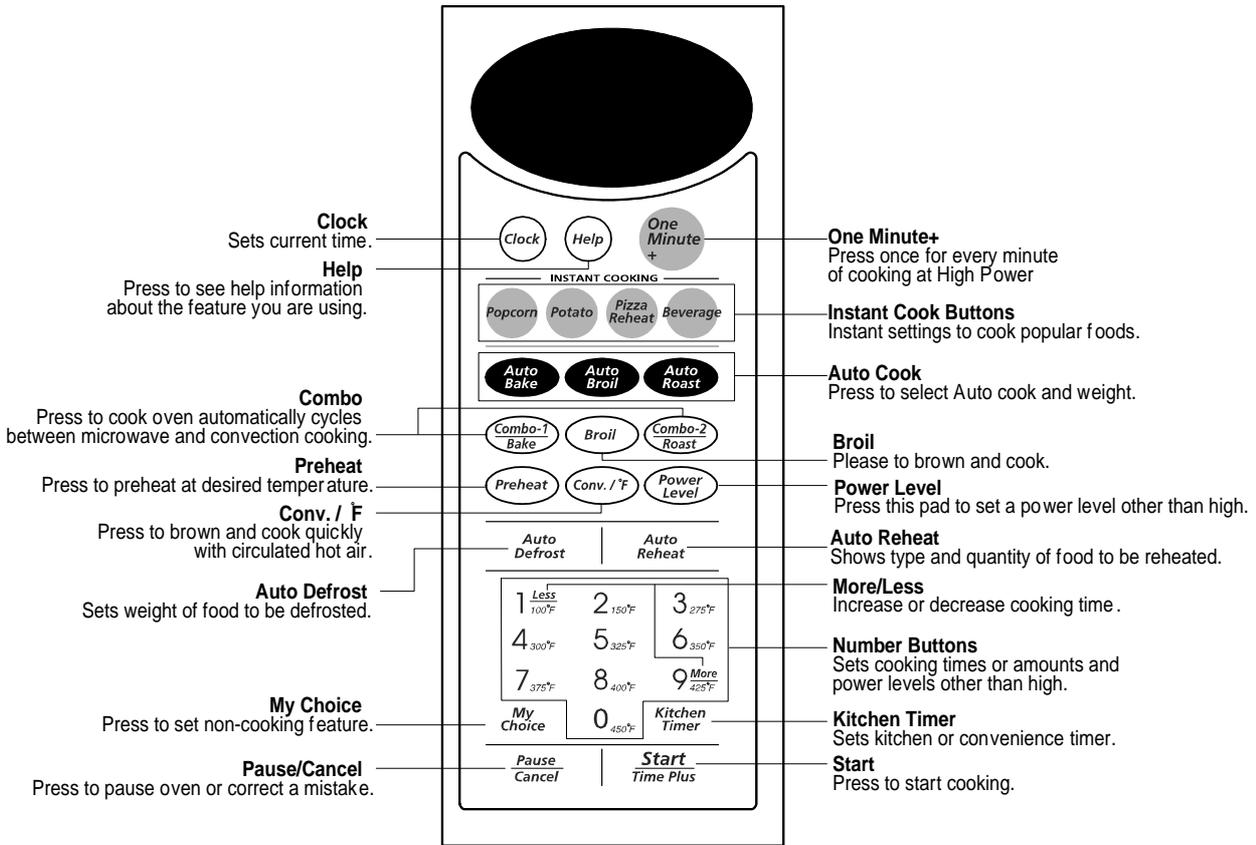

## 3-2 Features & External Views

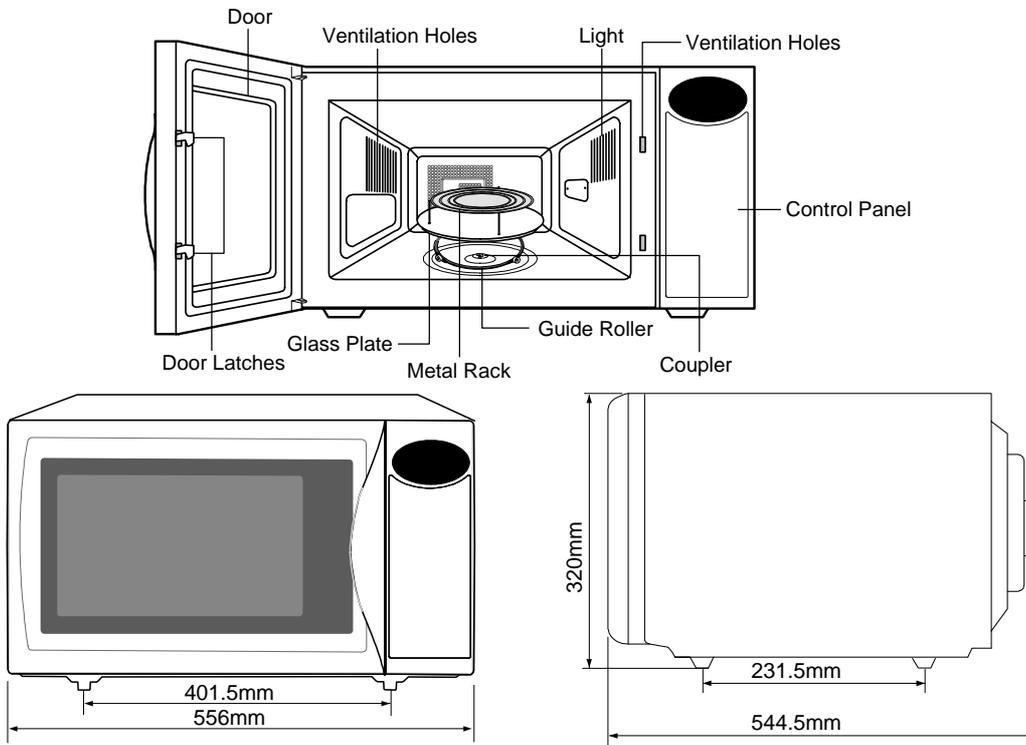

---

## 4. Disassembly and Reassembly


---

### 4-1 Replacement of Magnetron, Motor Assembly and Lamp

---

Remove the magnetron including the shield case, permanent magnet, choke coils and capacitors (all of which are contained in one assembly).

1. Disconnect all lead wires from the magnetron and lamp.
2. Remove the bracket mounting.
3. Remove the magnetron supporter.
4. Remove the air cover.
5. Remove screws securing the magnetron to the wave guide.
6. Take out the magnetron very carefully.
7. Remove screws from the back panel.
8. Take out the fan motor.
9. Remove the oven lamp by rotating to pull out from hole of air cover.

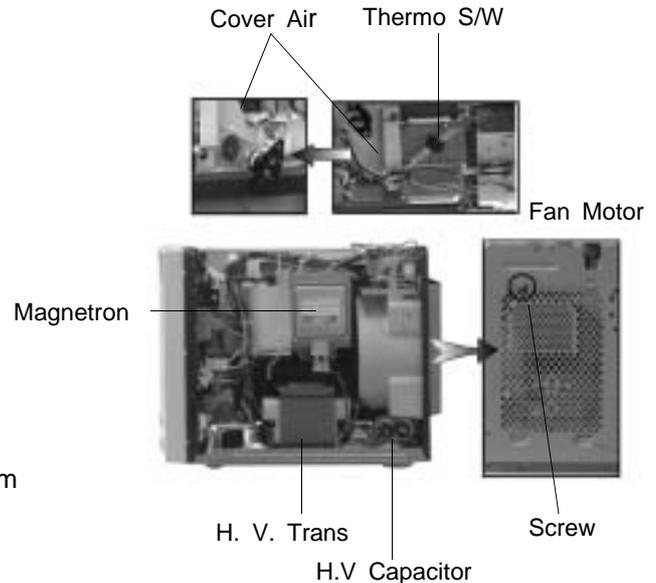

NOTE1: When removing the magnetron, make sure that its antenna does not hit any adjacent parts, or it may be damaged.

NOTE2: When replacing the magnetron, be sure to remount the magnetron gasket in the correct position and make sure the gasket is in good

### 4-2 Replacement of High Voltage Transformer

---

1. Discharge the high voltage capacitor.
2. Disconnect all the leads.
3. Remove the mounting bolts.
4. Reconnect the leads correctly and firmly.

#### **PRECAUTION**

Servicemen should remove their watches whenever working close to or replacing the magnetron.


#### **PRECAUTION**

There exists HIGH VOLTAGE ELECTRICITY with high current capabilities in the circuits of the HIGH VOLTAGE TRANSFORMER secondary and filament terminals. It is extremely dangerous to work on or near these circuits with the oven energized. DO NOT measure the voltage in the high voltage circuit including filament voltage of magnetron.

## 4-3 Replacement of Door Assembly


### 4-3-1 Removal of Door Assembly

securing the upper hinge and lower hinge.  
The remove door assembly.

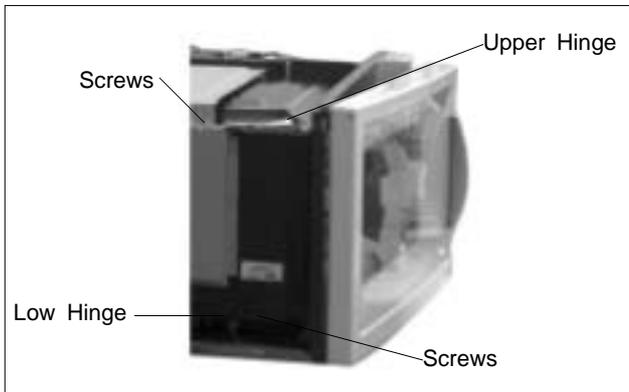


### 4-3-2 Removal of Door "C"

Insert flat screwdriver into the gap between Door "A" and Door "C" to remove Door "C". Be careful when handling Door "C" because it is fragile.

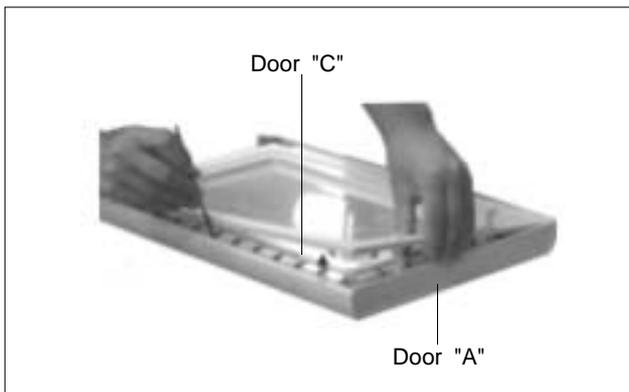


### 4-3-3 Removal of Door "E"

Following the procedure as shown in the figure, insert and bend a thin metal plate between Door "E" and Door "A" until you hear the 'tick' sound.  
1. Insertion depth of the thin metal plate should be 0.5mm or less.

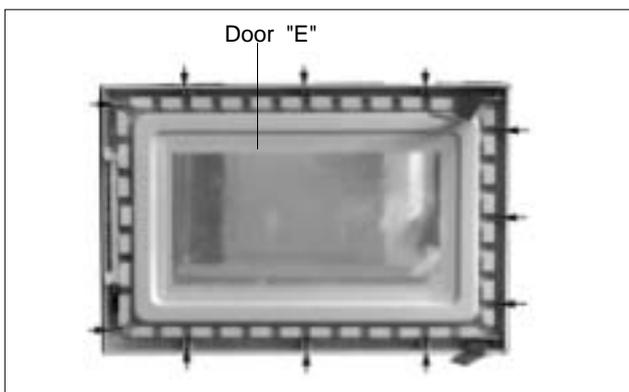


### 4-3-4 Removal of Key Door & Spring

Remove pin hinge from Door "E"  
Detach spring from Door "E" and key door.

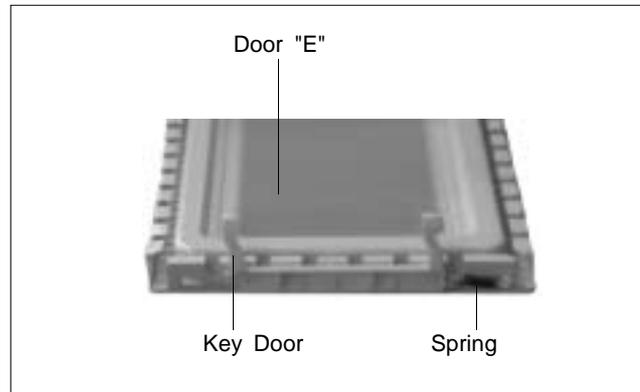

### 4-3-5 Removal of Screen-Door & Deco-Door

1. Remove Door "E" from Door "A"
2. Remove Door-Screen "B" and Deco Door.

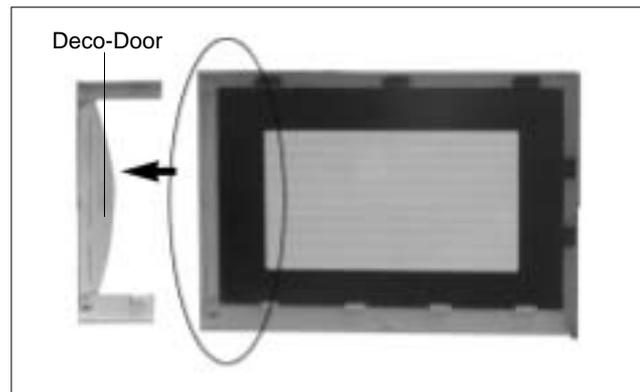

---

### 4-3-6 Reassembly Test

---

After replacement of defective component parts of the door, reassemble it and follow the instructions below for proper installation and adjustment so as to prevent an excessive microwave leakage.

1. When mounting the door to the oven, be sure to adjust the door parallel to the bottom line of the oven face plate by moving the upper hinge and lower hinge in the direction necessary for proper alignment.
2. Adjust so that the door has no play between the inner door surface and oven front surface. If the door assembly is not mounted properly, microwave energy may leak from the space between the door and oven.
3. Do microwave leakage test.

### 4-4 Replacement of Fuse


---

1. Disconnect the oven from the power source.
2. When 20A fuse blows out by the operation of interlock monitor switch failure, replace the primary interlock switch, door sensing switch, monitor switch and power relay.
3. When the above three switches operate properly, check if any other part such as the control circuit board, blower motor or high voltage transformer is defective.

### 4-5 Replacement of Drive Motor

---

1. Take out the glass tray, guide roller and coupler from cavity.
2. Turn the oven upside down to replace the drive motor.
3. Remove a screw securing the drive motor cover.
4. Disconnect all the lead wires from the drive motor.
5. Remove screws securing the drive motor to the cavity.
6. Remove the drive motor.
7. When replacing the drive motor, be sure to remount it in the correct position.
8. Connect all the leads to the drive motor.
9. Screw the drive motor cover to the base plate with a screw driver.

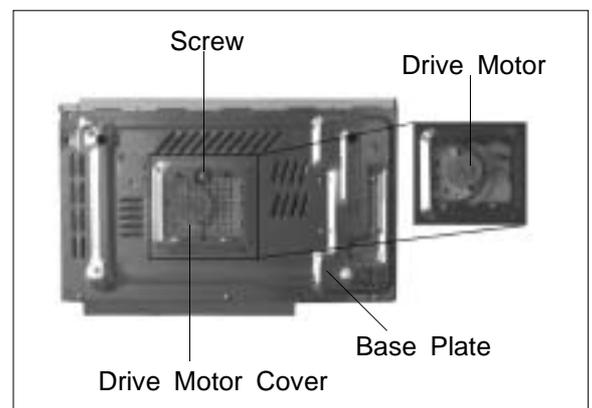


---

## 4-6 Replacement of Control Circuit Board

---

1. Be sure to discharge any static electricity from your body, and avoid touching the "touch control" circuitry.
2. Disconnect the connectors from the control circuit board.
3. Remove screws securing the control box assembly.
4. Lift up the control circuit board from right side and remove the hooks holding the control circuit board to the box assembly.

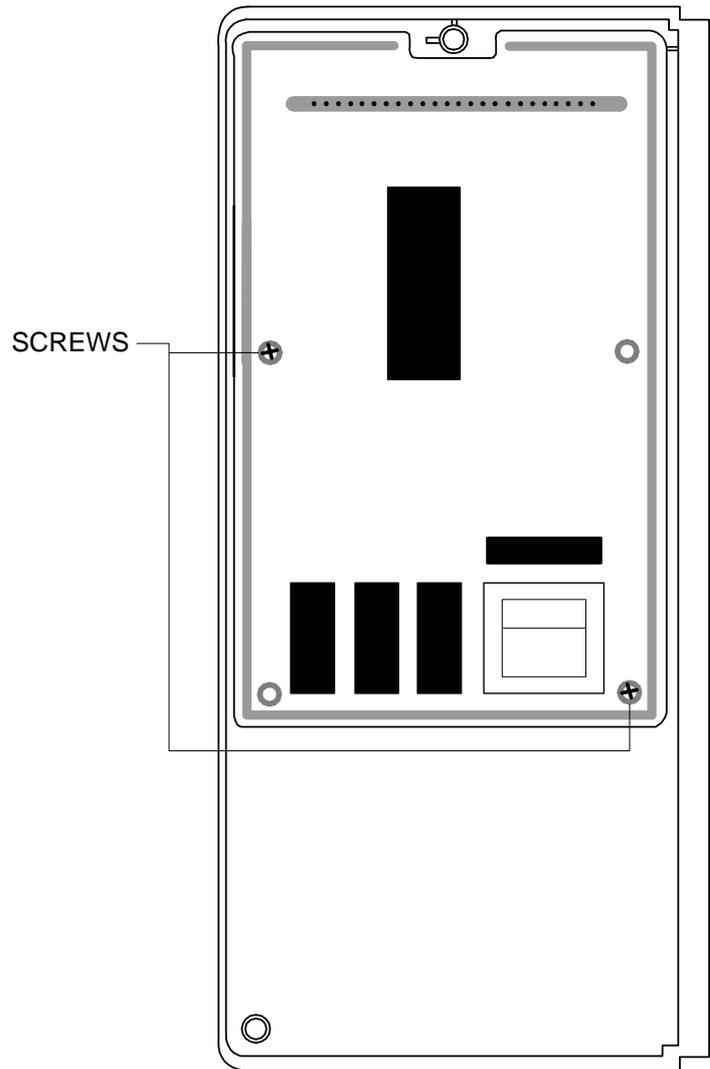

---

## 5. Alignment and Adjustments

---

### PRECAUTION

1. High voltage is present at the high voltage terminals during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.


### 5-1 High Voltage Transformer

---

1. Remove connectors from the transformer terminals and check continuity.
2. Normal resistance readings are as follows:

	SHV-U11KA
Secondary	$75\Omega \pm 10\%$
Filament	Shows Continuity
Primary	$0.30\Omega \pm 10\%$

(Room temperature = 20°C)

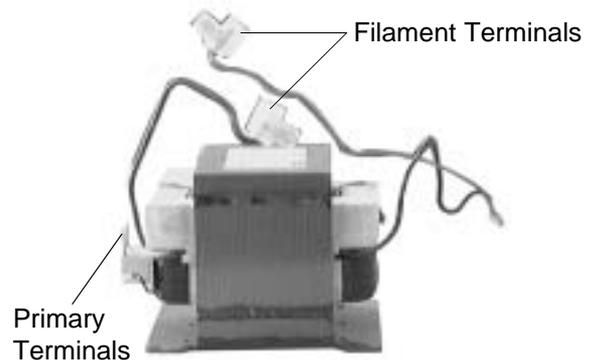

### 5-2 Low Voltage Transformer

---


1. The low voltage transformer is located on the Assy base plate.
2. Remove the low voltage transformer from the Assy base plate and check continuity.
3. Normal resistor reading is shown in the table.

Terminals	Resistance
1~2(Input)	250Ω.
3~4(Output)	9Ω..
5~6(Output)	1.0Ω.

### 5-3 Magnetron

---

1. Continuity checks can indicate only an open filament or a shorted magnetron. To diagnose an open filament or shorted magnetron :
2. Isolate the magnetron from the circuit by disconnecting its leads.
3. A continuity check across the magnetron filament terminals should indicate one ohm or less.
4. A continuity check between each filament terminal and magnetron case should read open.

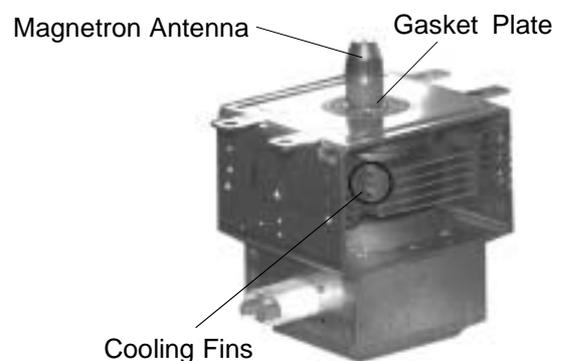

## 5-4 High Voltage Capacitor

1. Check continuity of the capacitor with the meter set at the highest resistance scale.
2. Once the capacitor is charged, a normal capacitor shows continuity for a short time, and then indicates  $9M\Omega$ .
3. A shorted capacitor will show continuous continuity.
4. An open capacitor will show constant  $9M\Omega$ .
5. Resistance between each terminal and chassis should read infinite.

## 5-5 High Voltage Diode

1. Isolate the diode from the circuit by disconnecting its leads.
2. With the ohm-meter set at the highest resistance scale, measure across the diode terminals. Reverse the meter leads and read the resistance. A meter with 6V, 9V or higher voltage batteries should be used to check the front-to back resistance of the diode (otherwise an infinite resistance may be read in both directions). The resistance of a normal diode will be infinite in one direction and several hundred  $K\Omega$  in the other direction.

## 5-6 Main Relay and Power Control Relay


1. The relays are located on the PCB Ass'y. Isolate them from the main circuit by disconnecting the leads.
2. Operate the microwave oven with a water load in the oven. Set the power level set to high.
3. Check continuity between terminals of the relays after the start pad is pressed.

## 5-7 Adjustment of Primary Switch, Door Sensing Switch and Monitor Switch

### Precaution

For continued protection against radiation hazard, replace parts in accordance with the wiring diagram and be sure to use the correct part number for the following switches: Primary and secondary interlock switches, and the interlock monitor switch (replace all together). Then follow the adjustment procedures below. After repair and adjustment, be sure to check the continuity of all interlock switches and the interlock monitor switch.

1. When mounting Primary switch and Interlock Monitor switch to Latch Body, consult the figure.
2. No specific adjustment during installation of Primary switch and Monitor switch to the latch body is necessary.
3. When mounting the Latch Body to the oven assembly, adjust the Latch Body by moving it so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the Latch Body to the oven assembly.
4. Reconnect to Monitor switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.
5. Confirm that the gap between the switch housing and the switch actuator is no more than 0.5mm when door is closed.
6. **Interlock Switch Replacement** - When replacing faulty switches, be sure switch mounting tabs are not bent, broken or otherwise deficient in their ability to secure the switches in place.

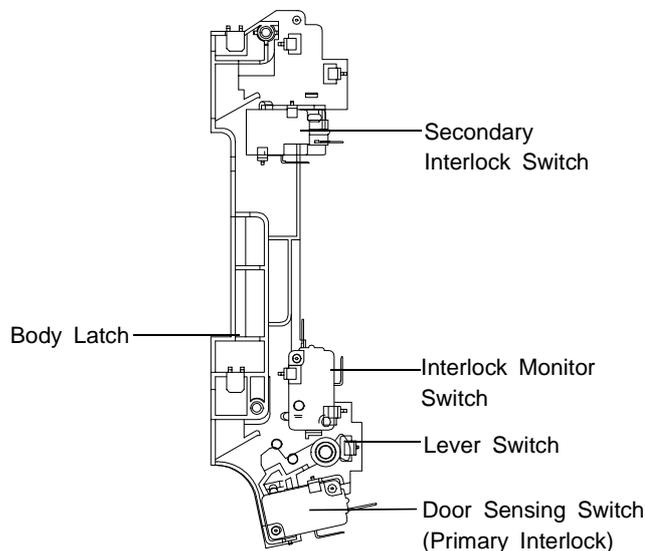

	Door Open	Door Closed
Primary switch	$\infty$	0
Monitor switch(COM-NC)	0	$\infty$
Door Sensing S/W	$\infty$	0

---

## 5-8 Output Power of Magnetron

---

**CAUTION  
MICROWAVE RADIATION**

PERSONNEL SHOULD NOT ALLOW EXPOSURE TO MICROWAVE RADIATION FROM MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

The output power of the magnetron can be measured by performing a water temperature rise test.

Equipment needed :

\* Two 1-liter cylindrical borosilicate glass vessel (Outside diameter 190 mm)

\* One glass thermometer with mercury column

NOTE: Check line voltage under load. Low voltage will lower the magnetron output. Make all temperature and time tests with accurate equipment.

1. Fill the one liter glass vessel with water.
2. Stir water in glass vessel with thermometer, and record glass vessel's temperature ("T1", 10±1°C).
3. After moving the water into another glass vessel, place it in the center of the cooking tray. Set the oven to high power and operate for 44 seconds exactly. (1.5 seconds included as a holding time of magnetron oscillation:)
4. When heating is finished, stir the water again with the thermometer and measure the temperature ("T2").
5. Subtract T1 from T2. This will give you the water temperature rise. ( $\Delta T$ )
6. The output power is obtained by the following formula;

$$\text{Output Power} = \frac{4.187 \times 1000 \times \Delta T + 0.88 \times Mc \times (T_2 - T_0)}{41}$$

41 : Heating Time (sec)

4.187 : Coefficient for Water

1000 : Water (cc)

$\Delta T$  : Temperature Rise (T1-T2)

Mc : Cylindrical borosilicate glass weight

To : Room Temperature

7. Normal temperature rise for this model is 9°C to 11°C at 'HIGH'.

NOTE 1: Variations or errors in the test procedure will cause a variance in the temperature rise.

Additional power test should be made if temperature rise is marginal.


NOTE 2: Output power in watts is computed by multiplying the temperature rise (step E) by a factor of 91 times the of centigrade temperature.

---

## 5-9 Procedure for Measurement of Microwave Energy Leakage

---

- 1) Pour  $275 \pm 15$ cc of  $20 \pm 5^\circ\text{C}$  ( $68 \pm 9^\circ\text{F}$ ) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
- 2) Start to operate the oven and measure the leakage by using a microwave energy survey meter.
- 3) Set survey meter with dual ranges to 2,450MHz.
- 4) When measuring the leakage, always use the 2 inch spacer cone with the probe. Hold the probe perpendicular to the cabinet door. Place the spacer cone of the probe on the door and/or cabinet door seam and move along the seam, the door viewing window and the exhaust openings moving the probe in a clockwise direction at a rate of 1 inch/sec. If the leakage testing of the cabinet door seam is taken near a corner of the door, keep the probe perpendicular to the areas making sure that the probe end at the base of the cone does not get closer than 5cm to any metal. If it gets closer than 5cm, erroneous readings may result.
- 5) Measured leakage must be less than  $4\text{mW}/\text{cm}^2$  after repair or adjustment.

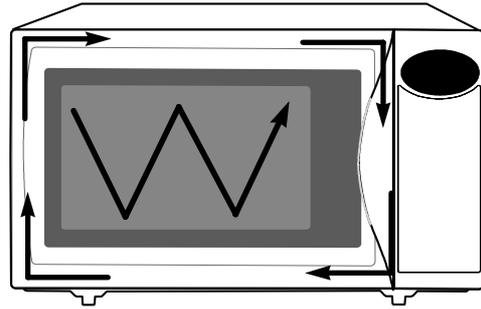

Maximum allowable leakage is  $5\text{mW}/\text{cm}^2$  .  
 $4\text{mW}/\text{cm}^2$  is used to allow for measurement and meter accuracy

---

## 5-10 Check for Microwave Leakage

---

1. Remove the outer panel.
2. Pour  $275 \pm 15$ cc of  $20 \pm 5^\circ\text{C}$  ( $68 \pm 9^\circ\text{F}$ ) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
3. Start the oven at the highest power level.
4. Set survey meter dual ranges to 2,450MHz.
5. Using the survey meter and spacer cone as described above, measure near the opening of magnetron, the surface of the air guide and the surface of the wave guide as shown in the following photo.( but avoid the high voltage components.) The reading should be less than  $4\text{mW}/\text{cm}^2$  .



**WARNING**  
AVOID THE HIGH VOLTAGE COMPONENTS

---

## 5-11 Note on Measurement

---

- 1) Do not exceed the limited scale.
- 2) The test probe must be held on the grip of the handle, otherwise a false reading may result when the operator's hand is between the handle and the probe.
- 3) When high leakage is suspected, do not move the probe horizontally along the oven surface; this may cause damage to the probe.
- 4) Follow the recommendation of the manufacturer of the microwave energy survey meter.

---

## 5-12 Leakage Measuring Procedure

---

### 5-12-1 Record keeping and notification after measurement

- 1) After adjustment and repair of a radiation preventing device, make a repair record for the measured values, and keep the data.
- 2) If the radiation leakage is more than  $4\text{mW}/\text{cm}^2$  after determining that all parts are in good condition, functioning properly and the identical parts are replaced as listed in this manual notify that fact to ;

### CENTRAL SERVICE CENTER

- 5-12-2 At least once a year have the microwave energy survey meter checked for accuracy by its manufacturer.

## 6. Troubleshooting

### PRECAUTION

1. CHECK GROUNDING BEFORE CHECKING FOR TROUBLE.
2. BE CAREFUL OF THE HIGH VOLTAGE CIRCUIT.
3. DISCHARGE THE HIGH VOLTAGE CAPACITOR.
4. WHEN CHECKING THE CONTINUITY OF THE SWITCHES OR TRANSFORMER, DISCONNECT ONE LEAD WIRE FROM THESE PARTS AND THEN CHECK CONTINUITY WITHOUT THE POWER SOURCE ON. TO DO OTHERWISE MAY RESULT IN A FALSE READING OR DAMAGE TO YOUR METER.
5. DO NOT TOUCH ANY PART OF THE CIRCUIT OR THE CONTROL CIRCUIT BOARD, SINCE STATIC DISCHARGE MAY DAMAGE IT.  
ALWAYS TOUCH GROUND WHILE WORKING ON IT TO DISCHARGE ANY STATIC CHARGE BUILT UP.

### 6-1 Electrical Malfunction

SYMPTOM	CAUSE	CORRECTIONS
Oven is dead. Fuse is OK. No display and no operation at all.	<ol style="list-style-type: none"> <li>1. Open or loose lead wire harness</li> <li>2. Open thermal cutout (Magnetron)</li> <li>3. Open low voltage transformer</li> <li>4. Defective Ass'y PCB</li> </ol>	<p>Check fan motor when thermal cutout is defective.</p> <p>Check Ass'y PCB when L.V.T is defective.</p>
No display and no operation at all. Fuse is blown.	<ol style="list-style-type: none"> <li>1. Shorted lead wire harness</li> <li>2. Defective primary latch switch (NOTE 1)</li> <li>3. Defective monitor switch (NOTE1)</li> <li>4. Shorted H.V.Capacitor</li> <li>5. Shorted H.V.Transformer (NOTE2)</li> </ol> <p>NOTE 1: All of these switches must be replaced at the same time. (refer to adjustment instructions) Check continuity of power relay contacts and if it has continuity, replace power relay also.</p> <p>NOTE 2: When H.V.Transformer is replaced, check diode and magnetron also.</p>	<p>Check adjustment of primary, interlock monitor, power relay, door sensing switch.</p>
Oven does not accept key input (Program)	<ol style="list-style-type: none"> <li>1. Key input is not in-Sequence</li> <li>2. Open or loose connection of membrane key pad to Ass'y PCB</li> <li>3. Shorted or open membrane panel</li> <li>4. Defective Ass'y PCB</li> </ol>	<p>Refer to operation procedure.</p> <p>Replace PCB main.</p>
Timer starts countdown but no microwave oscillation. (No heat while oven lamp and fan motor turn on.)	<ol style="list-style-type: none"> <li>1. Off-alignment of latch switches</li> <li>2. Open or loose connection of high voltage circuit especially magnetron filament circuit</li> </ol> <p>NOTE: Large contact resistance will bring lower magnetron filament voltage and cause magnetron to lower output and/or intermittent oscillation.</p> <ol style="list-style-type: none"> <li>3. Defective high voltage components H.V.Transformer H.V. Capacitor H.V.Diode, H.V.Fuse Magnetron</li> <li>4. Open or loose wiring of power relay</li> <li>5. Defective primary latch switch</li> <li>6. Defective power relay or Ass'y PCB</li> </ol>	<p>Adjust door and latch switches.</p> <p>Check high voltage component according to component test procedure and replace if it is defective.</p> <p>Replace PCB main.</p>

## 6-1 Electrical Malfunction(continued)


SYMPTOM	CAUSE	CORRECTIONS
Oven lamp and fan motor turn on	<ol style="list-style-type: none"> <li>1. Misadjustment or loose wiring of primary latch switch</li> <li>2. Defective primary latch switch</li> </ol>	Adjust door and latch switches.
Oven can program but timer does not start.	<ol style="list-style-type: none"> <li>1. Open or loose wiring of secondary interlock switch</li> <li>2. Off-alignment of primary interlock</li> <li>3. Defective secondary interlock S/W</li> </ol>	Adjust door and interlock switches.
Microwave output is low;. Oven takes longer time to cook food.	<ol style="list-style-type: none"> <li>1. Decrease in power source voltage.</li> <li>2. Open or loose wiring of magnetron filament circuit. (Intermittent oscillation))</li> <li>3. Aging of magnetron</li> </ol>	Consult electrician.
Fan motor turns on when plugged in	Loose wiring of door sensing switch	Check wire of door sensing switch.
Oven does not operate and return to the plugged in mode.	Defective Ass'y PCB	Replace PCB main.
Loud buzzing noise can be heard.	<ol style="list-style-type: none"> <li>1. Loose fan and fan motor</li> <li>2. Loose screws on H.V.Transformer</li> <li>3. Shorted H.V.Diode</li> </ol>	Tighten screws of fan motor. Tighten screws of H.V.Transformer. Replace H.V.Diode.
Turntable motor does not rotate.	<ol style="list-style-type: none"> <li>1. Open or loose wiring of turntable motor.</li> <li>2. Defective turntable motor.</li> </ol>	Replace turntable motor.
Oven stops operation during cooking	<ol style="list-style-type: none"> <li>1. Open or loose wiring of primary interlock switch</li> <li>2. Operation of thermal cutout(Magnetron)</li> </ol>	Adjust door and latch switches.
Sparks	<ol style="list-style-type: none"> <li>1. Metallic ware or cooking dishes touching on the oven wall.</li> <li>2. Ceramic ware trimmed with gold or silver powder also causes sparks.</li> </ol>	Inform the customer. Do not use any type of cookware with metallic trimming.
Uneven cooking	Uneven intensity of microwave due to its characteristics.	Wrap thinner parts of the food with aluminum foil. Use plastic wrap or cover with a lid. Stir once or twice while cooking foods such as soup, cocoa, or milk.
Noise from the turntable motor when it starts to operate.	Noise may result from the motor.	Replace turntable motor.



## 7-2 Main Parts List S.N.A : SERVICE NOT AVAILABLE


No.	Code No.	Description	Specification	Q'ty	Remark
MB01	DE96-00120F	ASSY BODY LATCH	MW880BKA/XAA,HANDLE ALL1	1	
MB02	3405-001033	SWITCH-MICRO	125/250VAC,16A,200GF,SPST-N	1	MONITOR
MB03	3405-001034	SWITCH-MICRO	125/250VAC,16A,200GF,SPST-N	2	DOOR,PRI
MB041	DE66-00093A	LEVER-SWITCH(A)	NC2000,PP-TH53,-,-,-,N	1	
MB042	DE66-00094A	LEVER-SWITCH(B)	NC2000,PP-TH53,-,-,-,N	1	
MB05	DE72-00137A	BODY-LATCH	NC2000(0.6/0.8/1.2),PP,-,-,-,	1	
MB10	DE66-00117A	LATCH-STOPPER	MW1480STA,PP,-,-,-,-,-	1	
MC01	-	ASSY CONTROL-BOX	120V60HZ,MC1015WB/XAA,P	1	S.N.A
MD01	DE94-00644F	ASSY DOOR	MC1015WB,-,CONVECTION	1	
MM01	DE70-00302M	PANEL-OUTER	MC1015WB,SECC,T0.6,W360,L112	1	
MM03	DE96-00221A	ASSY-WIRE HARNESS-A	MC1015WB/XAA,120V60H	1	
MM06	DE31-00001G	ASSY-MOTOR FAN	SMF-789UA2,120V60HZ,2650R	1	
MM07	DE96-00222A	ASSY-POWER CORD	MC1015WB,120V60HZ,AWG14,	1	
MM08	OM75P(31)ESS	ASSY-MAGNETRON	OM75P(31)ESS	1	
MM09	DE71-60016D	COVER-AIR	CK95,NYLYN#66(TEFRON523),-,-,-	1	
MM10	4713-001012	LAMP-INCANDESCENT	130V,-,40W,ORG,B/L,-,2	1	
MM14	DE26-00061B	TRANS-H.V	SHV-U11KA_R,120V,60HZ,2300V/3.	1	
MM16	DE71-00015A	COVER-CEILING	CE2933,-,T0.3,W114.2,L121.	1	
MM17	DE47-20009A	THERMOSTAT	PW2N-520PB,160/60,250V/7.5A,H	1	
MM18	DE74-20015G	TRAY-COOKING	-,T6,-,-	1	
MM19	DE92-90189U	ASSY-GUIDE ROLLER	1.0CUFT(PPS)15.5,-,-,-	1	
MM20	DE67-60081A	COUPLER	PPS,-,-,BROWN,3RD-1.0/1.3,-	1	
MM22	DE31-10104A	MOTOR SYNCHRONOUS	M2CK29Z709-H,120V60HZ,	1	
MM27	DE61-40065A	FOOT	-,PP,T2x22x17mm,BLK,-,-,-	4	
MM28	DE80-10001R	BASE-PLATE	3RD(1.0-NEW),SGCC,T0.8,W345,L	1	
MM29	2501-001016	C-OIL	950nF,2.1KV,BK,35x54x80,20mm	1	
MM30	DE61-50106A	BRACKET-HVC	-,SECC,T0.8,W31,L125.8,-,-	1	
MM31	DE91-70063A	ASSY-HVD	V2M6,PI9.0,0.05MT,-,-	1	
MM34	3602-001025	FUSE-HOLDER	300V,30A,20mohm	1	
MM35	DE32-10013B	SENSOR-THERMISTOR	PT-312-K2,MC1015WB,LON	1	
MM42	DE39-00220A	WIRE HARNESS-B	MC7698W/XAA,-,-,-,-,-,-	1	
MM52	DE63-90035H	CUSHION-RUBBER	-,DFA20,T2,W190,L200,-,-	1	
MM53	DE64-00131C	FILM-LAMP	-,MC1015WB/BB,PET,T0.11,W70,L1	1	
MM55	3601-001198	FUSE-CARTRIDGE	250V,20A,SLOW-BLOW,CERAMIC		
MM56	DE92-90555D	ASSY-COVER ADIA(R)	C100,CONV,-,-	1	
MM581	DE71-60459B	COVER-ADIABATIC(L)	NC2000(1.0CU.FT),SECC	1	
MM59	DE71-60448D	COVER-BACK	MC1015WB/XAA,ALCOAT,T0.6,-,-,	1	
MM64	DE97-00136B	ASSY-WIRE RACK	CK95,LOW-RACK,-,-,-,-	1	
MM64	DE97-00136E	ASSY-WIRE RACK	MG104WA,114,FOOT,VE-TYPE	1	
MM65	DE72-60035R	GUIDE-AIR	CK135,SECC,T0.5,-,-,-	1	
MM67	DE61-50565A	BRACKET-UPPER	-,SECC,T0.5,W362,L294,-,-	1	
MM71	DE61-50490A	BRACKET-TCO	-,SECC1,T0.6,34,58,-,-	1	
MM73	-	ASSY-CASING	MC1015WB,120V60HZ,1580W,-	1	S.N.A
MM93	DE60-60025A	PIN-FOOT	PP-JI350,BLK,-,-,-,-,-	4	

## 7-3 Door Parts List

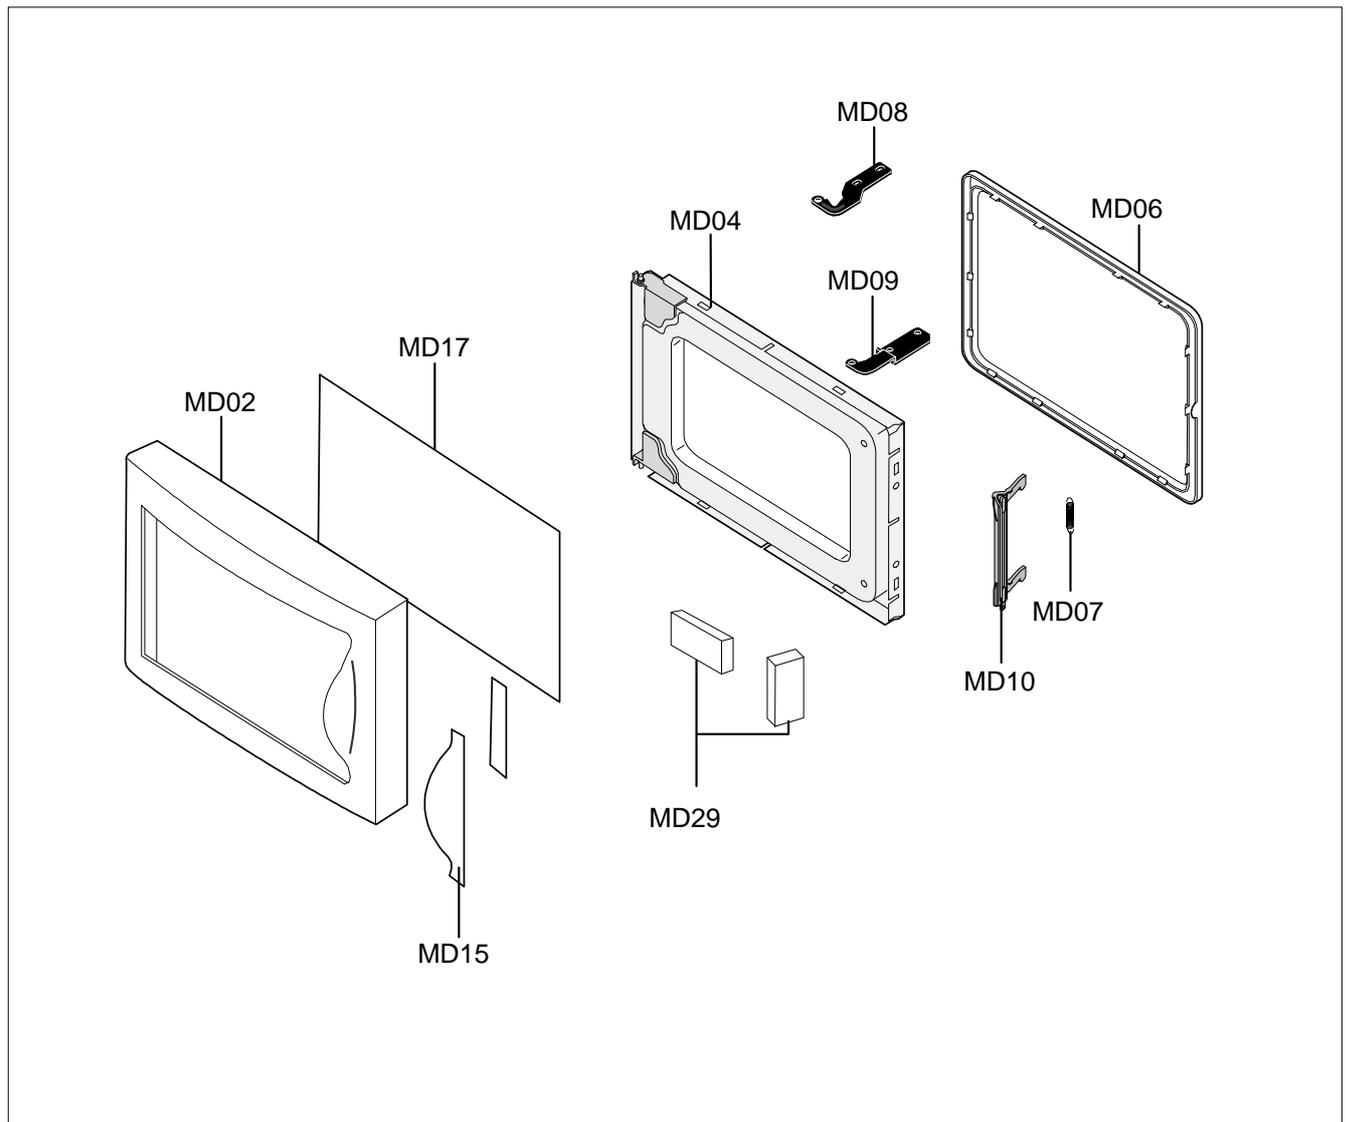


No.	Code No.	Description	Specification	Q'ty	Remark
MD02	DE64-40319A	DOOR-A	CK95,PC,-,-,-,-,WHT,-	1	
MD04	DE94-00075H	ASSY DOOR-E(SEALANT)	C100,SEALANT,3RD-1.	1	
MD06	DE64-40012C	DOOR-C	CK95,PBT,-,-,-,-,BLK,-	1	
MD07	DE61-00199A	SPRING-KEY	M1977,HSWR,D6,-,-,25 1/4,25 1	1	
MD08	DE61-80002A	HINGE-UPPER	WHT,SHV-745CC1,SSEC,T2.3,26,	1	
MD09	DE61-80003A	HINGE-LOWER	WHT,TN-5630T,SSEC,T2.3,26,77	1	
MD10	DE64-00264B	KEY-DOOR	MC1015WB/BB,GLASS(GLASS0%),BLK,	1	
MD15	DE64-90160A	DECORATION-DOOR	-,Y745STC,S7A77,-,-,-,-,	1	
MD17	DE67-20184K	SCREEN-DOOR(B)	-,CK920T,TEMP GLASS,T3.2,	1	
MD29	DE63-00024B	CUSHION-SCREEN	C100,CR,T2.0,W12,L150,BLK	2	

## 7-4 Control Parts List

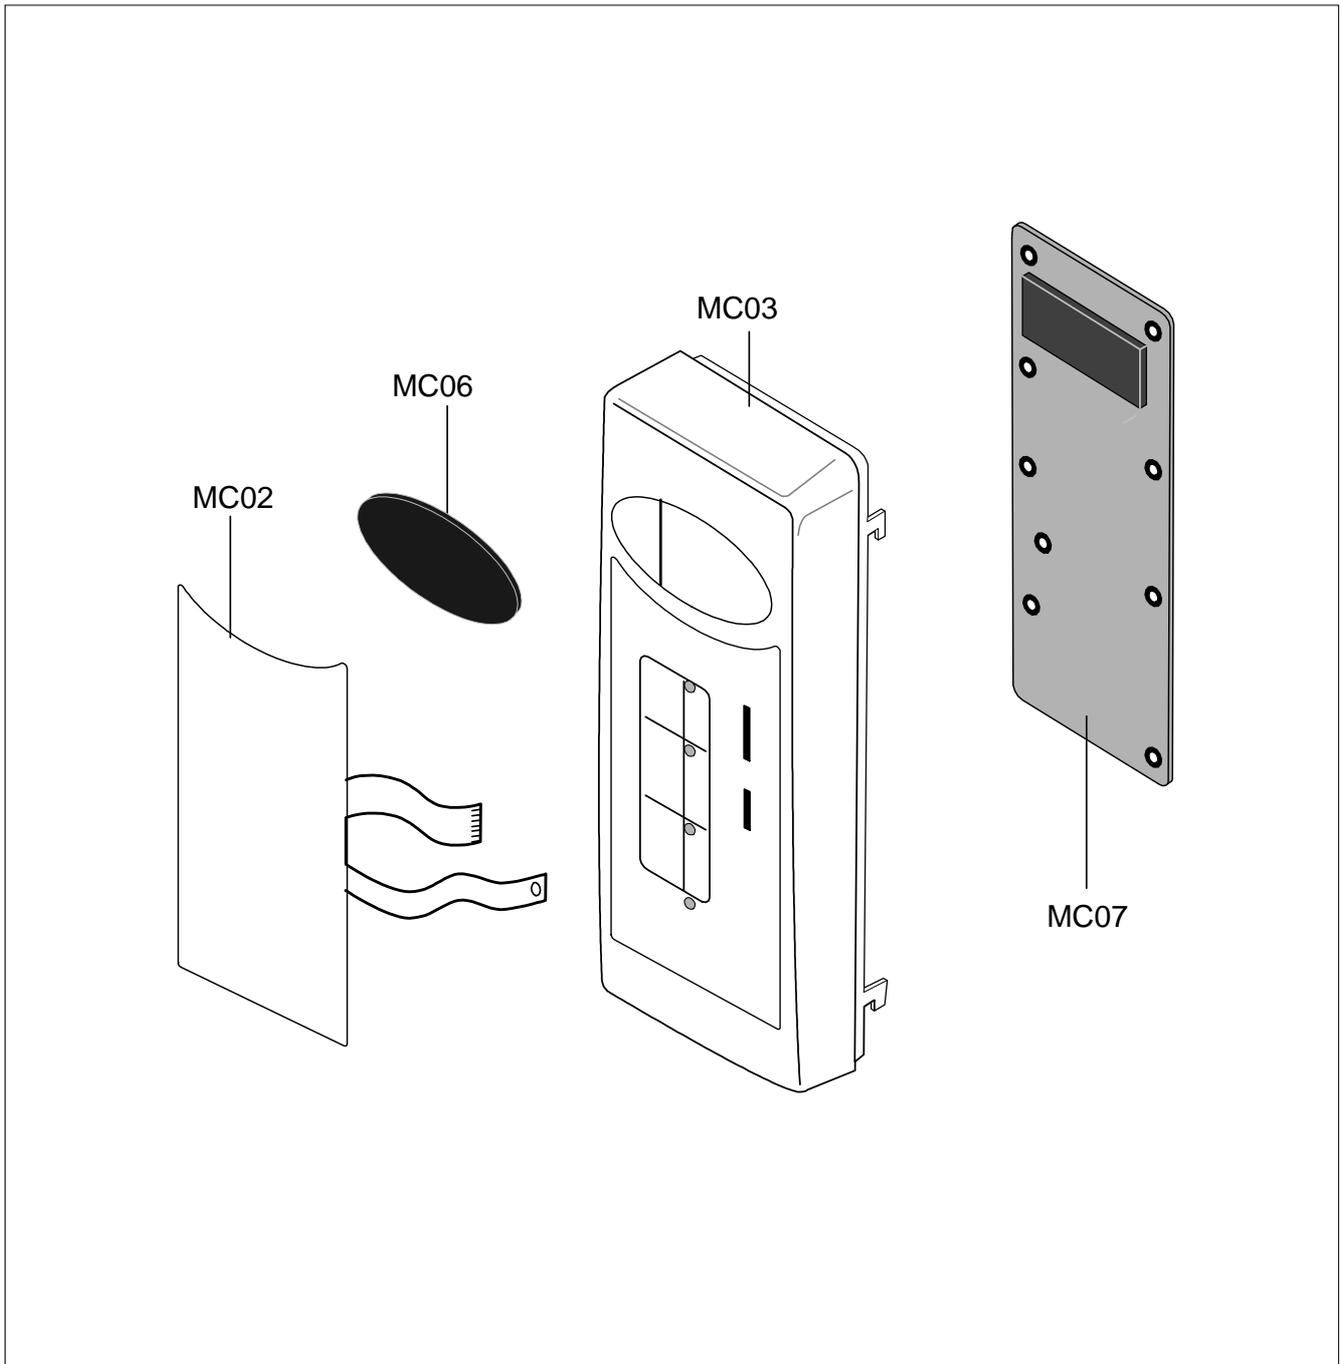

No.	Code No.	Description	Specification	Q'ty	Remark
MC02	DE34-00127A	SWITCH MEMBRANE	MC1015WB/XAA,2-TAIL,W90*	1	
MC03	DE64-00707C	CONTROL-PANEL	MC1015,PC(V-0),WHT,-,-,-,-	1	
MC06	DE67-40173B	WINDOW-DISPLAY	RE-MF70,SAN-20%(CR5381G01	1	
MC07	RA-MC5694-05	ASSY PCB PARTS	MC1015WB/XAA,120V60HZ	1	

## 7-5 Casing Parts List

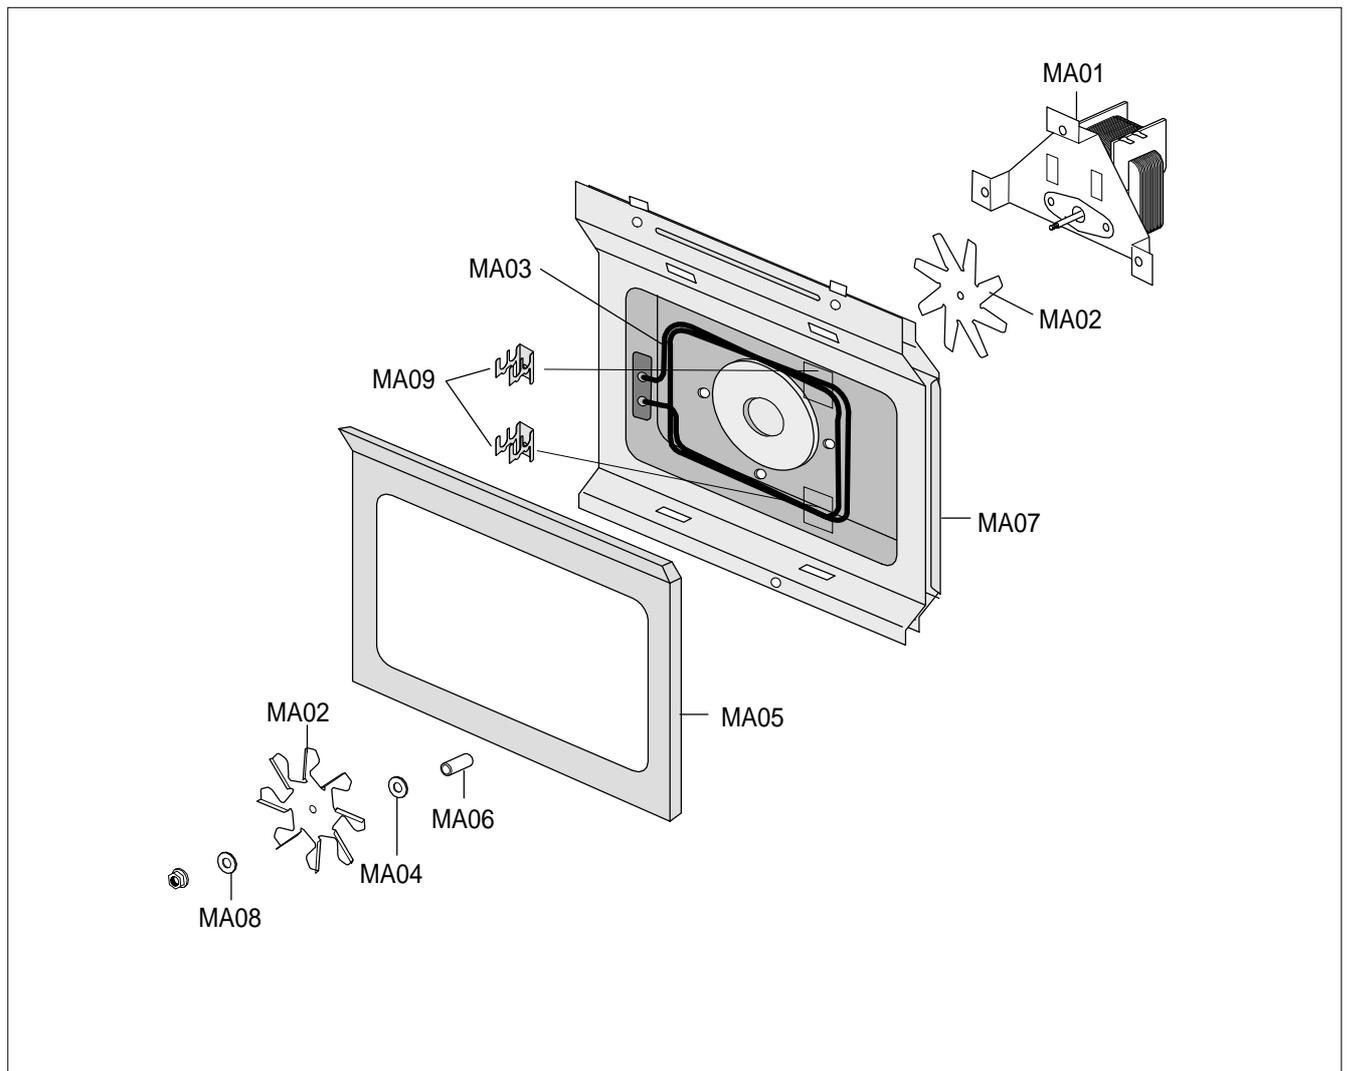


No.	Code No.	Description	Specification	Q'ty	Remark
MA01	DE31-10171B	MOTOR-CONVECTION	SHC-5694UA,120V60HZ,-,3	1	
MA02	DE31-90019A	BLADE-FAN	SECC,T0.6,-,-,-,-	1	
MA02	DE31-90020A	BLADE-FAN	ALSTAR,T0.6,W250,L250,-,-,-	1	
MA03	DE47-70077C	HEATER	SHC-5694U1,-,-,1580W,-,120V,-,-,-	1	
MA04	DE60-40026B	WASHER-PLAIN	ID5.5,OD12,T1.0,SBC1,ZNC3,-	1	
MA05	DE62-00098B	ADIABATIC-CASING	-,T8,W245,L336.8,CK95,-	1	
MA06	DE72-30016A	BUSH-MOTOR	-,MSWR3,L11.2,D5.6,RE-1300,-,	1	
MA07	DE92-90487A	ASSY-COVER CASING	CE115K,230V50HZ,-,-,-,	1	
MA08	DE60-40014B	WASHER-C MOTOR	M16,T1.0,SECC,ZNC3,-,-,-,	1	
MA09	DE61-50484A	BRACKET-HEATER	-,STS430,T0.8,W27.2,L26,C	2	

## 7-6 Standard Parts List

Code No.	Description	Specification	Q'ty	Remark
DE60-20063A	BOLT-FLANGE	M4,10,ZPC3,YEL,MSWR,-,-,-,-	4	HING-L/U
DE60-30016A	NUT-FLANGE	M4,MSWR10,-,-,-,-,-,-,-	1	SENSOR
DE60-30016B	NUT-FLANGE	M4,MSWR10,FEFN,-,-,-,-,-,-	3	-
DE60-10082H	SCREW-A	-,-,-,-,2S-4X12,TOOTHED,-,-,-,-	5	P-OUTER
DE60-10018A	SCREW-ASSY MACHINE	-,WS,MSWR10,SN1,PH,M4X0.7P,-,8,-,-	2	B-EARTH
DE60-10098A	SCREW-ASSY TAP TITE	-,GLD,SWRCH18A,ZPC2,PH,TC,-,M4X8,WT,-	2	M-DRIVE
DE60-10098A	SCREW-ASSY TAP TITE	-,GLD,SWRCH18A,ZPC2,PH,TC,-,M4X8,WT,-	1	HVD
DE60-10052A	SCREW-TAP PH	-,-,FEFZY,-,PH,M4,-,L8,-,-	2	A-A-RIGHT
DE60-10053A	SCREW-TAP PH	-,-,FEFZY,-,PH,M4,-,L10,-,-	1	H/FUSE
DE60-10045A	SCREW-TAP PH	-,-,FEFZY,-,PH,M3,-,L6,-,-	1	-
DE60-10088A	SCREW-TAP PH	-,-,FEFZY,PLAIN,PH,M3,-,L8,-,-	2	-
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	2	A-A-LEFT
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	4	A-C-BACK
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	3	A-CASING
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	1	A-THERMO-G
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	1	B-A-GUIDE
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	2	B-LATCH
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	1	B-UPPER
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	1	C-AIR
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	2	C-BOX
DE60-10070A	SCREW-TAP TH	-,-,FEFZY,2-SLOT,TH,M4,-,L12,-,-	2	M-FAN
DE60-10122A	SCREW-TAP TH	-,-,FE,FN,TAP,TH,-,2-4X8,-,-	2	C-CEILING
DE60-10122A	SCREW-TAP TH	-,-,FE,FN,TAP,TH,-,2-4X8,-,-	3	B-C-MOTOR
DE60-10122A	SCREW-TAP TH	-,-,FE,FN,TAP,TH,-,2-4X8,-,-	2	BKT-HEATER
DE60-10122A	SCREW-TAP TH	-,-,FE,FN,TAP,TH,-,2-4X8,-,-	4	CV-CAS
DE60-10012A	SCREW-TAP TITE	-,SWR10,M4,L10,TH,+,-,3,ZPC2,-	1	A-P-CORD
DE60-10012A	SCREW-TAP TITE	-,SWR10,M4,L10,TH,+,-,3,ZPC2,-	3	B-PLATE
DE60-10012A	SCREW-TAP TITE	-,SWR10,M4,L10,TH,+,-,3,ZPC2,-	1	C-B-EARTH
DE60-10012A	SCREW-TAP TITE	-,SWR10,M4,L10,TH,+,-,3,ZPC2,-	1	-
DE60-10034A	SCREW-TH	-,-,L10,STS304,TH,+,-,M4,-,-	1	SENSOR
DE60-10080B	SCREW-WASHER	-,2S,SWRCH18A,ZP2,PH,PI5,-,L10,-,-	4	MAGNETRON
DE60-10080B	SCREW-WASHER	-,2S,SWRCH18A,ZP2,PH,PI5,-,L10,-,-	4	TRANS-HV

# 8. P.C.B Diagrams

## 8-1 P.C.B Diagrams

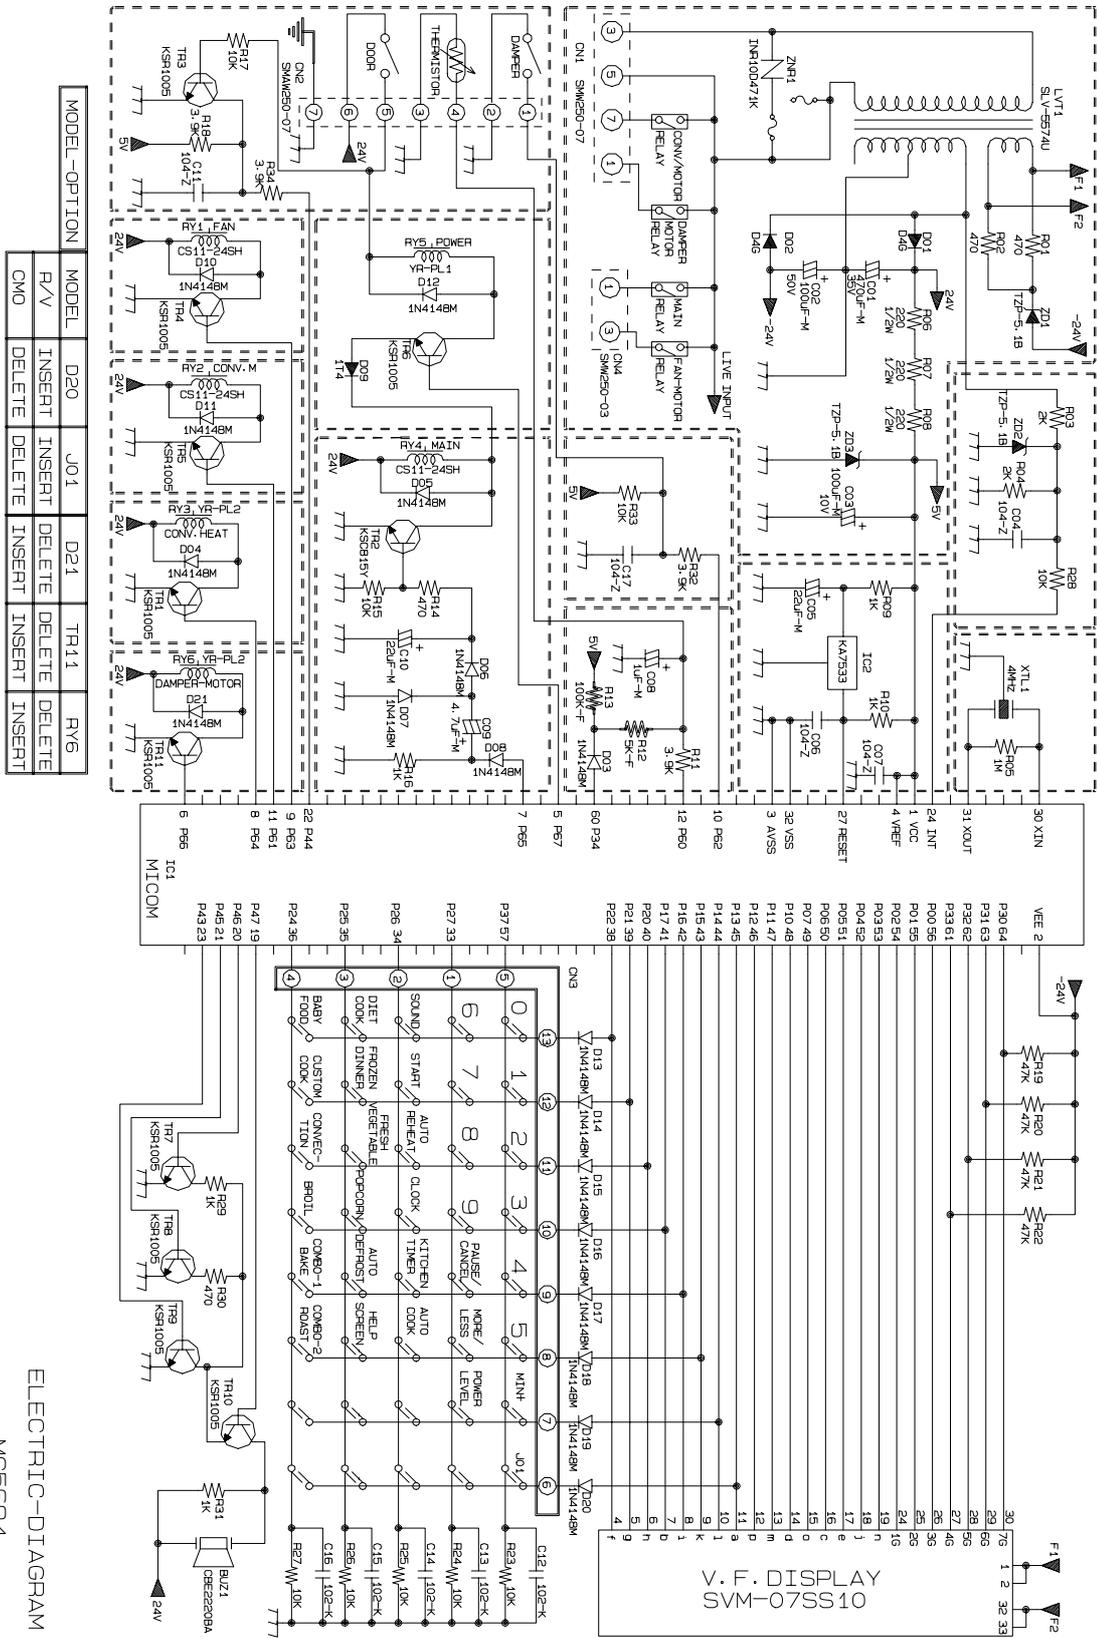


ELECTRIC-DIAGRAM  
MOS694

## 8-2 P.C.B Parts List

Code No.	Description	Specification	Q'ty	Remark
3501-001015	RELAY-POWER	24V,21.8mA,16A,1FormA,20mS,10m	2	RY3,RY5
3501-001050	RELAY-MINIATURE	24VDC,200mW,5A,1FormA,10mS,5mS	3	RY1,RY2,RY4
3708-000528	CONNECTOR-FPC/FFC/PIC	13P,2.54mm,STRAIGHT,SN	1	CN3
DE07-10035A	VF DISPLAY	SVM-07SS10,SEA,-,-,-	1	DSP1
DE09-30708A	IC MICOM	M38127ECSP,OTP,3RD MODEL,8BIT,	1	IC1
DE26-20144A	TRANS-L.V	SLV-5574U,120V,60HZ,AC17V/2.7V	1	LVT1
DE61-90164A	HOLDER-DIGITRON	BLK,NYLON#66,-,BLK,MW4370W,-,MW4370W	1	DSP1
0401-001002	DIODE-SWITCHING	1N4148M,100V,200mA,DO-34,TP	17	D03~D08,D10~D20
0402-001103	DIODE-RECTIFIER	1T4,400V,1A,TS-1,TP	3	D01,D02,D09
0403-000355	DIODE-ZENER	UZ5.1BSB,4.97-5.18V,500MW,DO-35,TP	3	ZD1,ZD2,ZD3
0501-000389	TR-SMALL SIGNAL	KSC815,NPN,400mW,TO-92,TP,120-240	1	TR2
0504-001045	TR-DIGITAL	KRC119M,NPN,400MW,4.7K/10K,TO-92M,TP	9	TR1,TR3~TR10
1405-000001	VARISTOR	470V,1250A,14x7.5mm,TP	1	ZNR1
2001-000290	R-CARBON	10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	9	R15,R17,R23~R28,R33
2001-000429	R-CARBON	1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	5	R09,R10,R16,R29,R31
2001-000435	R-CARBON	1MOHM,5%,1/8W,AA,TP,1.8X3.2MM	1	R05
2001-000577	R-CARBON	2KOHM,5%,1/8W,AA,TP,1.8X3.2MM	2	R03,R04
2001-000613	R-CARBON	3.9KOHM,5%,1/8W,AA,TP,1.8X3.2MM	4	R11,R18,R32,R34
2001-000780	R-CARBON	470OHM,5%,1/8W,AA,TP,1.8X3.2MM	4	R01,R02,R14,R30
2001-000786	R-CARBON	47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	4	R19~R22
2001-001107	R-CARBON(S)	220ohm,5%,1/2W,AA,TP,2.4x6.4mm	3	R06~R08
2004-000195	R-METAL	100Kohm,1%,1/8W,AA,TP,1.8x3.2m	1	R13
2004-001118	R-METAL	5Kohm,1%,1/4W,AA,TP,2.4x6.4mm	1	R12
2202-000173	C-CERAMIC,MLC-AXIAL	1nF,10%,50V,Y5P,TP,1.9x3.5,-	5	C12~C16
2202-002037	C-CERAMIC,MLC-AXIAL	100nF,80-20%,50V,Y5V,TP,2.2x3.	5	C04,C06,C07,C11,C17
2401-000244	C-AL	100uF,20%,10V,GP,TP,6.3x7,5	1	C03
2401-000360	C-AL	100uF,20%,50V,GP,TP,8x11.5,5	1	C02
2401-000598	C-AL	1uF,20%,50V,GP,TP,4x7,5	1	C08
2401-000911	C-AL	22uF,20%,16V,GP,TP,5x7,5	2	C05,C10
2401-002075	C-AL	4.7uF,20%,50V,GP,TP,5x11,5	1	C09
2401-002289	C-AL	470uF,20%,35V,WT,TP,10x20,5	1	C01
2802-000161	RESONATOR-CERAMIC	4MHz,0.5%,TP,10.0x5.0x7.5mm	1	XTL1
3711-001082	CONNECTOR-HEADER	BOX,7P,1R,2.5mm,STRAIGHT,SN	1	CN2
3711-004143	CONNECTOR-HEADER	BOX,2P/3P,1R,5mm/2.5mm,STRAIGH	1	CN4
3711-004200	CONNECTOR-HEADER	BOX,5P/7P,1R,2.5MM,STRAIGHT,SN	1	CN1
DE13-20009A	IC	KA7533,DIP,-,-,-,-,-	1	IC2
DE30-20016A	BUZZER	CBE2220BA,STICK,-,-,-,-,-,-,-	1	BUZ1
DE39-60001A	WIRE-SO COPPER	,PI0.6,SN,T,52MM TAPING_WIRE,	18	J01~J18
DE60-60012A	PIN-EYELET	ID2.1,OD2.5,L3.0,SN,BSP,T0.25,	5	EYE1~EYE5

# 9. Schematic Diagrams

## 9-1 Schematic Diagrams

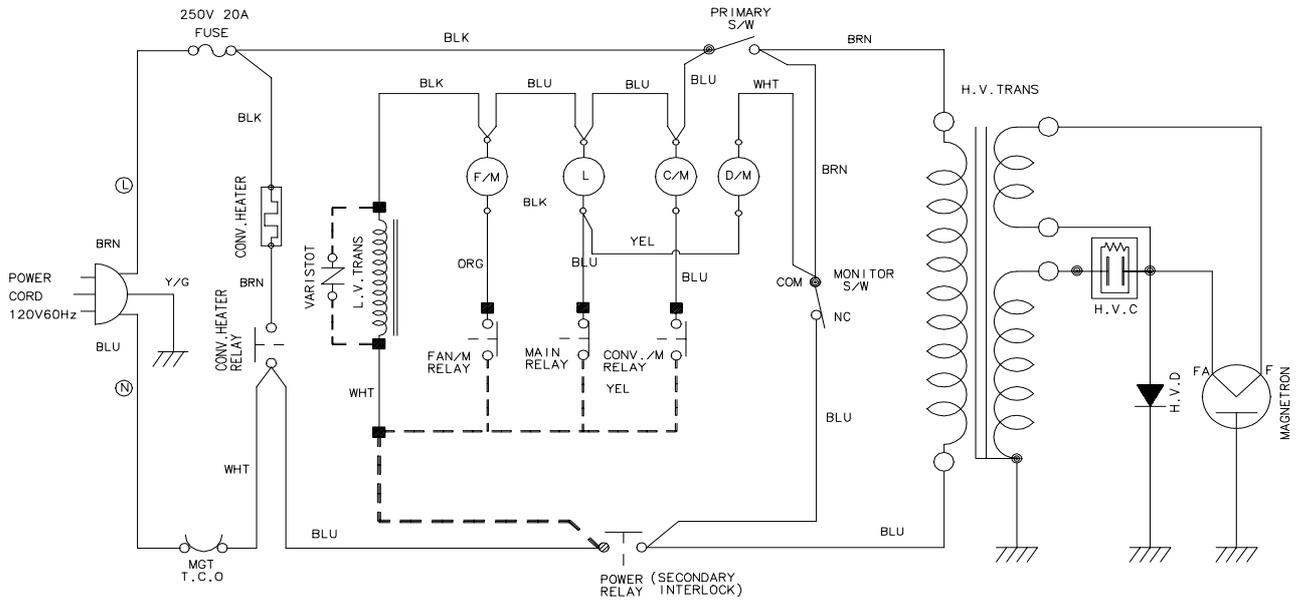

**NOTE**

- DOOR : OPENED
- ■ : PCB IN/OUT POINT
- - - - : PAB PATTEN

