



Removing the Cook Top on a Ceramic or Hybrid Electric Range

Removing the cook top glass on an electric range can be a challenge but reassembling it can be more challenging if done wrong. Reversing the disassembly instructions are not enough, the cooking elements must be in the correct positions for the top to fit right again.


To begin, remove the 3 screws under the front of the cook top. To access the screws open the oven door.

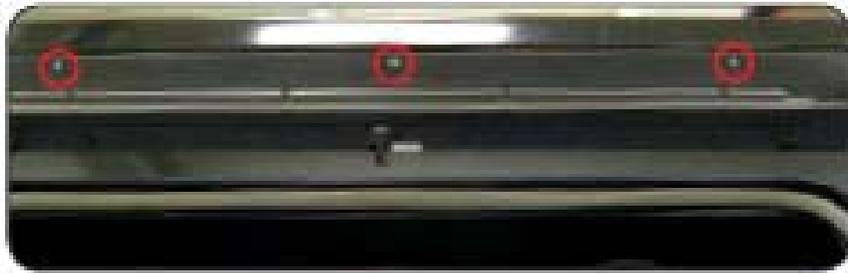

From here, the tech can either remove the rear covers and disconnect the wiring to the cook top and remove the assembly or just lift the front and pull out. There is in some cases enough slack in the wiring to do this.

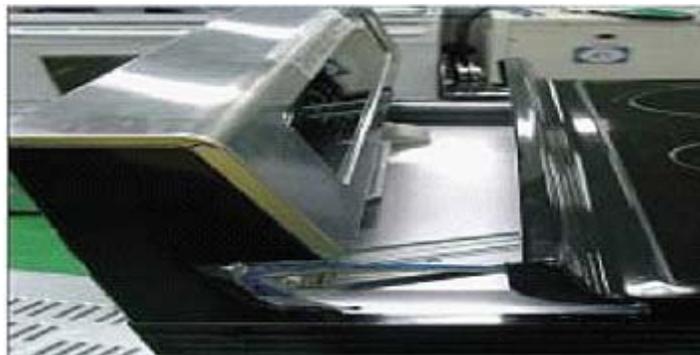


Either way, next remove 3 screws from both left and right sides

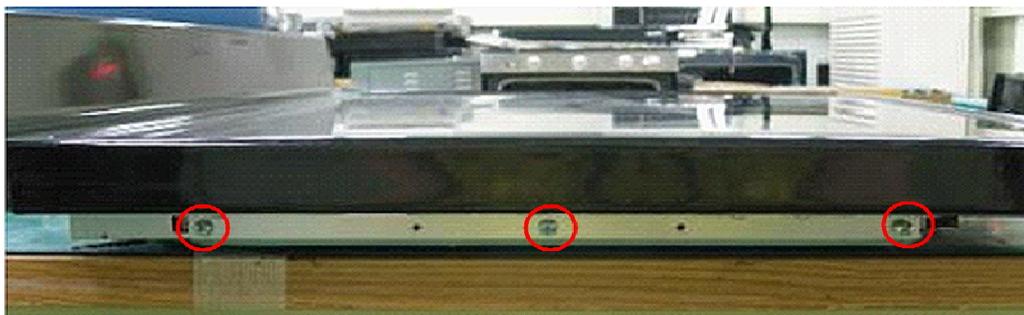

The Hybrid ranges have both induction coils and heating elements.



The standard electric ranges have heating elements only

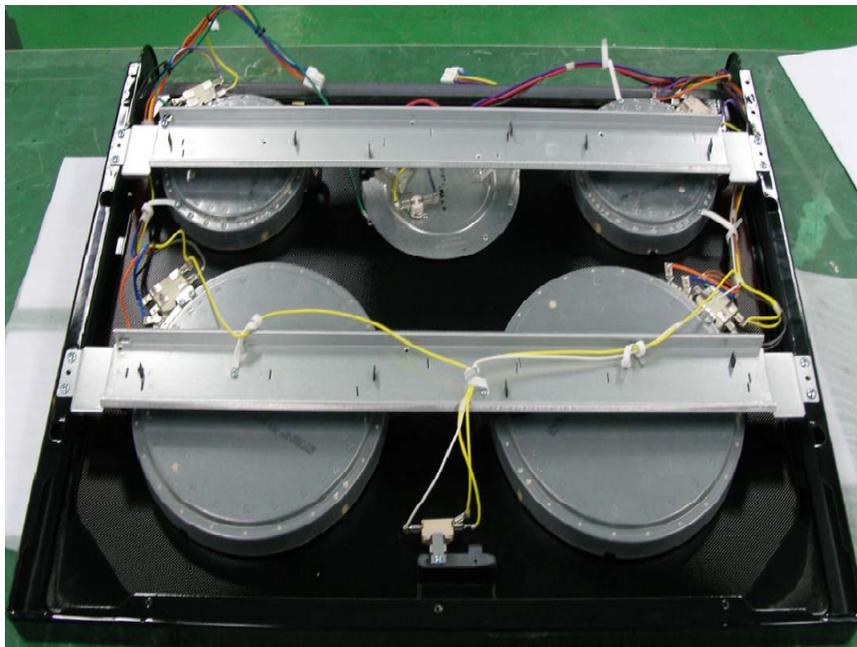

In either configuration if the cooking elements are not seated properly the cook top will not be assembled, installed or work properly.