

# Maytag Services

## Training Bulletin


Product: Neptune Washers

Date: May 6, 2005


Sub System: Spring and Cable Removal

Models Affected: MAH3000, 4000, 5500, 6500, 7500

### *Removing the Boot Gasket Spring and Cable*

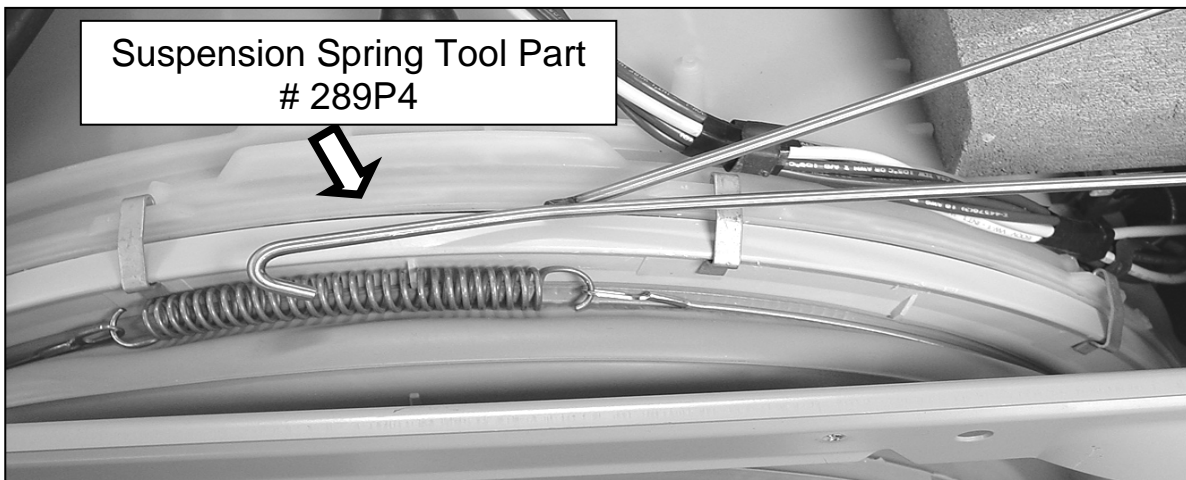


To remove or install boot spring and cable use suspension spring tool part # 289P4

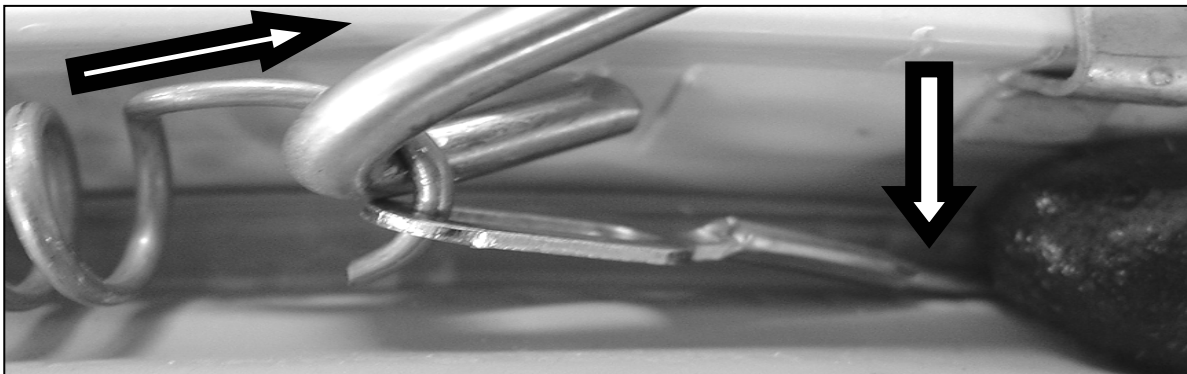


Hold the cable eyelet firmly down against the gasket. Hook the open end of the spring with the suspension tool and unhook from the eyelet

(See back)

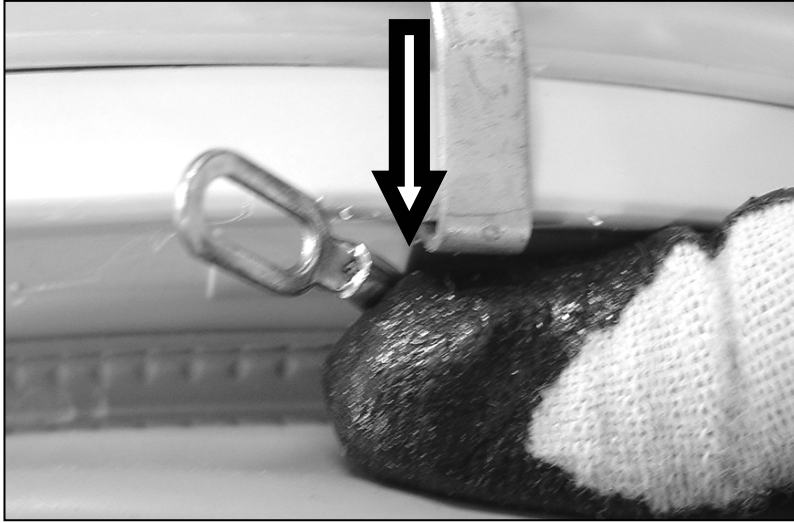

**Important Note:**

To install, position the cable so the edge of the eyelet, (where the cable is attached) is resting against the spring clamp. Hold the cable tight against the gasket.

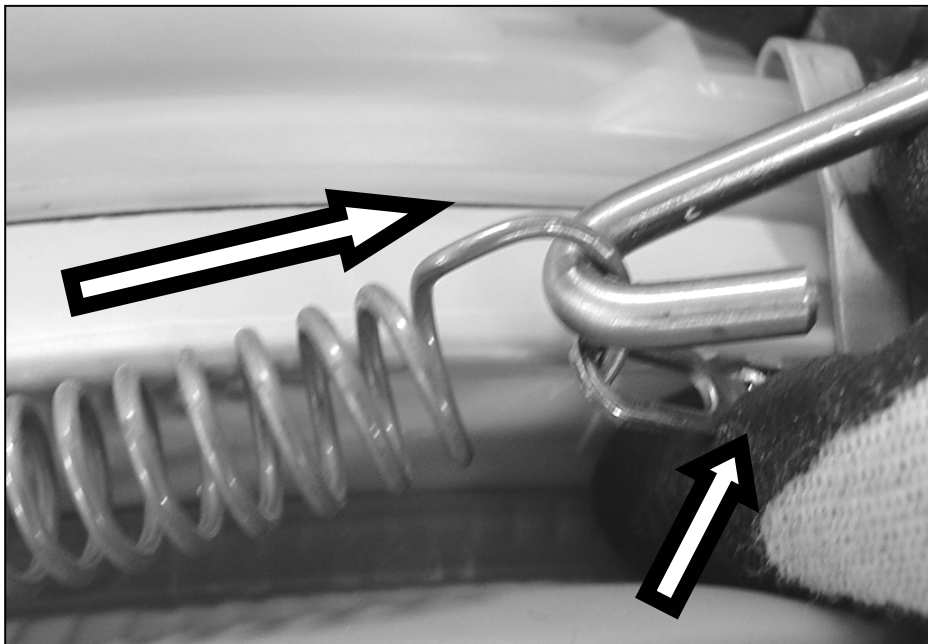

Position the open end of the spring face down. Use the suspension tool to expand the spring, and hook to the eyelet.