Service Bulletin

REFRIGERATORS WR49X10139

REF 03-06

JUNF 2006

REPLACEMENT FEELER ARM FOR INTEGRATED ICE™ MODELS


The new feeler arm should ONLY be used on the following SxS Plastic Liner models:

DSS25	PSH23
ESF25	PSH29
GCR23	PSI23
GSC23	PSM27
GSF25	PSM29
GSS25	PSS26
PCF23	PSS27
PCT23	PSS29
PSC23	ZFSB23
PSF26	ZFSB26

Consumer calls for slow ice or too little ice on GE and Profile side-by-side refrigerators with the Integrated Ice™ system (inclined bucket) can be resolved using the new feeler arm WR49X10139.

The new feeler arm is designed with a raised step to allow the icemaker to produce additional cubes prior to cycling off on a full bucket. The additional capacity improves the dispensing characteristics of the inclined bucket.

Replace the feeler arm using the spring and screw from the existing arm.

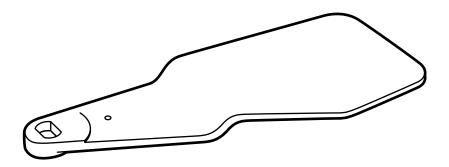

Feeler Arm

