

Website:<http://www.LGService.com>  
E-mail:<http://www.LGService.com/techsup.html>

# WASHING MACHINE SERVICE MANUAL

## CAUTION

READ THIS MANUAL CAREFULLY TO DIAGNOSE  
PROBLEMS CORRECTLY BEFORE SERVICING THE UNIT.

**MODEL : WM3632HW**

---

# CONTENTS

1. SPECIFICATIONS .....	3
2. FEATURES & TECHNICAL EXPLANATION .....	4
3. PARTS IDENTIFICATION .....	6
4. INSTALLATION .....	7
5. OPERATION .....	10
6. WIRING DIAGRAM / PROGRAM CHART .....	12
7. TROUBLESHOOTING .....	14
7-1. BEFORE PERFORMING SERVICE .....	14
7-2. QC TEST MODE .....	14
7-3. HOW TO CHECK THE WATER LEVEL FREQUENCY .....	14
7-4. ERROR DISPLAY .....	15
8. ERROR DIAGNOSIS AND CHECK LIST .....	17
8-1. DIAGNOSIS AND SOLUTION FOR ABNORMAL OPERATION .....	17
8-2. FAULT DIAGNOSIS AND TROUBLESHOOTING .....	20
9. DISASSEMBLY INSTRUCTIONS .....	30
10. EXPLODED VIEW .....	39
10-1. CABINET & CONTROL PANEL ASSEMBLY .....	39
10-2. DRUM & TUB ASSEMBLY .....	40
10-3. DISPENSER ASSEMBLY .....	41
10-4. DRYER .....	42

# 1. SPECIFICATIONS

ITEM		WM3632HW
POWER SUPPLY		120V ~ 60Hz
PRODUCT WEIGHT		198 lbs. (90 kg)
ELECTRIC POWER CONSUMPTION	WASHING	280W
	DRAIN MOTOR	80W
	FAN MOTOR	25W
	DRY HEATER	1200W
	WASH HEATER	1000W
REVOLUTION SPEED	WASH	42 rpm
	SPIN	0-1200 rpm
CYCLES		9
WASH / RINSE TEMPERATURES		6
SPIN SPEEDS		6
OPTIONS		Prewash, Stain Cycle, Quick Cycle, Extra Rinse, Rinse+Spin, Delay Wash
WASH / DRY PROGRAM		Sanitary, Cotton / Towels, Normal, Perm Press, Speed Wash
CUSTOM PROGRAM		Incorporated
WATER CIRCULATION		Incorporated
OPERATIONAL WATER PRESSURE		4.5–145 psi (30-1000 kPa)
CONTROL TYPE		Electronic
WASH CAPACITY		3.22 cu.ft (3.72 cu.ft.IEC)
DRY CAPACITY		Max. 11lbs (5kg)
DIMENSIONS		27"(W) X 29 - <sup>1</sup> / <sub>2</sub> "(D) X 42 - <sup>3</sup> / <sub>4</sub> "(H), 49 - <sup>4</sup> / <sub>5</sub> "(D, door open)
DELAY WASH		up to 19 hours
DOOR SWITCH TYPE		PTC + Solenoid
WATER LEVEL		7 steps (by sensor)
LAUNDRY LOAD SENSING		Incorporated
ERROR DIAGNOSIS		Incorporated
AUTO POWER OFF		Incorporated
CHILD LOCK		Incorporated

# 2. FEATURES & TECHNICAL EXPLANATION

---

## 2-1.FEATURES



### ■ **Direct Drive System**

The advanced Brushless DC motor directly drives the drum without belt and pulley.



### ■ **Tilted Drum and Extra Large Door Opening**


The tilted drum and extra large door opening make it possible to load and unload easily.



### ■ **Water Circulation**

Spray detergent solution and water onto the load repeatedly. Clothes are soaked more quickly and thoroughly during the wash cycle.

Detergent suds are eliminated more easily by the water shower during rinse cycle. The water circulation system uses both water and detergent more efficiently.

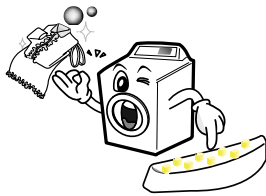


### ■ **RollerJets**

The washing ball enhances wash performance and reduces damage to clothing. The jets spray and help tumble clothes to enhance washing performance while maintaining fabric care.



### ■ **Built-in Heater**

The internal heater automatically heats the water to the optimum temperature on selected cycles.

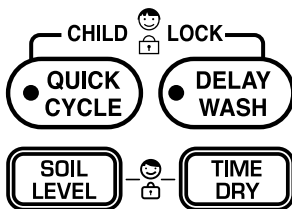


### ■ **Child Lock**

The Child lock feature prevents children from pressing any buttons to change the settings during operation.

---

## 2-2.FUZZY LOGIC WASHING TIME OPTIMIZATION

To get the best washing performance, optimal time is determined by the water temperature, the selected washing temperature, and the size of the load.

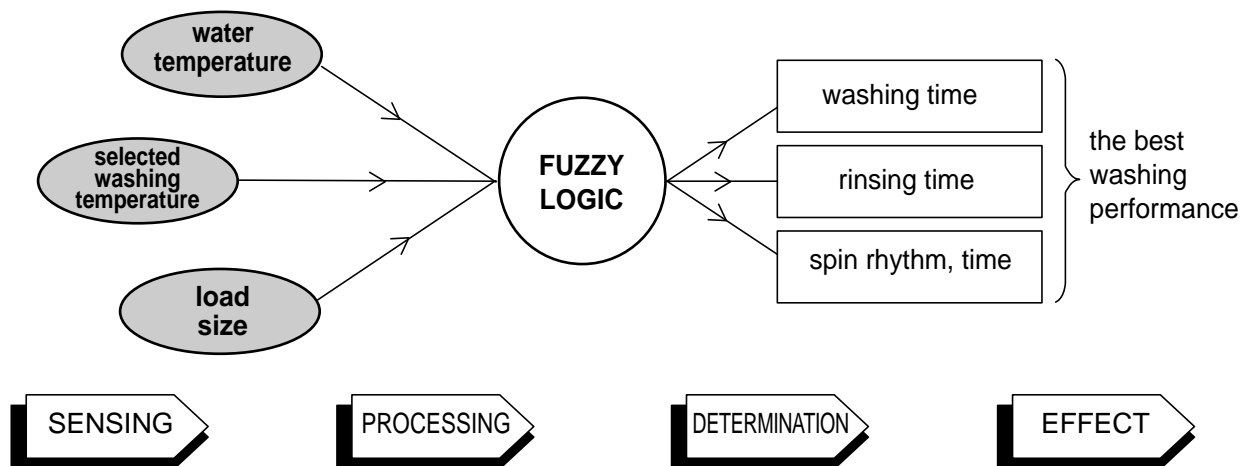


## 2-3.WATER LEVEL CONTROL

- This model incorporates a pressure sensor which can sense the water level in the tub.
- The water supply is stopped when the water level reaches the preset level, the washing program then proceeds.
- Spinning does not proceed until the water in the tub drains to a certain level.


## 2-4.DOOR CONTROL

- The door can be opened by pulling the door handle whenever washer is not in operation.
- When the cycle is completed, the DOOR LOCKED light will turn off.
- If a power failure has occurred while in operation, the door will lock for 5 minutes.
- Clicking sounds can be heard when the door is locked / unlocked.


# 3. PARTS IDENTIFICATION

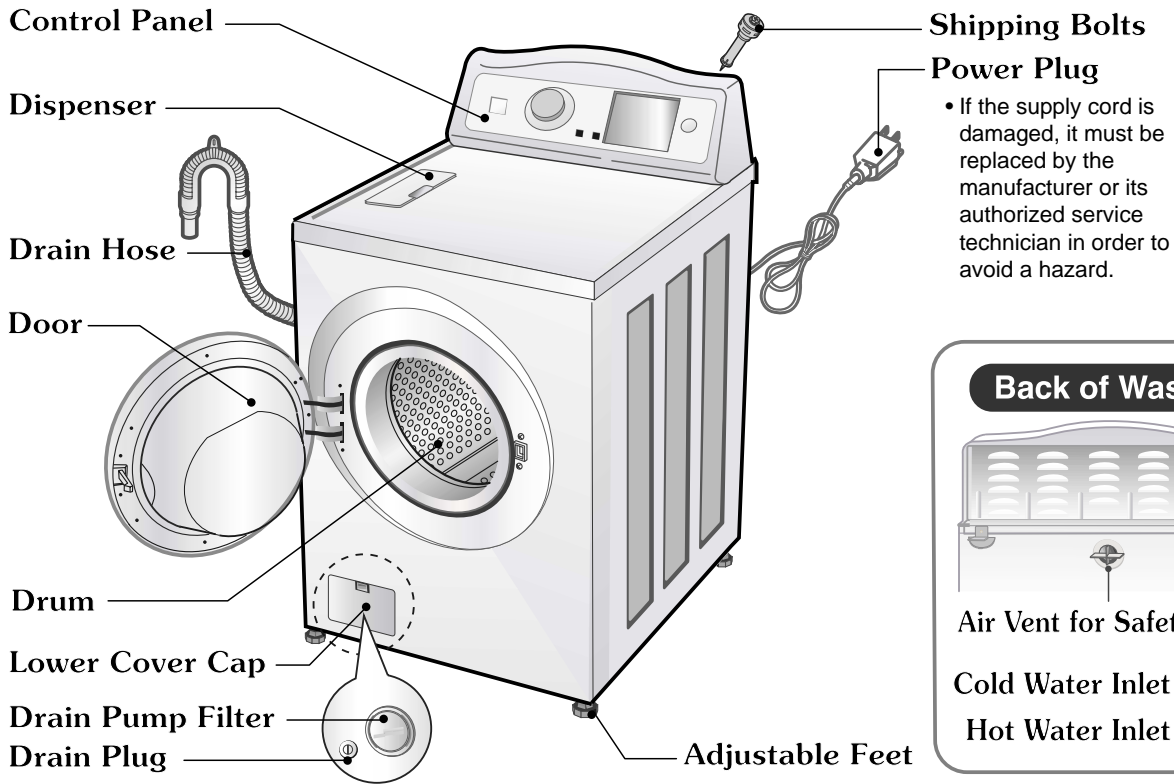


## ■ ACCESSORIES

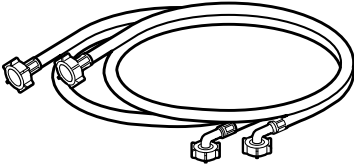

Hot/Cold (1 each)  
Hose

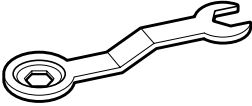

Wrench

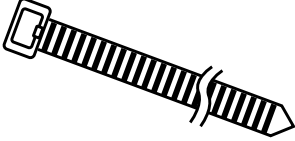




Tie strap  
to secure drain hose to standpipe,  
inlet hose, or laundry tub

# 4. INSTALLATION

- ① Before servicing, ask the customer what the trouble is.
- ② Check the setup (power supply is 120V AC, remove the transit bolts...).
- ③ Check with the troubleshooting guide.
- ④ Plan your service method by referring to the disassembly instructions.
- ⑤ Service the unit.
- ⑥ After servicing, operate the appliance to see whether it functions correctly.


## ■ STANDARD INSTALLATION

The appliance should be installed as follows:

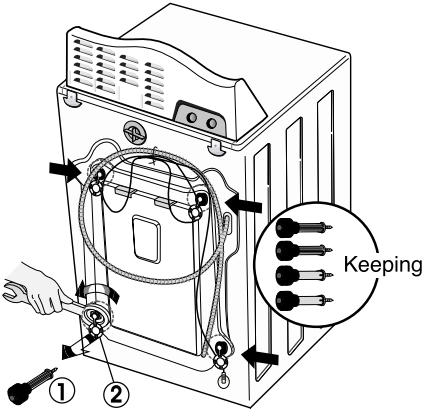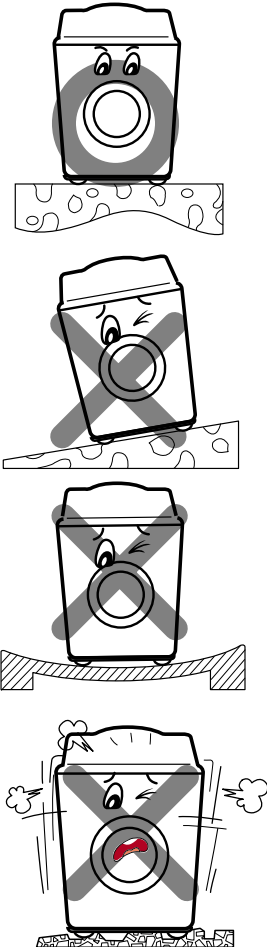
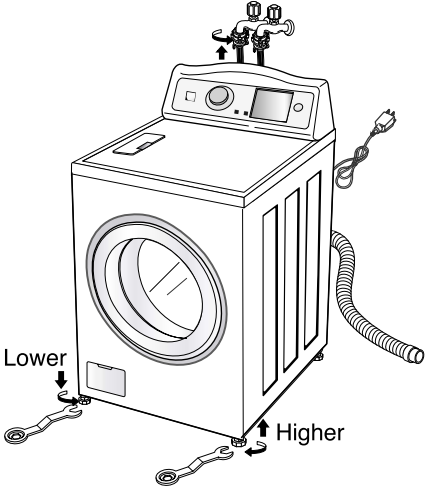
REMOVE THE TRANSIT BOLTS	INSTALL THE APPLIANCE ON A FLAT AND FIRM SURFACE	ADJUST THE LEVELING
<ul style="list-style-type: none"> <li>• Remove the transit bolts (4 EA: ①) with the supplied wrench.</li> <li>• Keep the transit bolts and spanner for future use.</li> <li>• Insert the 4 caps (provided) into the hole.</li> </ul> 		<ul style="list-style-type: none"> <li>• Turn the leveling feet to adjust the appliance horizontally.</li> </ul>  <ul style="list-style-type: none"> <li>• The appliance goes up by rotating the feet clockwise.</li> <li>• The appliance come down by rotating the feet counterclockwise.</li> </ul>

## ■ HOW TO CONNECT THE INLET HOSE

- Verify that the rubber washer is inside of the valve connector.
- Connect the inlet hose firmly to prevent leaks.


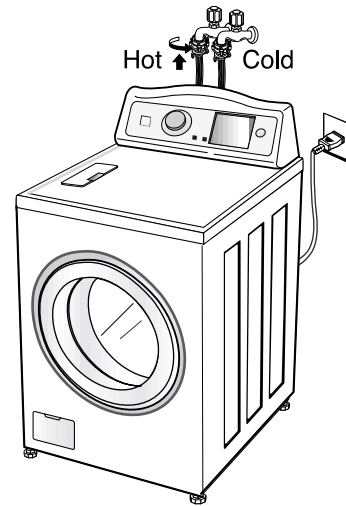


## ■ CONNECT THE DRAIN HOSE

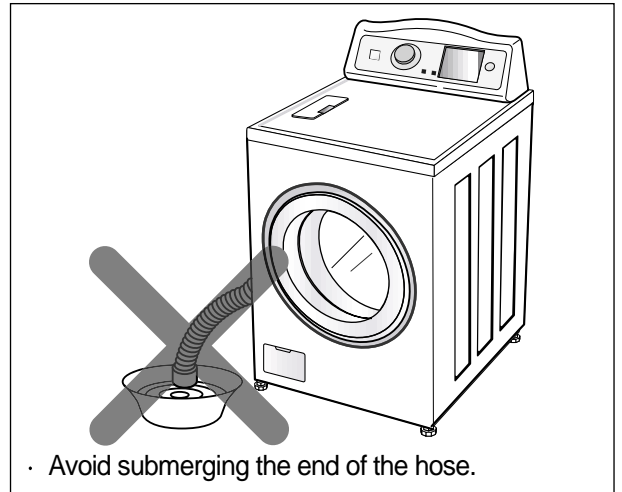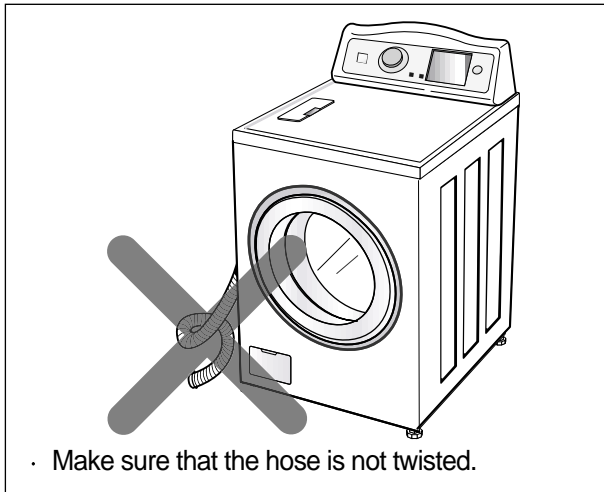

※ The end of the drain hose should be placed less than 96" from the floor.


## ■ CONNECT POWER PLUG

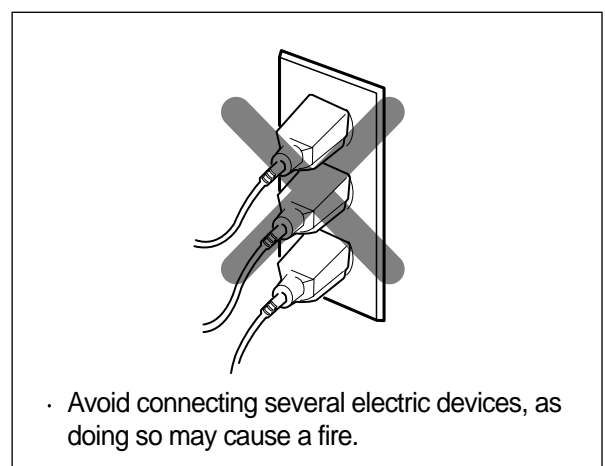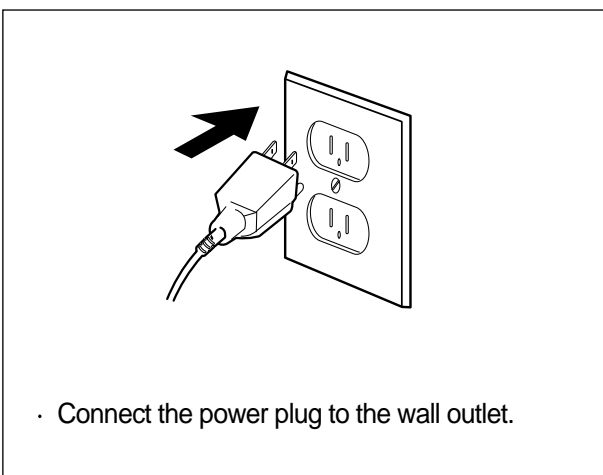




## 7 TEST OPERATION

### 1 Preparation for washing.

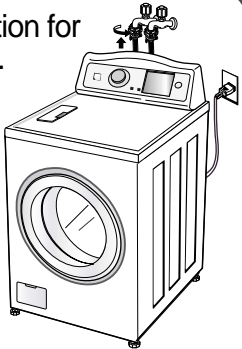


- Connect the power plug to the outlet.
- Connect the inlet hose.

### 2 Press the POWER button.

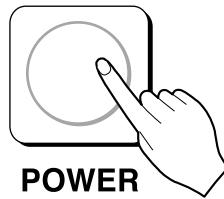


POWER

### 3 Press the Start/Pause button.

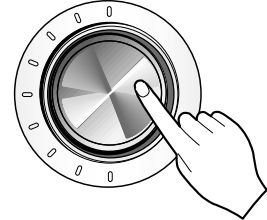


- Listen for clicking sounds to determine if the door has locked.

### 6 Check the water heating function.

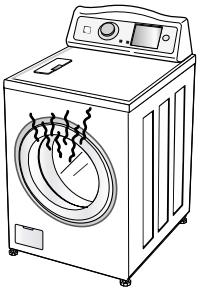


- Press the WASH / RINSE button and the present temperature will be displayed.

### 5 Check the automatic reversing rotation of the drum.

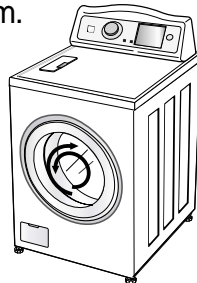

- Make sure that the drum rotates clockwise and counterclockwise.


### 4 Check the water supply.

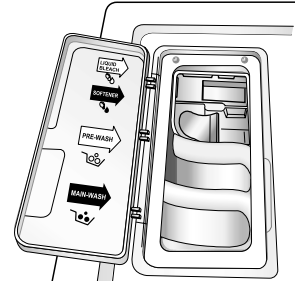


- Verify that if water is supplied through the detergent dispenser.

### 7 Check the drain and spin functions.

- Press the POWER button twice to restart.
- Press the SPIN SPEED button.
- Press the START / PAUSE button.
- Check the drain and spin functions.




### 8 Press the START / PAUSE button.

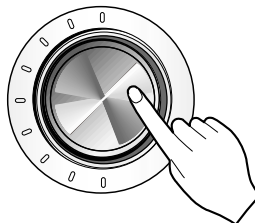

- Listen for clicking sounds to determine if the door is unlocking.

### 9 Water removal

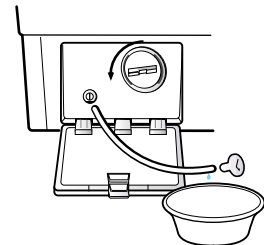

- If SVC is required, remove the remaining water in the tub, by pulling out the drain plug.

# 5. OPERATION

## • POWER button


- Use this button to turn the power On / Off.

## • DOOR LOCKED lamp

- Lights whenever the door is locked.
- The door can be unlocked by pressing the **Start / Pause** button to stop the washer.

## • STATUS INDICATOR

- These lights show the progress of the selected cycle.

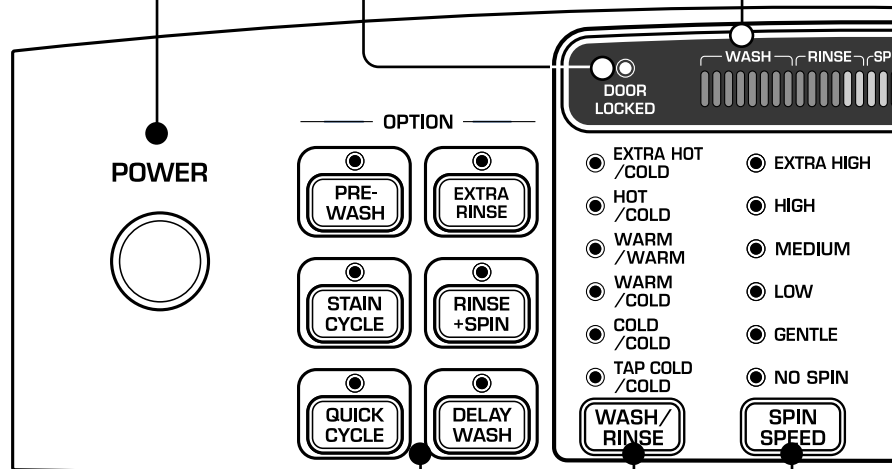

## • OPTION button

- Allows you to store a customized wash cycle for future use.
- To create a **Custom Program** :
  - 1) Select a cycle.
  - 2) Select the other desired **Wash / Rinse Temp., Spin Speed, Soil Level**.
  - 3) Select the desired Options.
  - 4) Press and hold the Custom Program button for 3 seconds (2 beep sounds).
  - 5) Press the **Start / Pause** button.  
The Custom Program is now stored for future use.
- To reuse the program, select **Custom Program** and press **Start / Pause**.

## • WASH / RINSE temp. SPIN SPEED, SOIL LEVEL button

- Select a water temperature based on the type of load you are washing.
- To change the spin speed, select the **Spin Speed** button until the desired setting is displayed.
- To change the soil level, select the **Soil Level** button until the desired setting is displayed.

## INDICATOR


Elapsed time of the

## • EST.TIME REMAINING

- This display shows :
  - a) the estimated time remaining in the cycle when operating.
  - b) an error code when an error has been detected.

## • DRY SELECTOR

- Dry programs can be selected by pressing the [DRY] button.
- By pressing the [DRY] button, [150 → 180 → 15 → 30 → 45 → 60 → 90 → 120] can be selected.

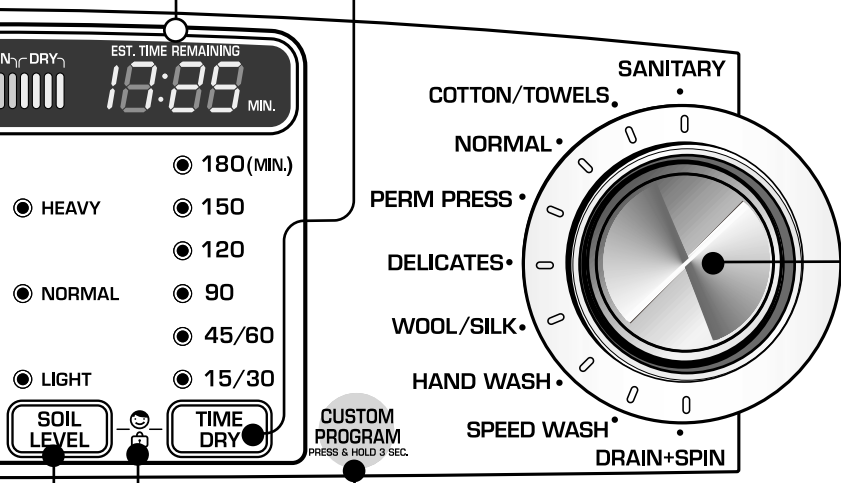

## • START/PAUSE button

- Use this button to Start / Stop the washer.

## • CYCLE SELECTOR knob

- Rotate the **Cycle selector knob** to select the cycle designed for different types of fabric and soil levels.

## • CHILD LOCK

- Use this option to prevent unwanted use of the washer. Press and hold Quick Cycle and Delay Wash button for 3 seconds to lock / unlock control.
- When Child lock is set, "CL" blinks and all buttons are disabled but the Power button. You can thereby lock the washer while it is operating.

## • CUSTOM PROGRAM button

- **Prewash** : Use this option for loads that need pretreatment. It adds 16 minutes prewash and drain.
- **Stain Cycle**: Adds time to the wash and rinse cycles for better stain removal. Automatically provides a rinse.
- **Quick Cycle**: The Quick cycle offers a quick cycle time.
- **Extra Rinse** : This option provides an additional rinse cycle.
- **Rinse+Spin** : Use this option to rinse and then spin.
- **Delay Wash** : Allows the start of any cycle to be delayed for 1~19(12, 9) hours.



**PROGRAM CHART**

\* Water Supply : W-S

\* Intermittent Spin : I-S

\* Disentangle : D-T

C Y C L E S T E P C O U R S E	Washing										Rinse										Spin			D R Y	E N D	A U T O F F	Normal Working Time (Hour:Minute)								
	Pre				Main						Normal				Extra or Stain			Extra & Stain																	
	W.S	Washing	Drain	I-S	W.S	Washing	Heating	Washing	W.S	Rinsing	Drain	Staycooling	Drain	I-S	W.S	Rinsing	Drain	I-S	W.S	Rinsing	Drain	I-S	W.S					Rinsing	Drain	I-S	W.S	Rinsing	Drain	Spin	D-T
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23					24	25	26	27	28	29	20	20
Time (SEC)	60	MIN	60	300	60	MIN	60	60	60	60	300	60	240	60	300	60	240	60	300	60	240	60	300	60	240	60	120 ~ 540	120	20	20					
Sanitary	.....				.....						.....										.....			.....		.....		About 1:44							
Cotton /Towels	.....				.....						.....										.....			.....		.....		About 57							
Normal	.....				.....						.....										.....			.....		.....		About 56							
Perm Press	.....				.....						.....										.....			.....		.....		About 53							
Delicates	.....				.....						.....										.....			.....		.....		About 34							
Wool/Silk	.....				.....						.....										.....			.....		.....		About 34							
Hand Wash	.....				.....						.....										.....			.....		.....		About 34							
Speed Wash	.....				.....						.....										.....			.....		.....		About 29							
Drain+Spin	.....				.....						.....										.....			.....		.....		About 12							
Wash + Rinse	.....				.....						.....										.....			.....		.....		About 45							
Rinse + Spin	.....				.....						.....										.....			.....		.....		About 29							
Rinse	.....				.....						.....										.....			.....		.....		About 18							

- \* Basic Cycle
- \* Optional Cycle
- \* Pre-Setting Time : Water Supply - 60 sec.  
Drain - 60 sec.

- \* Basic time is minute in washing chart.
- \* The actual program time can be varied with the load amount, water temperature or ambient temperature.

# 7. TROUBLESHOOTING


## 7-1. BEFORE PERFORMING SERVICE

- Be careful of electric shock when disconnecting parts for while troubleshooting.
- The voltage of each terminal is 120V AC and DC when the unit is plugged in.

## 7-2. QC TEST MODE.


The washer must be empty and the controls must be in the off state.

- ① Press the SPIN SPEED and SOIL LEVEL buttons simultaneously.
- ② Press the Power button, while the above condition. Then buzzer sound twice.
- ③ In order to advance to the next step of test mode, press the START / PAUSE button once.

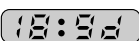Number of times the Start/Pause button is pressed	Check Point	Display Status
None	Turns on all lamps and locks the door.	 <sup>1)</sup>
1 time	Tumble clockwise.	rpm (40~50)
2 times	Low speed Spin.	rpm
3 times	High speed Spin.	rpm
4 times	Inlet valve for prewash turns on.	Water level frequency (25~65)
5 times	Inlet valve for main wash turns on.	Water level frequency (25~65)
6 times	Inlet valve for hot water turns on.	Water level frequency (25~65)
7 times	Inlet valve for softener turns on.	Water level frequency (25~65)
8 times	Inlet valve for bleach turns on.	Water level frequency (25~65)
9 times	Tumble counterclockwise.	rpm (40~50)
10 times	Heater turns on for 3 sec.	Water temperature
11 times	Circulation pump turns on.	Water level frequency (25~65)
12 times	Drain pump turns on.	Water level frequency (25~65)
13 times	Power off and unlock the door.	Turn off all lamps.

## 7-3. HOW TO CHECK THE WATER LEVEL FREQUENCY

\* Press the SPIN SPEED and SOIL LEVEL button simultaneously.









● The digits indicate the water level frequency ( x.1 kHz ).

So, for example a display indicating 241 : a Water level frequency of 241 x.1 kHz  
= 24.1 kHz

## 7-4. ERROR DISPLAY

- If you press the START/PAUSE button when an error is displayed, any error except 『PE』 will disappear and the machine will go into the pause status.
- In case of 『PE』, 『LE』, 『dE』 if the error is not resolved within 20 sec., or the in case of other errors, if the error is not resolved within 4 min., power will be turned off automatically and the error code will blink. But in the case of 『FE』, power will not be turned off.









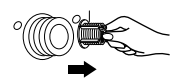
	ERROR	SYMPTOM	CAUSE
1	WATER INLET ERROR		<ul style="list-style-type: none"> <li>• Correct water level (2 level) is not reached within 8 minutes after water is supplied or it does not reach the preset water level within 25 minutes.</li> </ul>
2	IMBALANCE ERROR		<ul style="list-style-type: none"> <li>• The load is too small.</li> <li>• The appliance is tilted.</li> <li>• Laundry is gathered to one side.</li> <li>• Non distributable things are put into the drum.</li> </ul>
3	DRAIN ERROR		<ul style="list-style-type: none"> <li>• Not fully drained within 10 minutes.</li> </ul>
4	OVER FLOW ERROR		<ul style="list-style-type: none"> <li>• Water is overflowing (over 8 level).</li> <li>※ If 『FE』 is displayed, the drain pump will operate to the drain water automatically.</li> </ul>
5	PRESSURE SENSOR ERROR		<ul style="list-style-type: none"> <li>• The SENSOR SWITCH ASSEMBLY is out of order.</li> </ul>
6	DOOR OPEN ERROR		<ul style="list-style-type: none"> <li>• Door not all the way closed.</li> <li>• Loose electrical connections at Door switch and PWB Assembly.</li> <li>• The DOOR SWITCH ASSEMBLY is out of order.</li> </ul>
7	HEATING ERROR		<ul style="list-style-type: none"> <li>• The THERMISTOR is out order.</li> </ul>



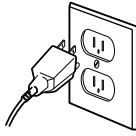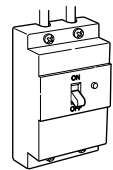





	ERROR	SYMPTOM	CAUSE
8	OVER CURRENT ERROR		<ul style="list-style-type: none"> <li>• MAIN PWB ASSEMBLY is out of order.</li> <li>• Winding in the STATOR ASSEMBLY is short-circuited.</li> </ul>
9	LOCKED MOTOR ERROR		<ul style="list-style-type: none"> <li>• The connector (3-pin, male, white) in the MOTOR HARNESS is not connected to the connector (3-pin, female, white) of STATOR ASSEMBLY.</li> <li>• The electric contact between the connectors (3-pin, male, white) in the MOTOR HARNESS and 4-pin, female, white connector in the MAIN PWB ASSEMBLY is bad or unstable.</li> <li>• The MOTOR HARNESS between the STATOR ASSEMBLY and MAIN PWB ASSEMBLY is cut (open circuited).</li> <li>• The hall sensor is out of order/defective.</li> </ul>
10	BALL SENSOR ERROR		<ul style="list-style-type: none"> <li>• Loose Ball Sensor Connector.</li> <li>• Ball Sensor is out of order. ※ Displayed only when the START / PAUSE button is first pressed in the QC Test Mode.</li> </ul>
11	EEPROM ERROR		<ul style="list-style-type: none"> <li>• EEPROM is out of order. ※ Displayed only when the START / PAUSE button is first pressed in the QC Test Mode.</li> </ul>
12	POWER FAILURE		<ul style="list-style-type: none"> <li>• The washer experienced a power failure.</li> </ul>
13	DRY HEATER ERROR		<ul style="list-style-type: none"> <li>• The Dry Heater is out of order. - Replace the Dry Heater.</li> <li>• The connector of the Dry Heater is not connected properly to the connector in the main PWB ASSEMBLY. - Reconnect or repair the connector.</li> <li>• The Dry fan motor is out of order. - Replace the fan motor.</li> </ul>



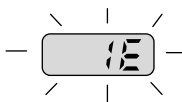


# 8. ERROR DIAGNOSIS AND CHECK LIST

## 8-1. DIAGNOSIS AND SOLUTION FOR ABNORMAL OPERATION

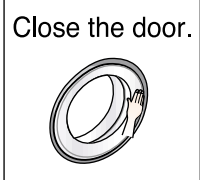SYMPTOM	GUIDE FOR SERVICE CALL	
<p>No power</p>	<div style="display: flex; justify-content: space-between;"> <div style="width: 65%;"> <p>Is the power plug connected firmly to 120V AC outlet?</p> <p style="text-align: center;"><b>YES</b></p> <p>Power failure? or Breaker opened? Is the outlet controlled by a switch?</p> <p style="text-align: center;"><b>NO</b></p> <p style="text-align: center;">Visit to service.</p> </div> <div style="width: 30%; text-align: center;">     </div> </div>	
<p>Water inlet trouble</p> <div style="text-align: center; margin-top: 10px;">  </div>	<div style="display: flex; justify-content: space-between;"> <div style="width: 65%;"> <p>Is  displayed?</p> <p style="text-align: center;"><b>YES</b></p> <p>Is the tap opened?</p> <p style="text-align: center;"><b>YES</b></p> <p>Is the tap frozen?</p> <p style="text-align: center;"><b>NO</b></p> <p>Is the water supply shut-off?</p> <p style="text-align: center;"><b>NO</b></p> <p>Is filter in the inlet valve clogged with foreign material?</p> <p style="text-align: center;"><b>NO</b></p> <p style="text-align: center;">Visit to service.</p> </div> <div style="width: 30%; text-align: center;">             <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Clean the filter of inlet valve</p>  </div> </div> </div>	

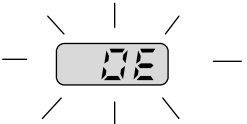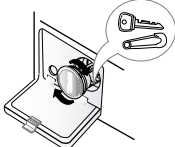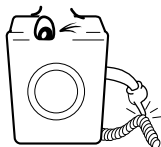SYMPTOM	GUIDE FOR SERVICE CALL
<p>Door error</p> 	<p>Started with door opened? </p> <p>YES →</p> <p>NO ↓</p> <p>Close the door.</p>  <p>Was the load too large?</p> <p>YES →</p> <p>NO ↓</p> <p>Avoid overloading.</p> <p>Clicking sound is heard once or twice, when the START / PAUSE button is pressed to start the cycle?</p> <p>NO ↓</p> <p>Visit to service.</p> <p>Check if the door switch is OK.</p>
<p>Drain trouble</p> 	<p>Is  displayed? </p> <p>YES ↓</p> <p>Is the drain pump filter clogged with foreign material such as pins, coins, etc? YES →</p> <p>NO ↓</p> <p>Clean up the filter.</p>  <p>Is the drain hose frozen, kinked, or crushed?</p> <p>NO ↓</p> <p>Visit to service.</p> 

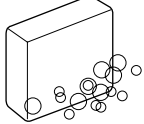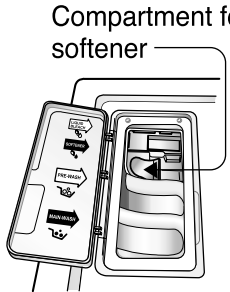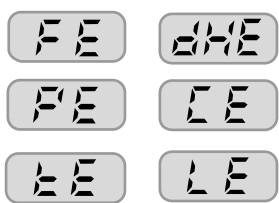
SYMPTOM	GUIDE FOR SERVICE CALL
<p>Suds overflow from the appliance. (In this condition, wash and spin do not operate normally)</p>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 65%;"> <p>Is a low-sudsing detergent used?</p> <p style="text-align: center;"><b>YES</b></p> <p>Is the proper amount of detergent used as recommended?</p> <p style="text-align: center;"><b>YES</b></p> <p>Recommend to reduce the amount of detergent.</p> <ul style="list-style-type: none"> <li>* This appliance has an automatic suds sensing function which prevents overflow.</li> <li>* When excessive suds are sensed, the suds removing implementations such as drain, water input, pause will operate, without rotating the drum.</li> </ul> </div> <div style="width: 30%; text-align: center;">  <p><b>LOW-SUDSING</b></p> </div> </div>
<p>No softening effect</p>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 65%;"> <p>Is softener put in the correct compartment of the dispenser?</p> <p style="text-align: center;"><b>YES</b></p> <p>Is the softener cap clogged?</p> <p style="text-align: center;"><b>YES</b></p> <p>Explain proper use of softener.</p> <p><b>Clean the softener compartment</b></p> </div> <div style="width: 30%; text-align: center;">  <p>Compartment for softener</p> </div> </div>
	<p style="text-align: center;">Visit to service.</p>

## 8-2.FAULT DIAGNOSIS AND TROUBLESHOOTING


### CAUTION

1. Be careful of electric shock if disconnecting parts while troubleshooting.
2. First of all, check the connection of each electrical terminal with the wiring diagram.
3. If you replace the MAIN PWB ASSEMBLY, reinsert the connectors correctly.


### NO POWER

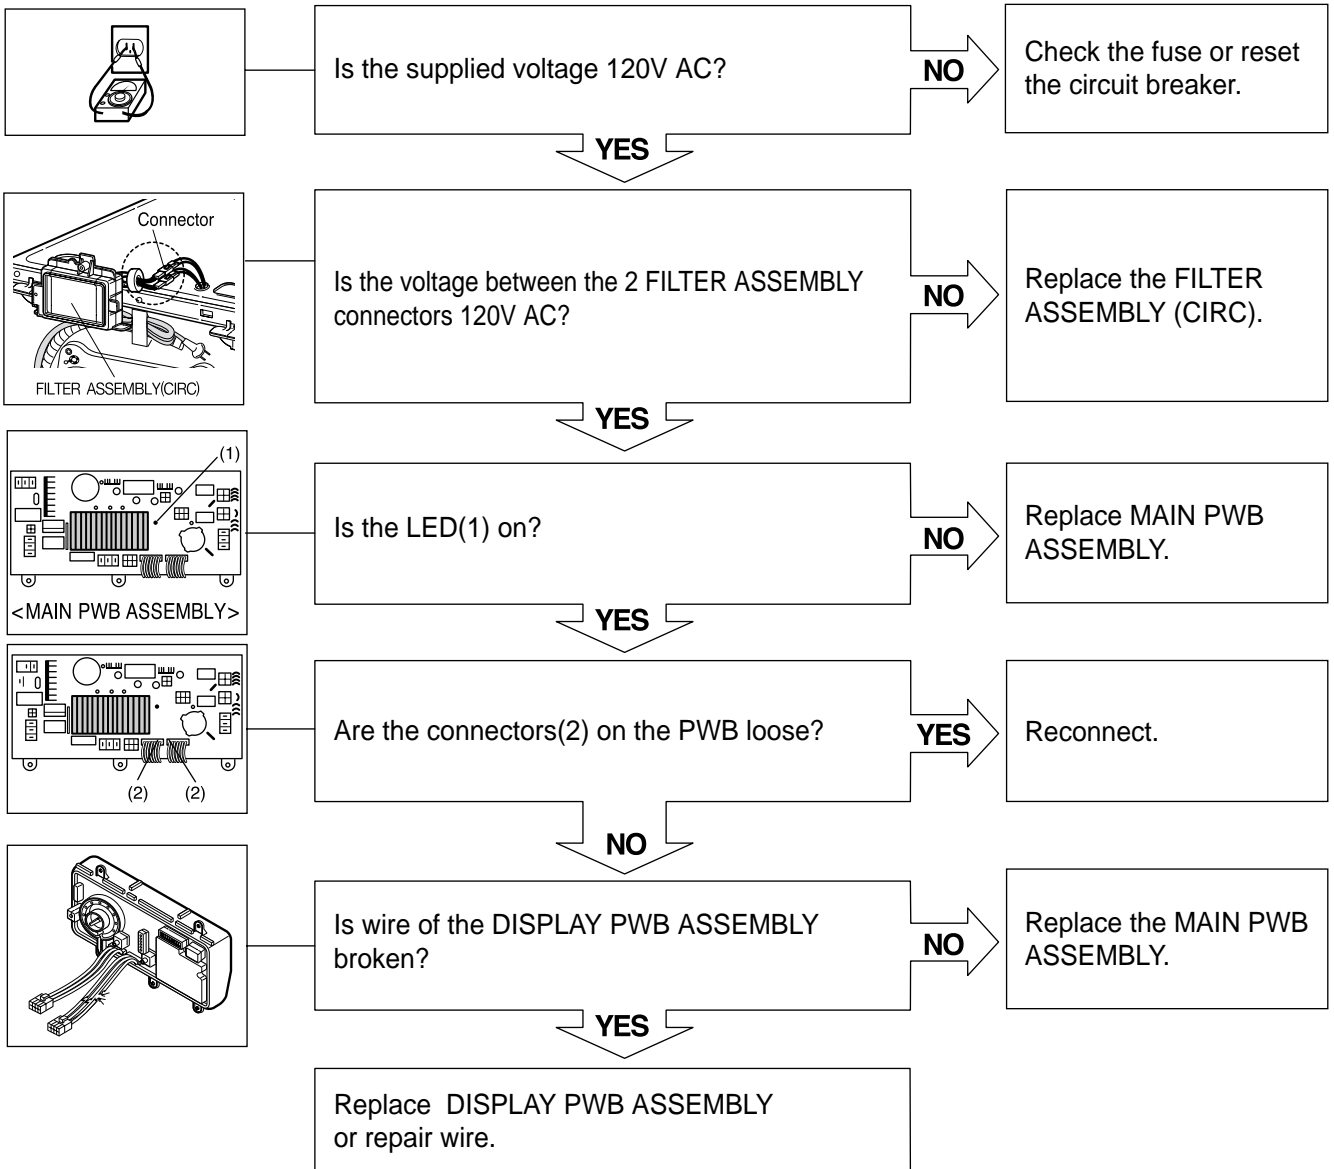


## NO WATER SUPPLY

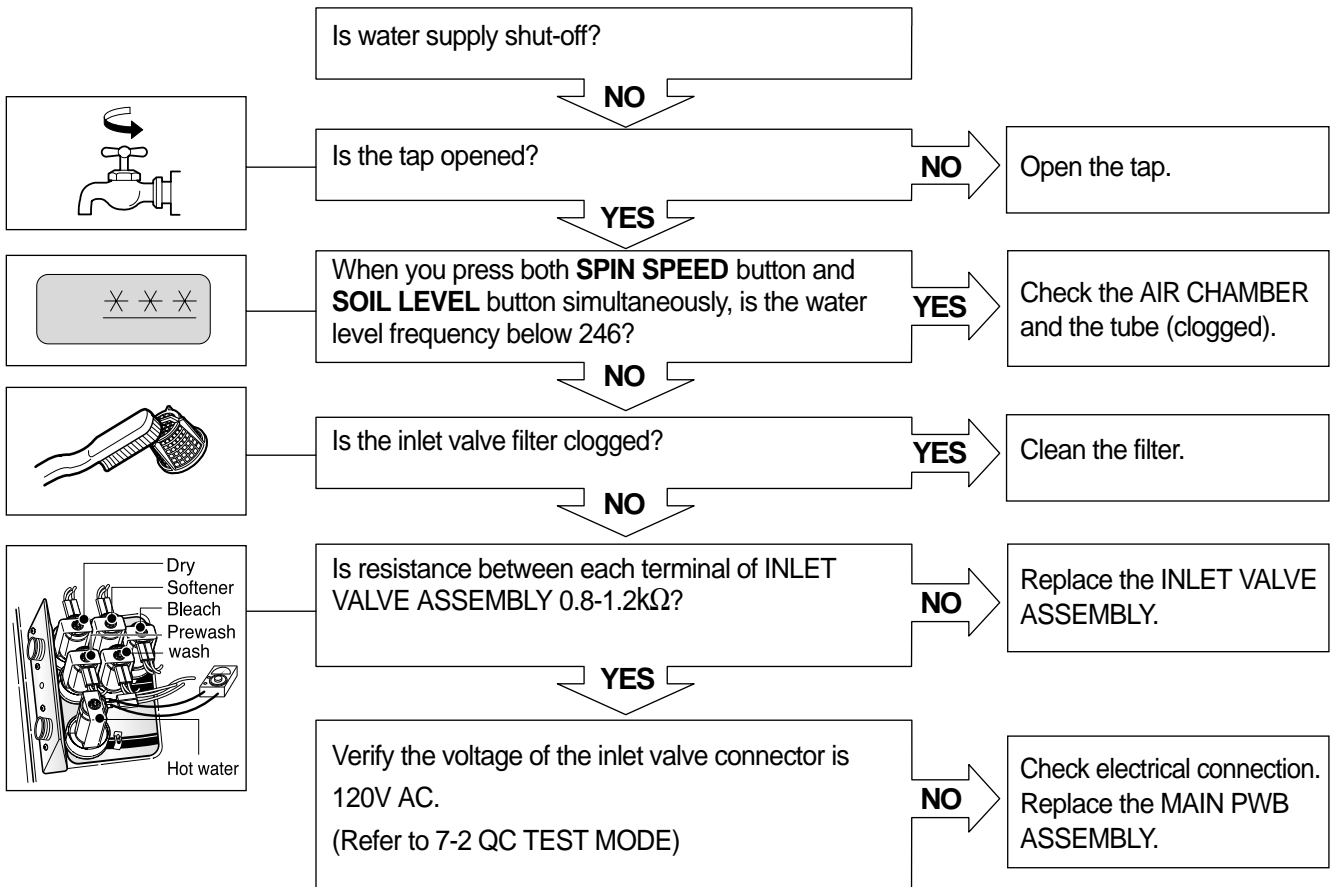

## DETERGENT DOES NOT FLOW IN

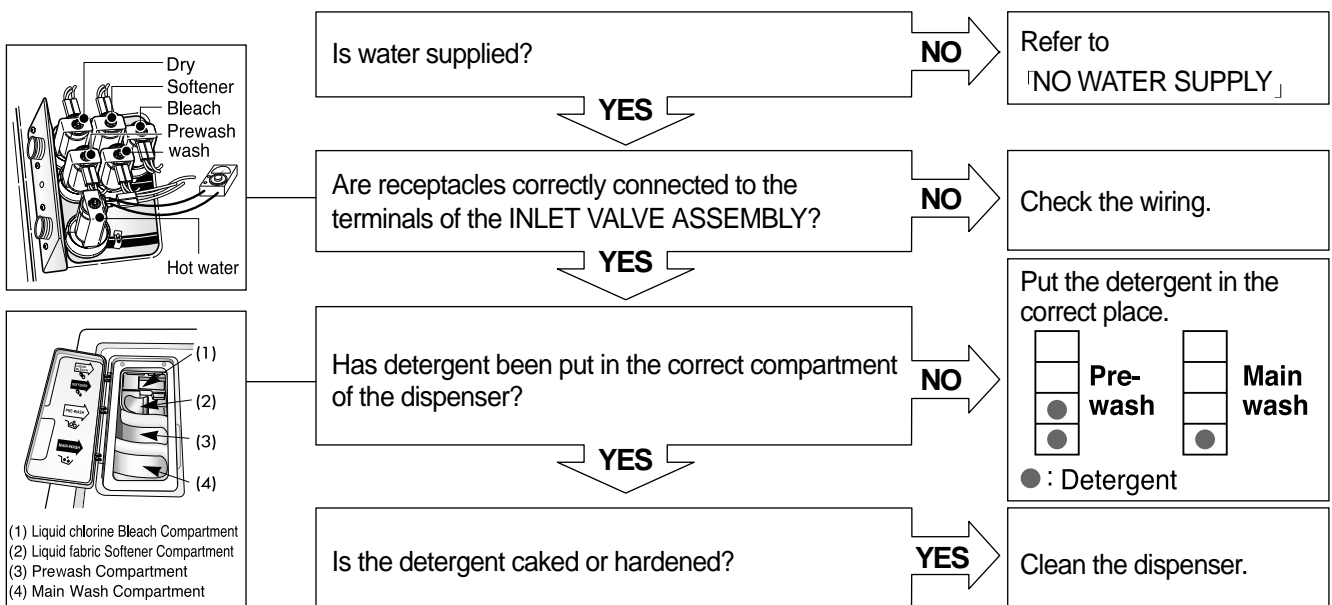

## SOFTENER / BLEACH DOES NOT FLOW IN

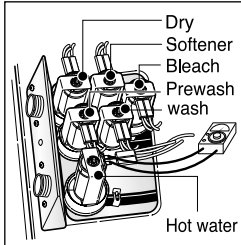

Is water supplied?

NO

Refer to  
'NO WATER SUPPLY'


YES

Are the plugs correctly connected to the terminals of the INLET VALVE ASSEMBLY?

NO

Check the wiring on the dispenser.

YES

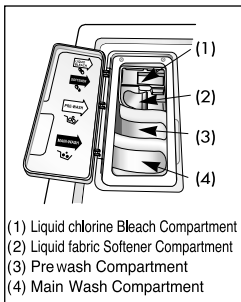


(1) Liquid chlorine Bleach Compartment  
(2) Liquid fabric Softener Compartment  
(3) Pre wash Compartment  
(4) Main Wash Compartment

Is softener / bleach put in the correct compartment of the drawer?

NO

Put it in the correct compartment.

YES

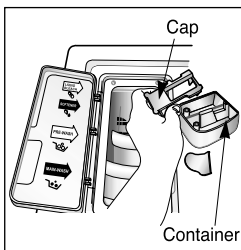


Is the softener / bleach cap clogged?

YES

Clean the Cap and Container.

## ABNORMAL SOUND

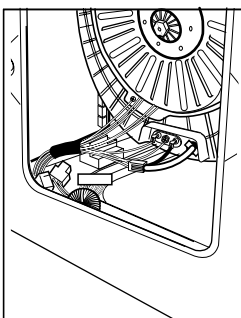

Is the motor bolt loosened?

YES

Secure the bolt.


NO

Is there friction noise coming from the motor?


YES

Replace the STATOR ASSEMBLY or ROTOR ASSEMBLY.


## HEATING WITHOUT WATER

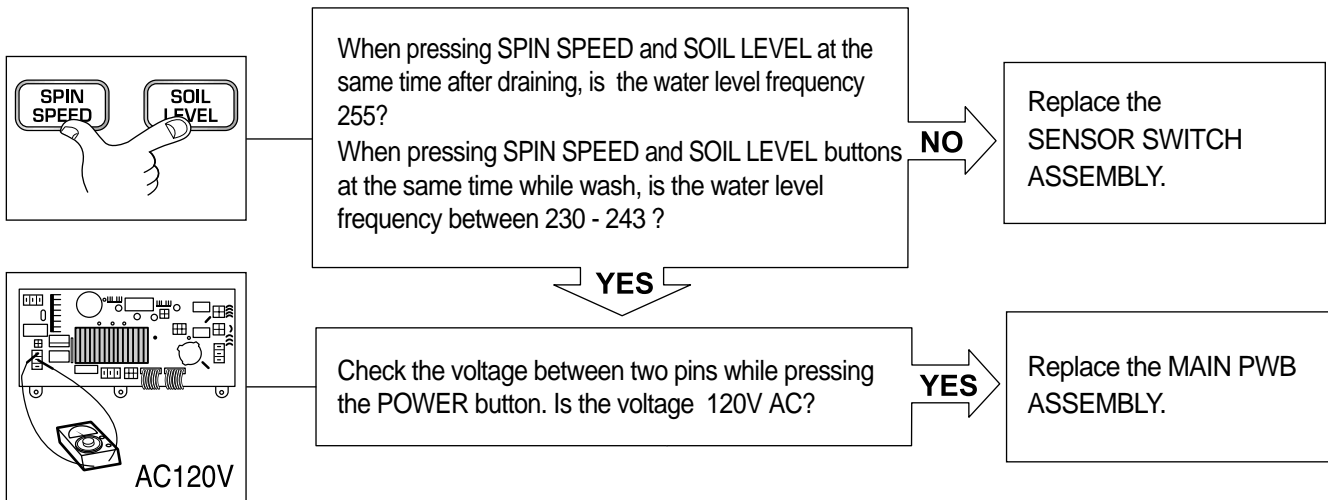


## DRAIN MALFUNCTIONING

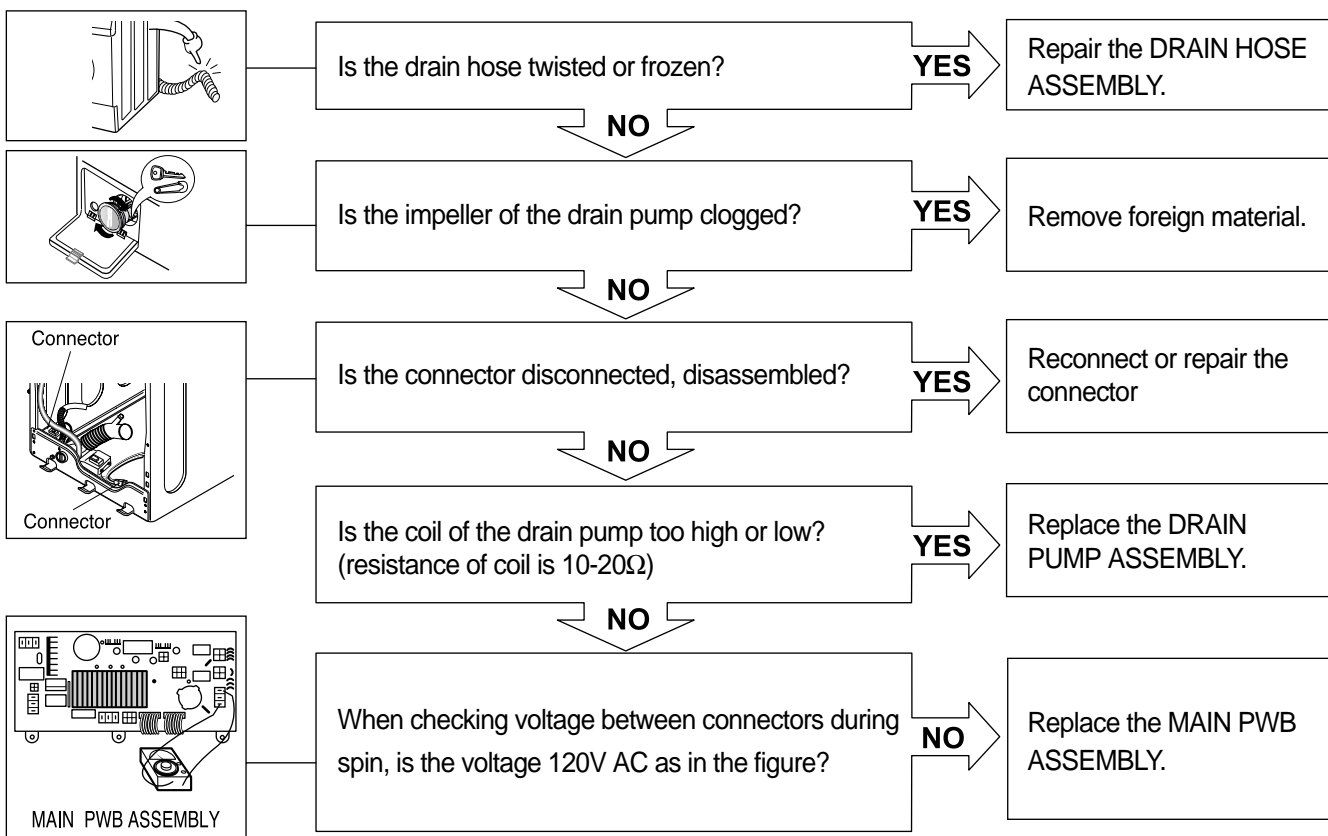

## WASH HEATER TROUBLE

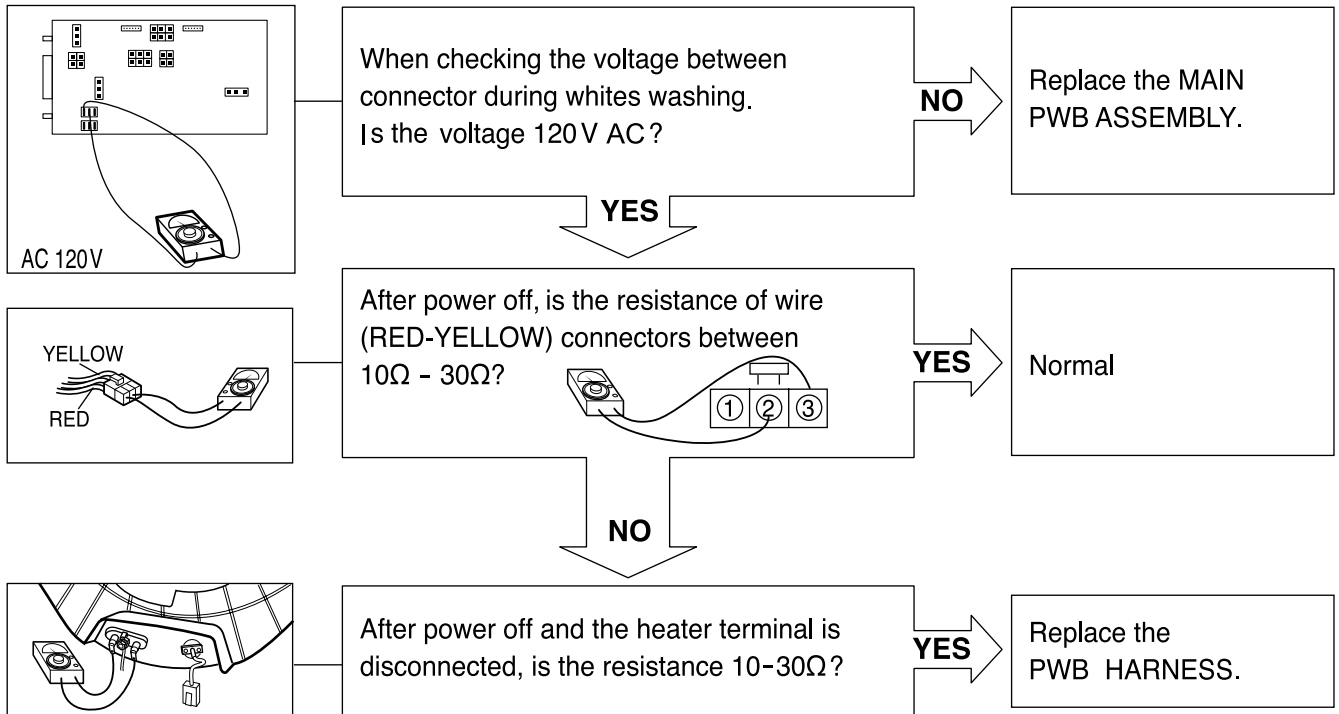


## HEATING CONTINUOUSLY ABOVE THE SETTING WATER TEMPERATURE

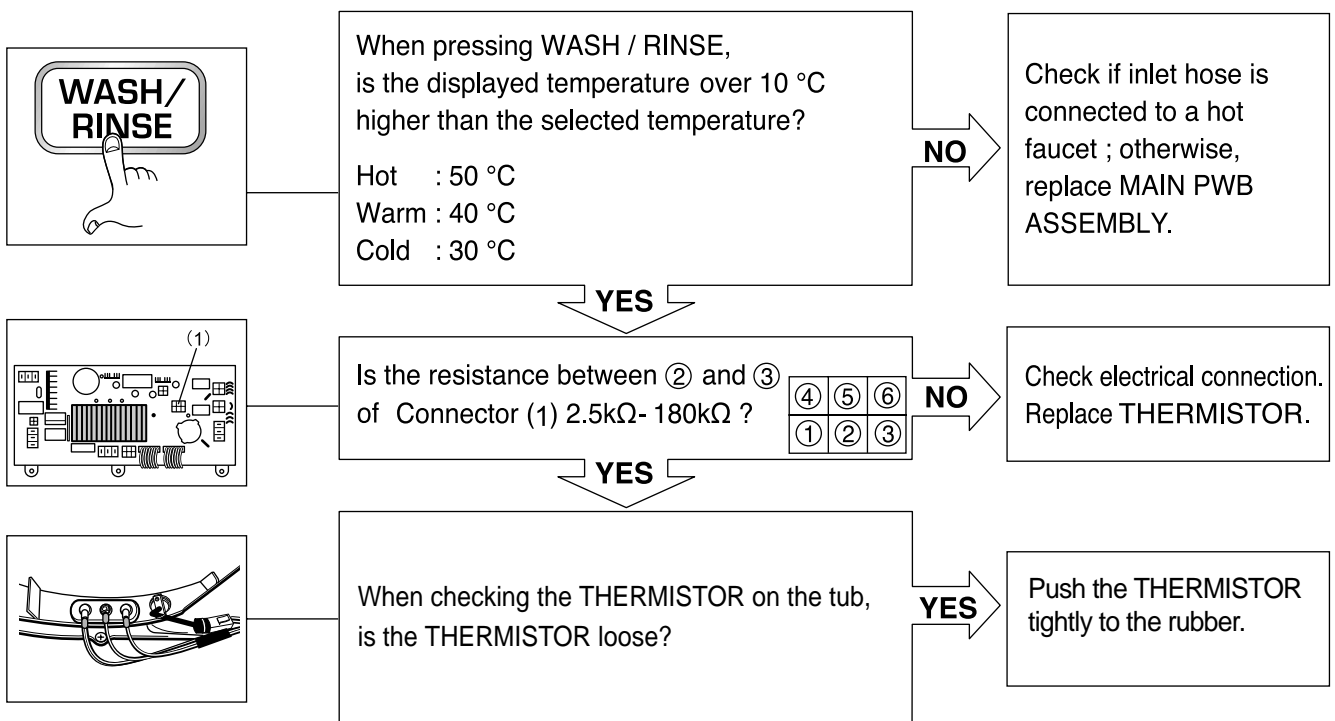





## WILL NOT CIRCULATE WATER

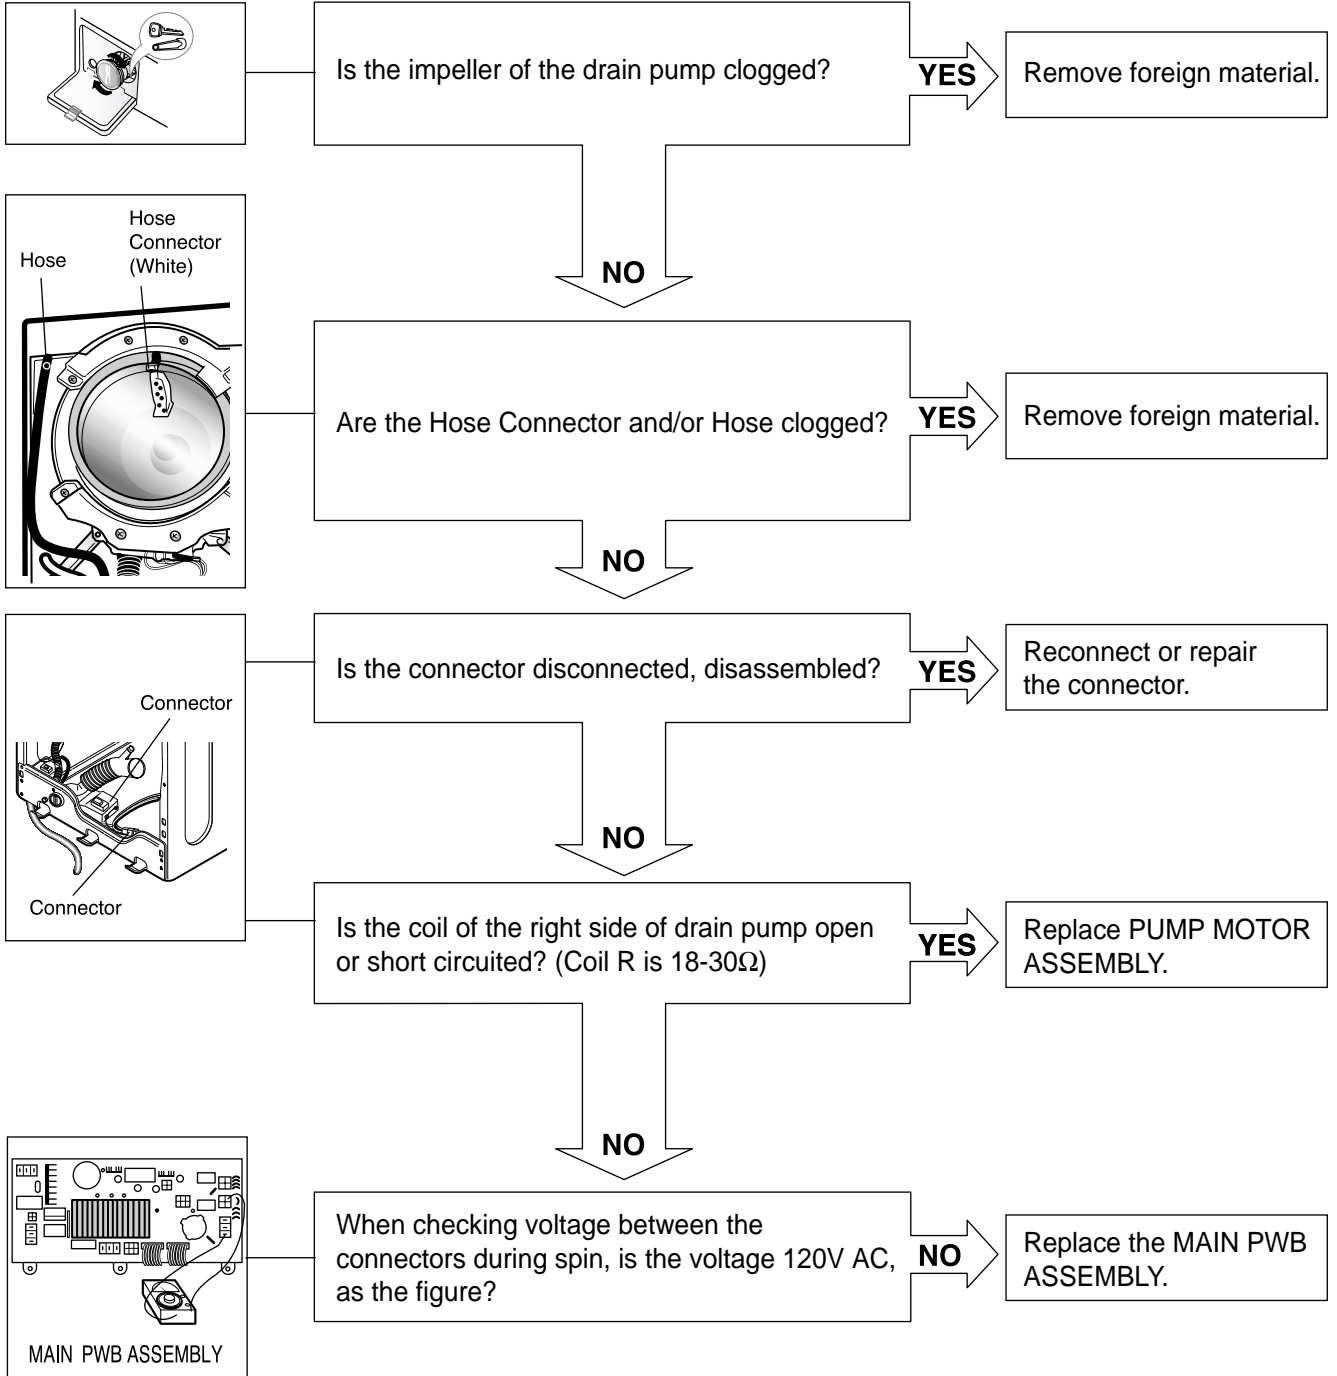


## SPIN TROUBLE

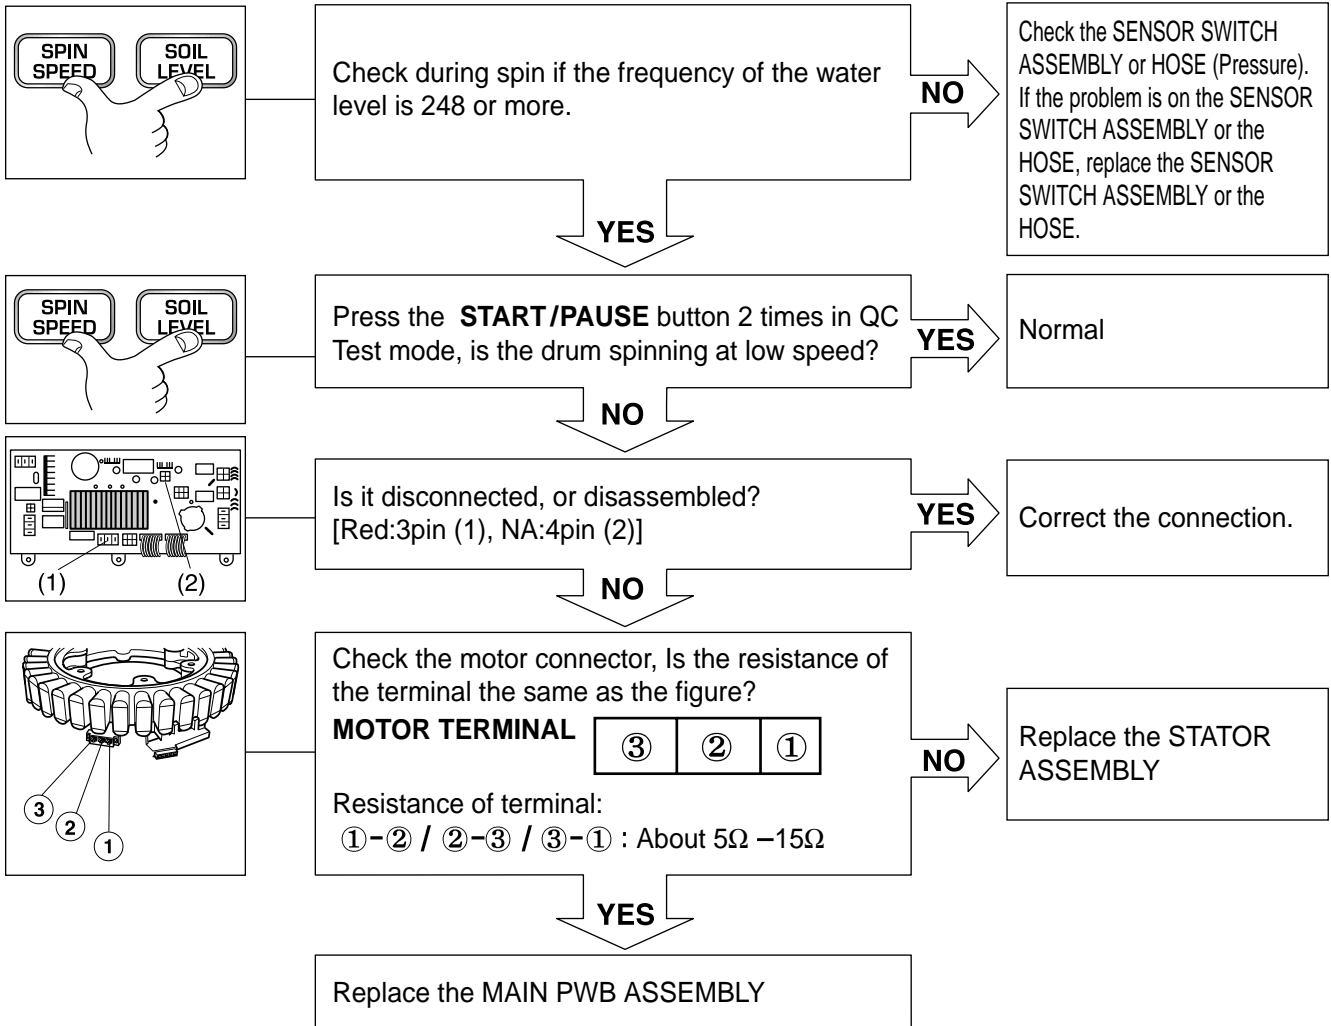


## dE ERROR

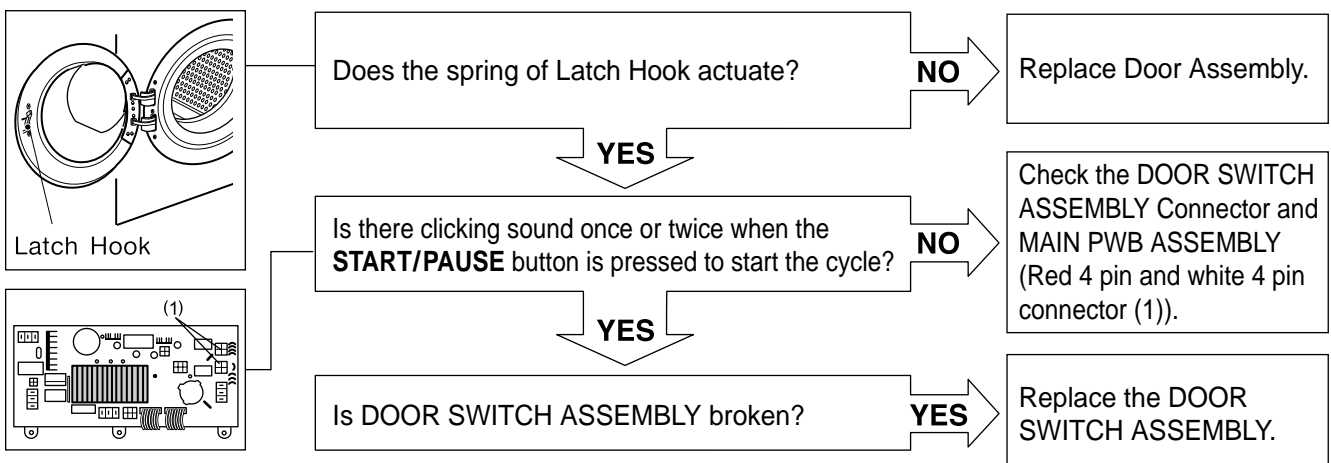


## HE ERROR DISPLAY

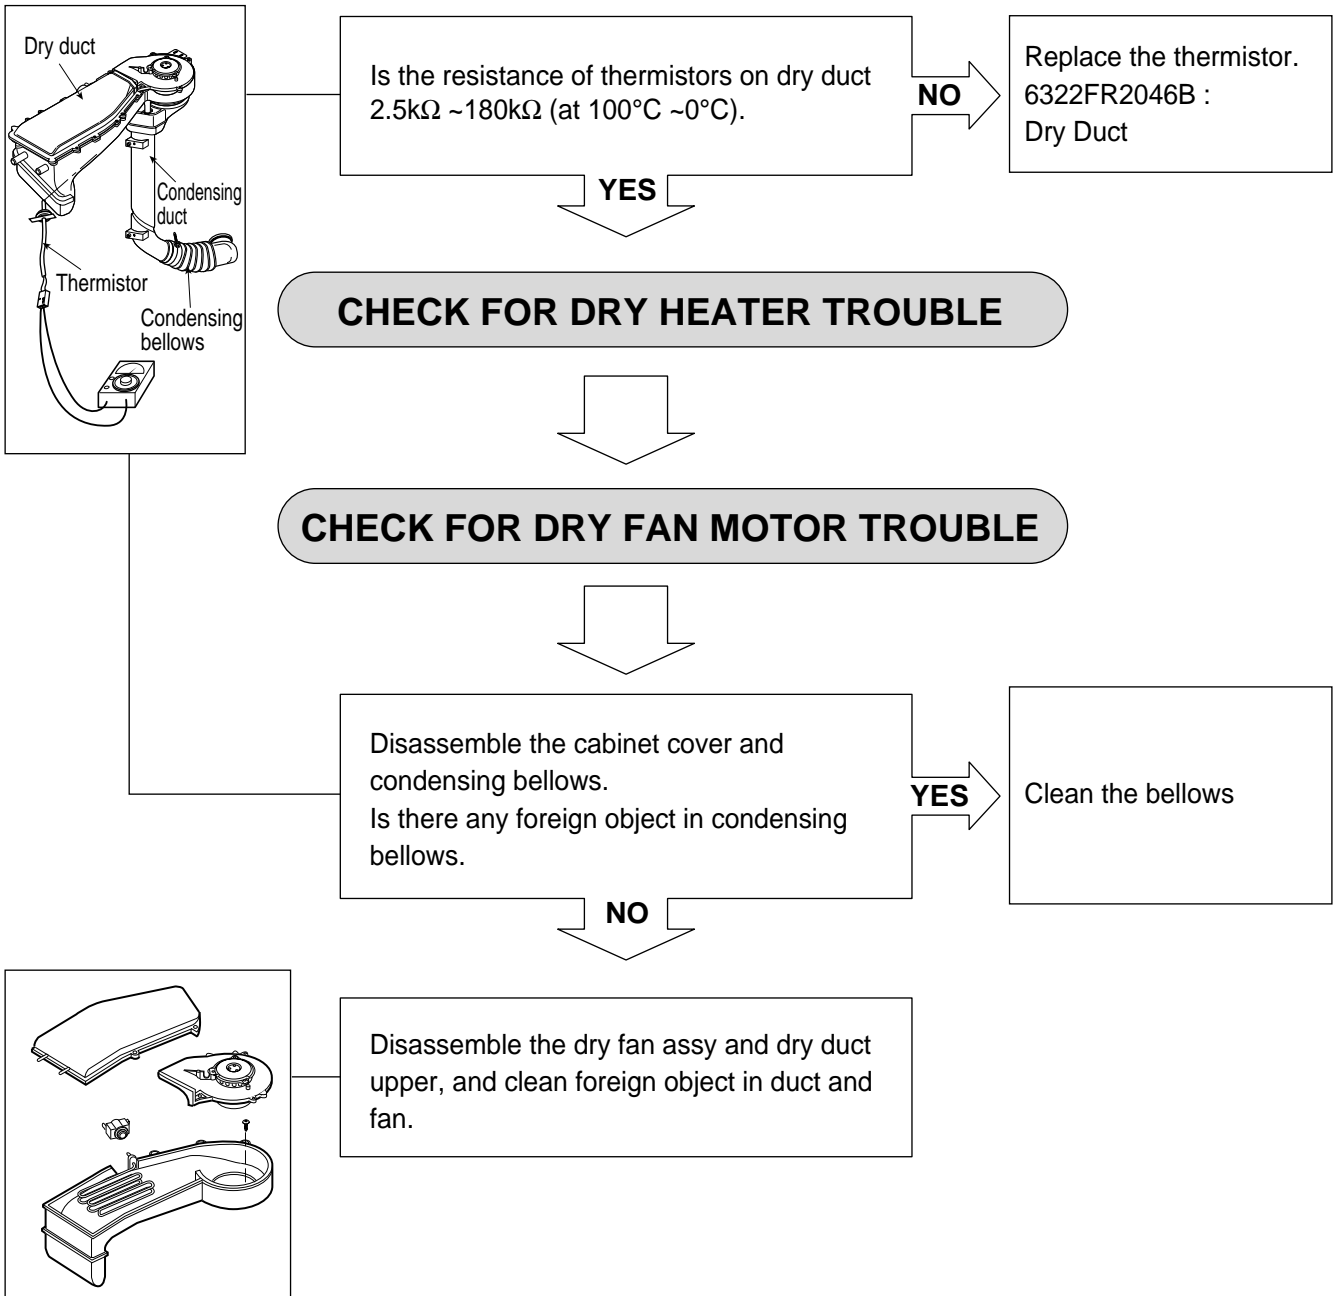

## DRY HEATER TROUBLE

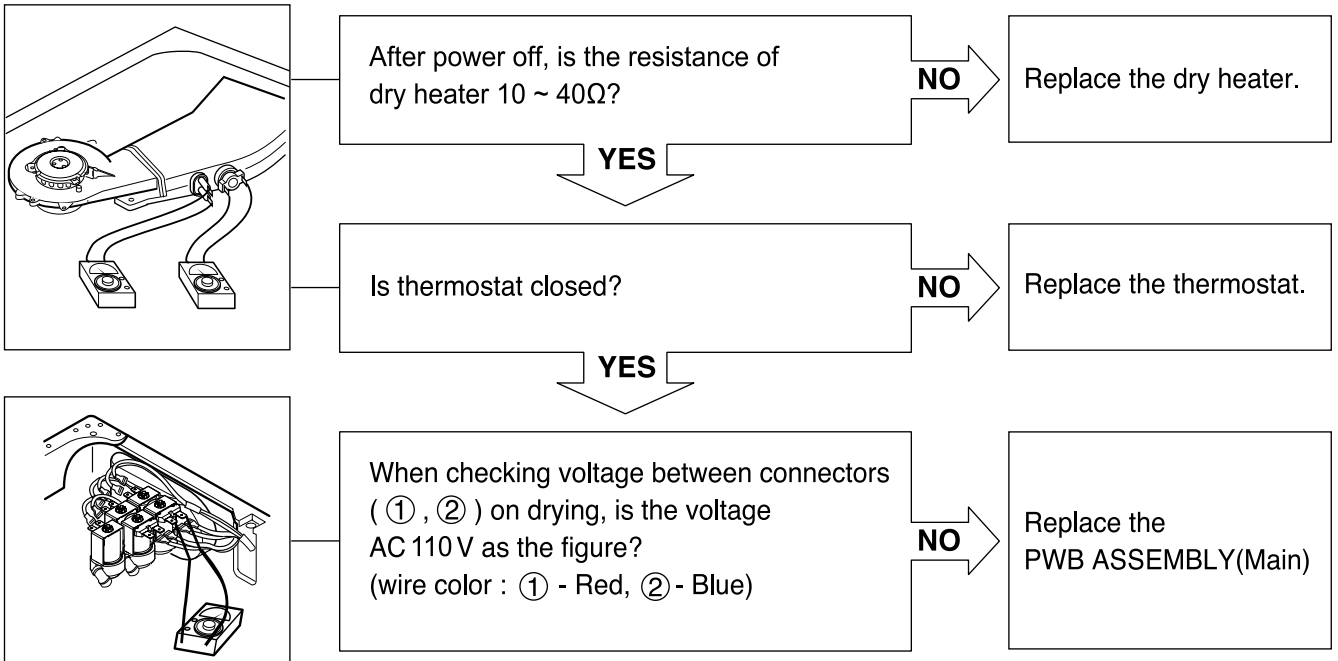


## DRY FAN MOTOR TROUBLE

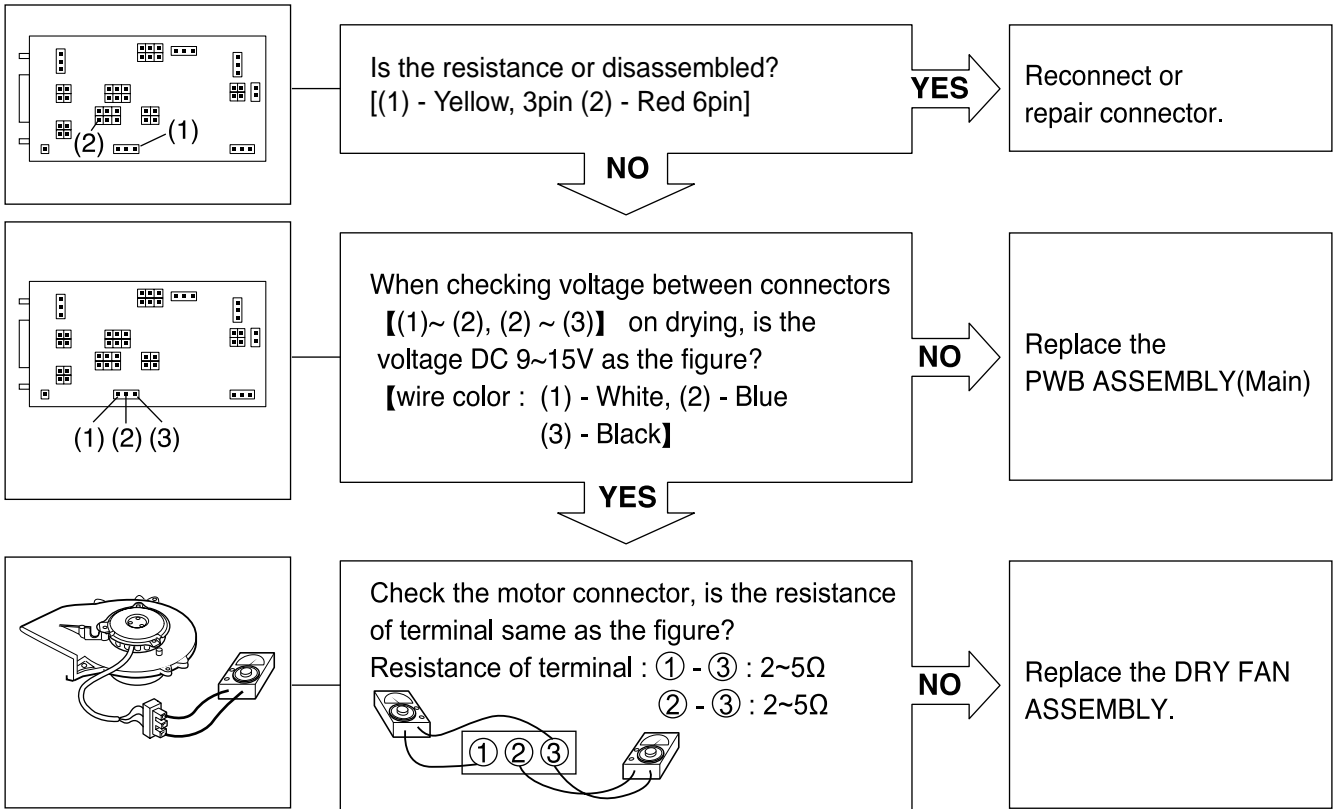


# 9. DISASSEMBLY INSTRUCTIONS

\* Disassemble and repair the unit only after pulling out power plug from the outlet.

## CONTROL PANEL ASSEMBLY

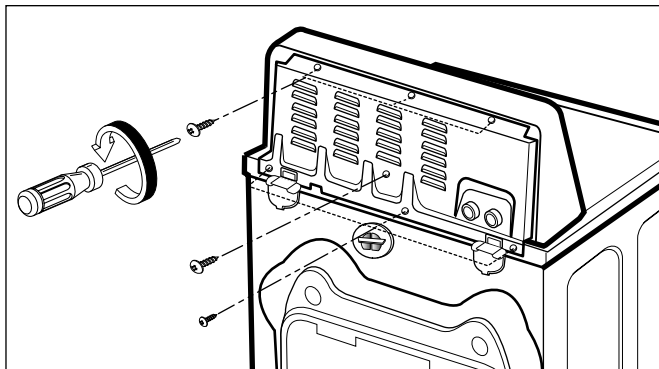


1. Unscrew 7 screws on the Rear Frame.
2. Disassemble the Rear Frame.

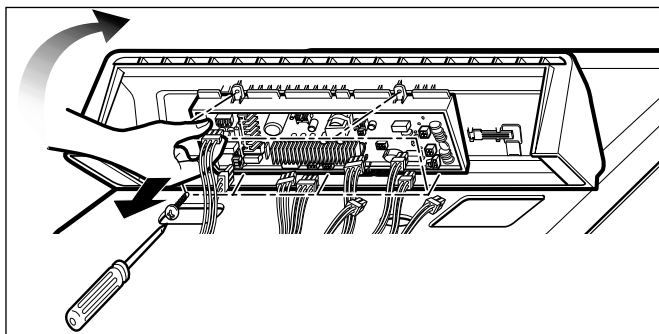


3. Pull the Control panel forward.
4. Disconnect connectors.
5. Unscrew 5 screws.
6. Disassemble the controller assembly.

## TOP PLATE

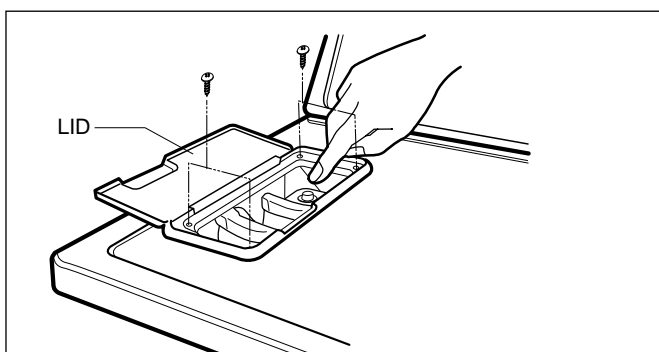


1. Open the Lid.
2. Unscrew 4 screws.
3. Disassemble the Lid Assembly.
4. Pull down the Dispenser by pushing hooks.

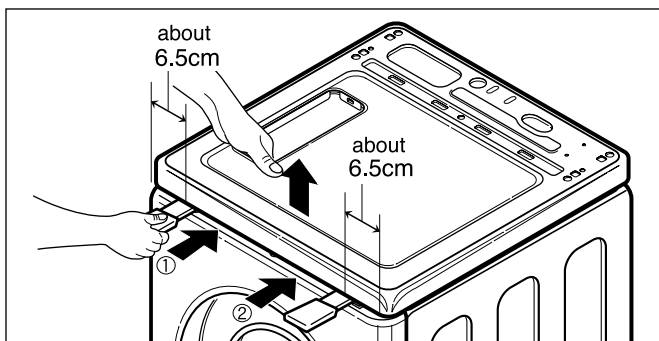


5. Put a hand into the dispenser hole and hold the top plate.
6. Push backward using an opener and lift the top plate.

\* Do first left side (1).


## DISPENSER ASSEMBLY

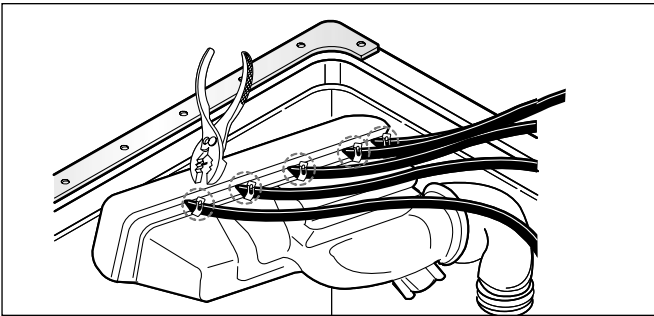

1. Disassemble the 5 hose clamps.
2. Release the 5 hoses.

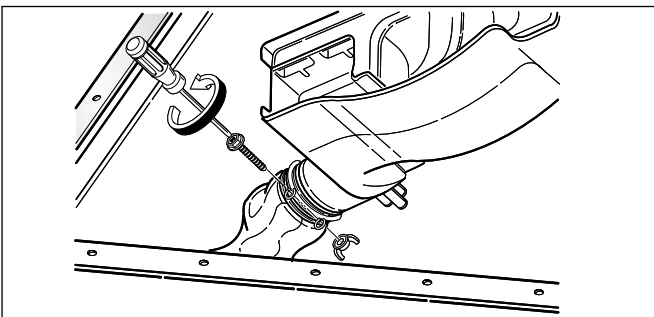


3. Unscrew the nut at the lower part of the dispenser.

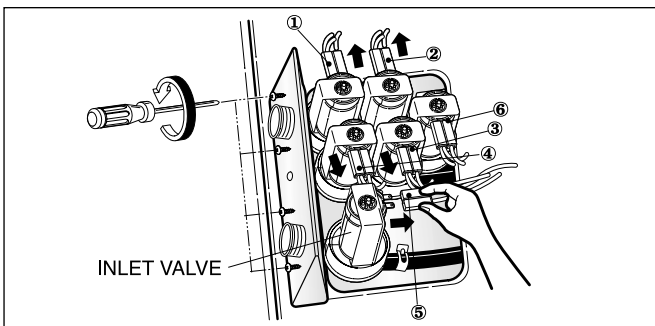

4. Unscrew the 4 screws on the holder.
5. Disassemble the 5 connectors from the valves.


※ Wire color : ① WH-BK ② OR-BK  
③ WH-BK ④ GY-BK  
⑤ BL-BK ⑥ YL-BK

## NOISE FILTER

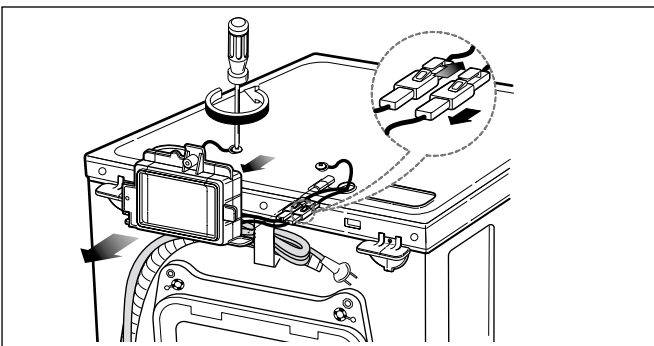


1. Unscrew the screw from the top plate.
2. Unplug the 2 connectors.


## CABINET COVER

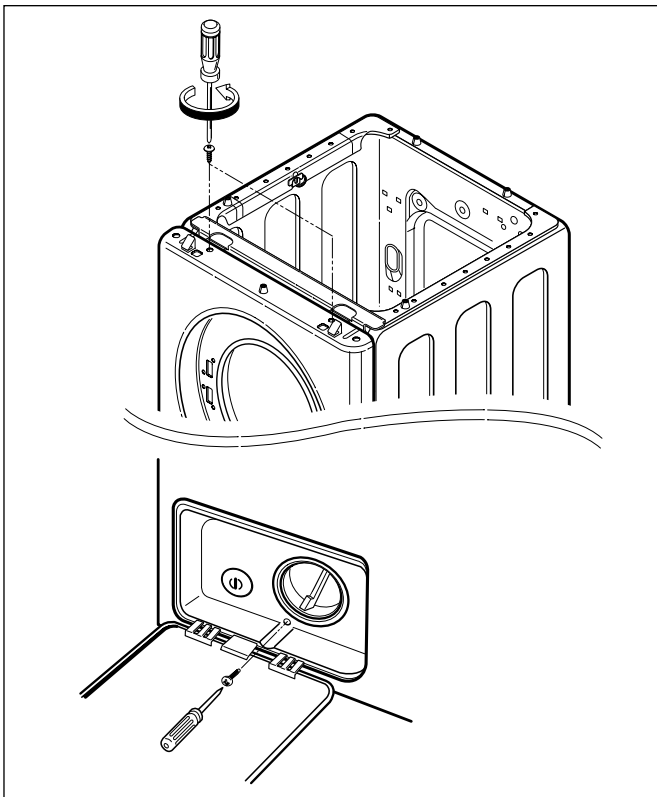

1. Unscrew the 2 screws from upper side of the cabinet cover.
2. Unscrew the screw from filter cover.

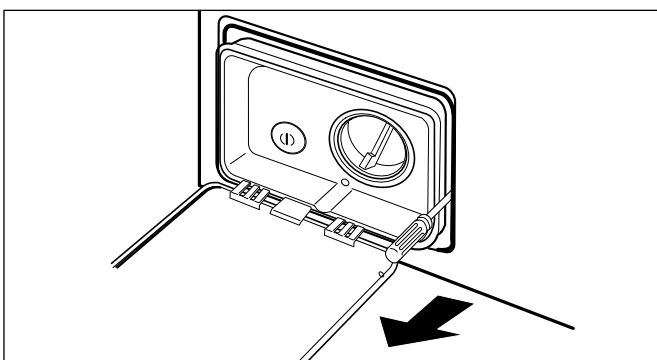


3. Put a flat (-) screwdriver into the both sides of the filter cover, and pull it out.

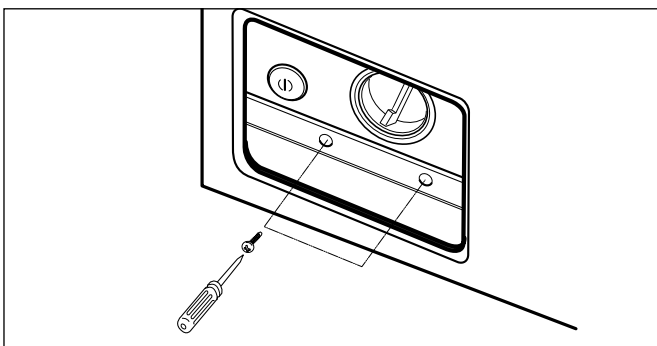


4. Unscrew the 2 screws from the lower side of the cabinet cover.




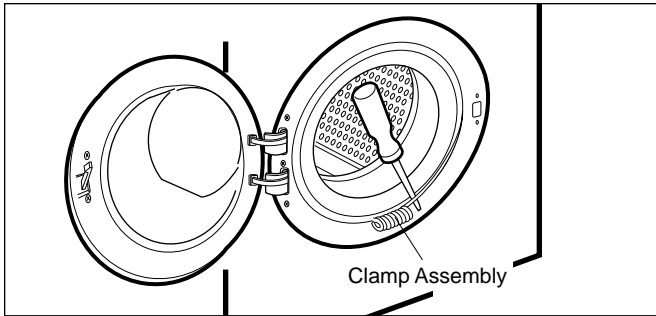


5. Open the door.
6. Disassemble the clamp assembly using a flat (-) screwdriver.
7. Separate the clamp assembly from cabinet cover.

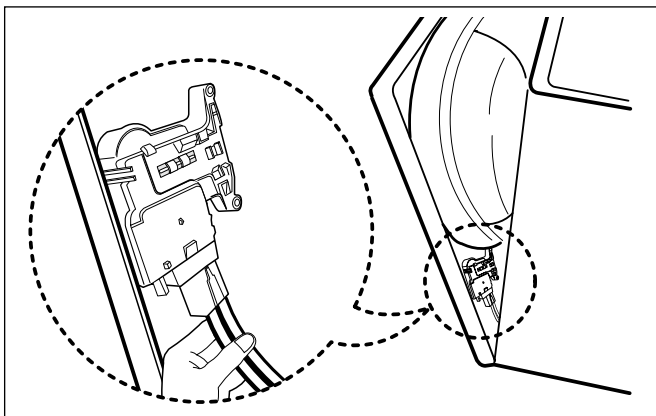

8. Tilt the cabinet cover.
9. Disconnect the door switch connector.



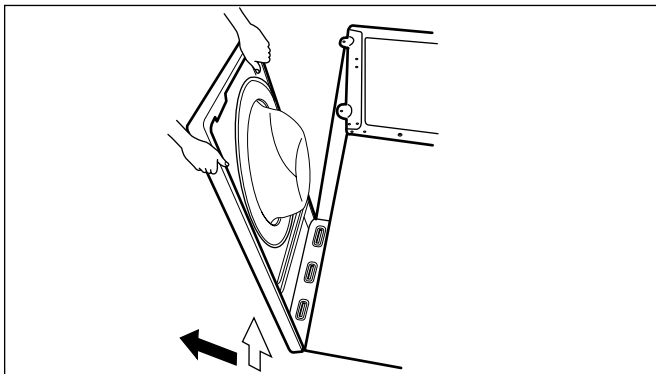


10. Lift and separate the cabinet cover.

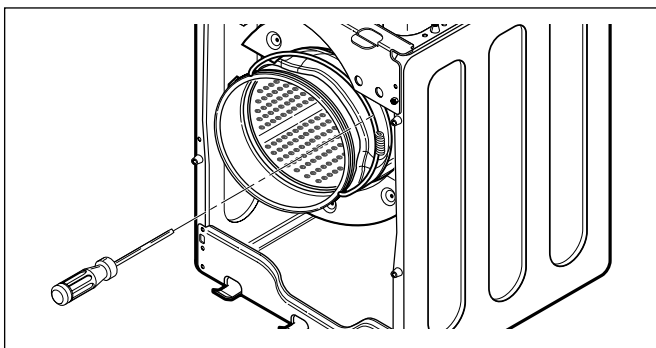

11. Disassemble the clamp assembly using a flat (-) screwdriver.
12. Disassemble the Gasket.

## DOOR

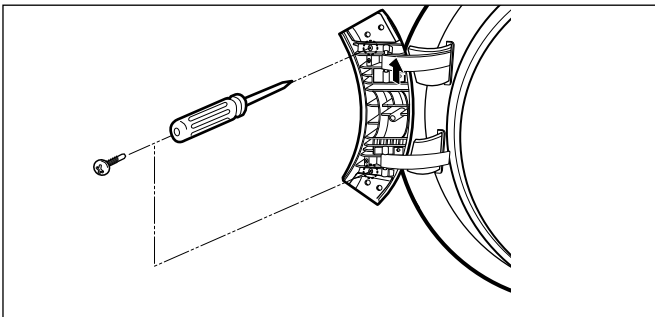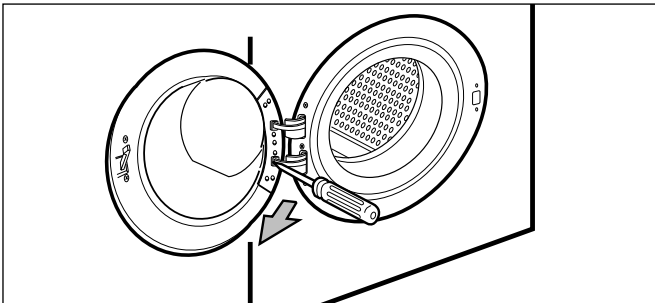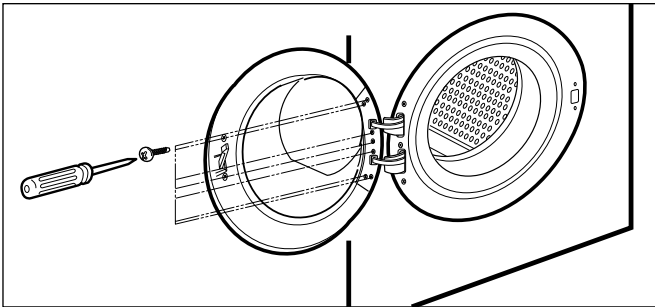


1. Open the door.
2. Unscrew the 7 screws from the hinge cover.

3. Put a flat (-) screwdriver into the opening of the hinge, and pull out the hinge cover.

4. Unscrew the screws from the door.
5. Disassemble the door upward / downward.


※ Be careful ! The door is heavy.

## DOOR SWITCH ASSEMBLY

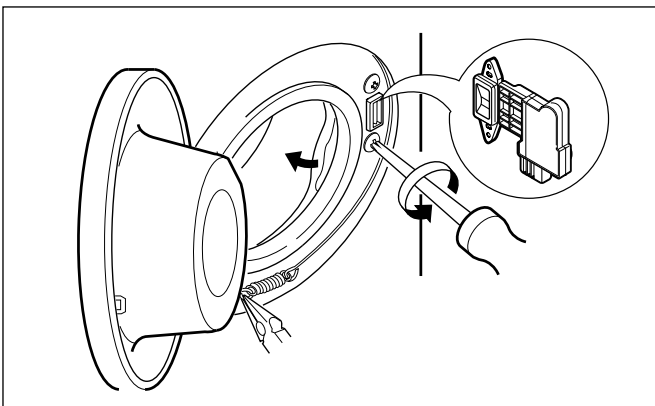


1. Open the door.
2. Disassemble the clamp assembly.
3. Unscrew the 2 screws from cabinet cover.

## PUMP

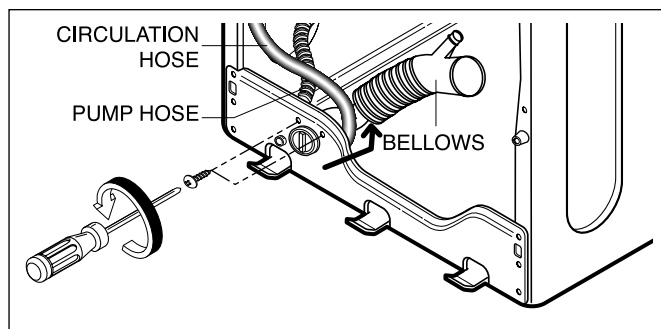

1. Disassemble the cabinet cover.
2. Separate the pump hose, the bellows and the circulation hose assembly from the pump assembly.
3. Disassemble the pump assembly in arrow direction.

## HEATER

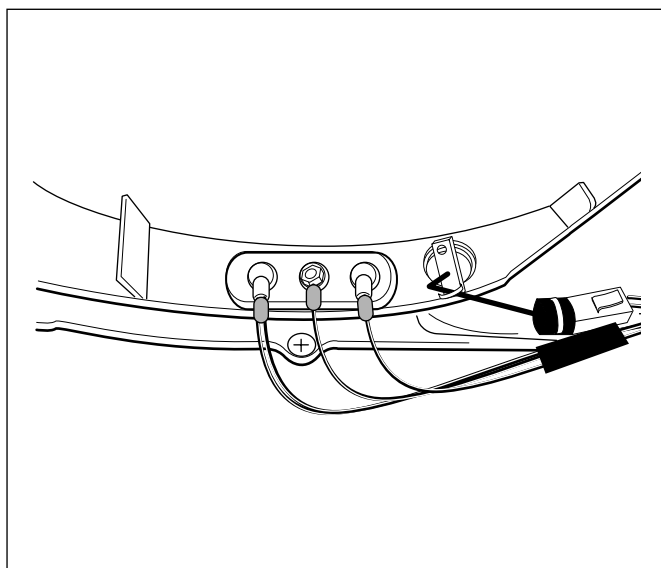


1. Disassemble the cabinet cover.
2. Separate 2 connectors from the heater.
3. Loose the nut and pull out the heater.

### ※ CAUTION


- When assembling the heater, insert the heater into heater clip on the bottom of the tub.
- Tighten the fastening nut so the heater is secure.

## THERMISTOR

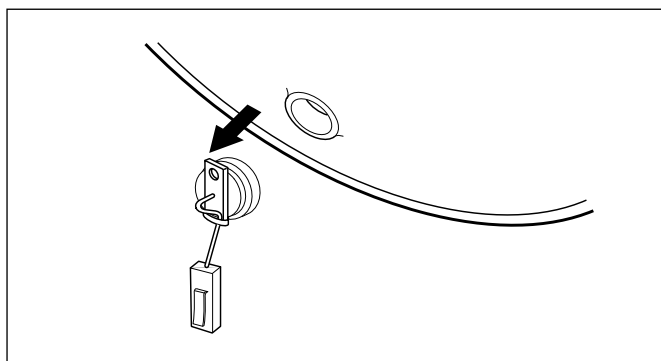


1. Disassemble the cabinet cover.
2. Unplug the white connector from the thermistor.
3. Pull it out by holding the bracket of thermistor.

## WHEN FOREIGN OBJECT IS STUCK BETWEEN DRUM AND TUB

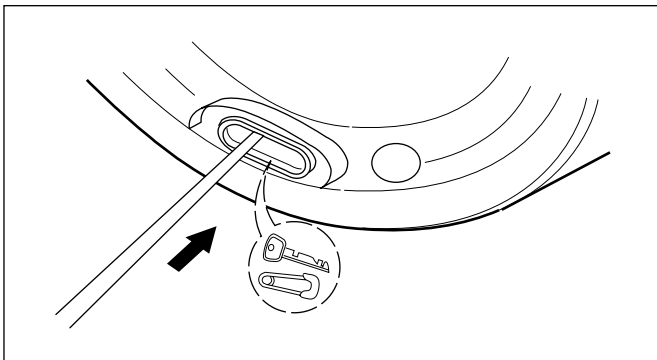


1. Disassemble the cabinet cover.
2. Separate the heater from the tub.
3. Remove any foreign objects (wire, coin, etc.) by inserting a long bar in the opening.


## SENSOR ASSEMBLY (BALL SENSOR)

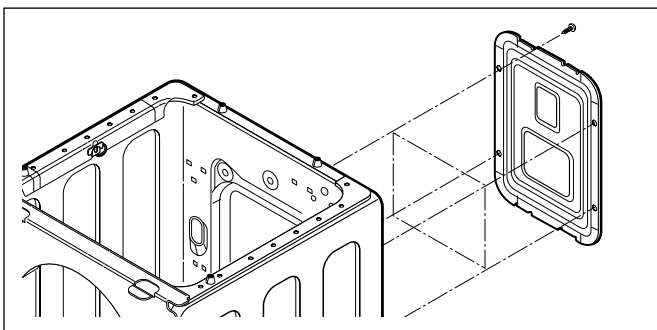

1. Unscrew the 4 screws from the back cover.

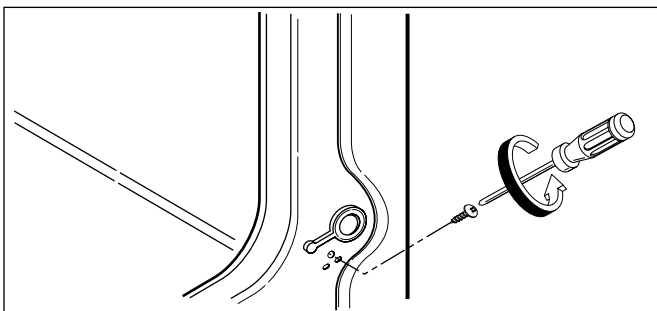


2. Unscrew the single screw from the lower-right side of the cabinet.

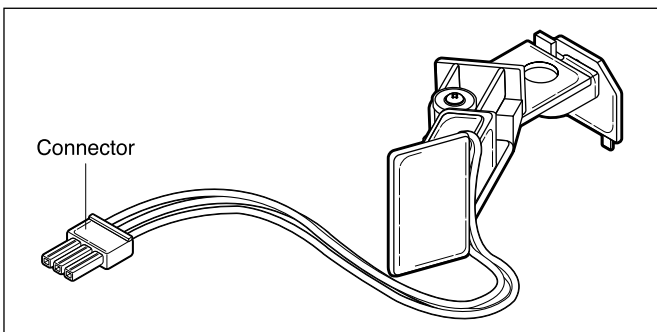


3. Disconnect the connector from PWB Harness.


## MOTOR / DAMPER

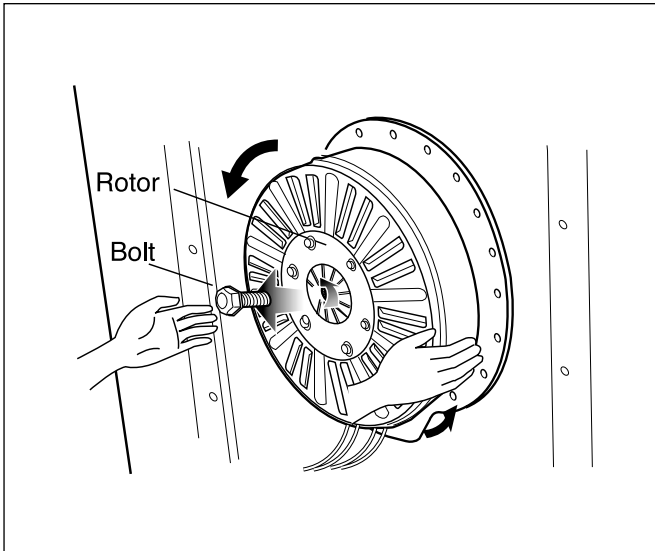

1. Disassemble the back cover.
2. Loosen the bolt.
3. Pull out the Rotor.

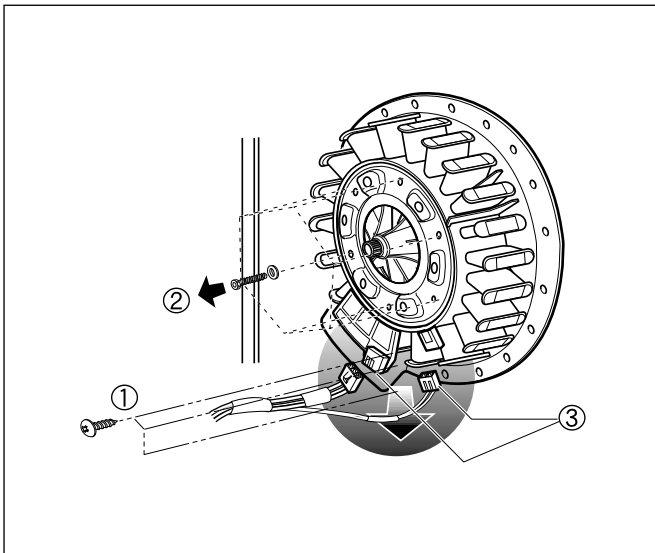


4. Unscrew the 2 screws from the tub bracket.
5. Loosen the 6 bolts on the stator.
6. Unplug the 2 connectors from the stator.

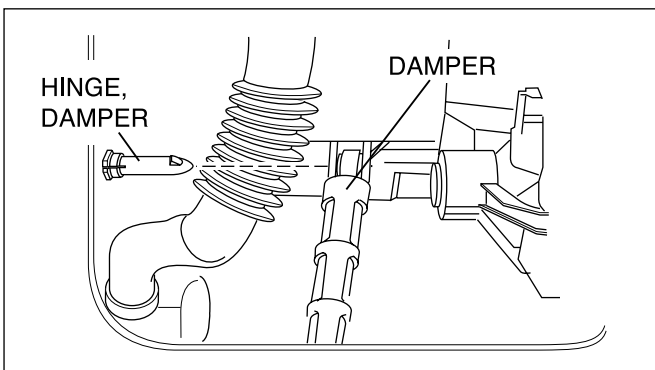


1. Disassemble the damper hinges from the tub and base.
2. Separate the dampers.

## DRY DUCT

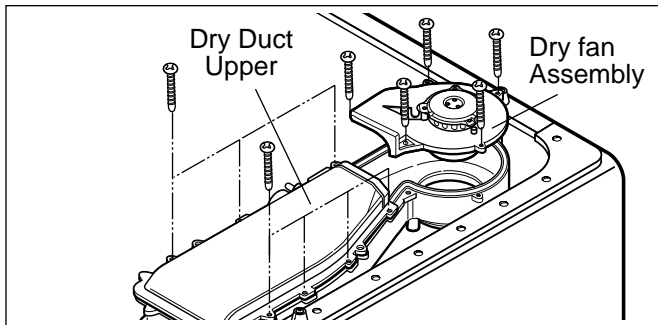


1. Remove 5 screws and dry fan assembly.
2. Remove 7 screws and dry duct upper.
3. Remove 2 screws and dry duct bracket.

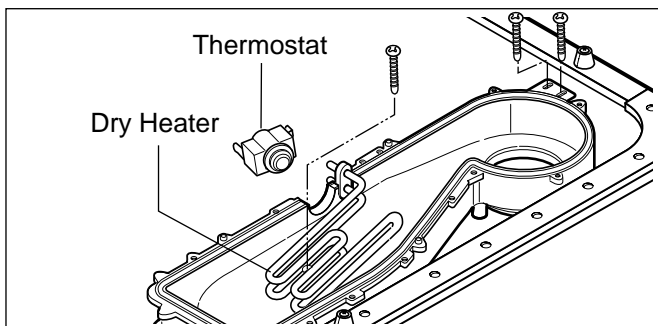


1. Remove 1 screw and dry heater.
2. Remove thermostat.

## CONDENSING DUCT

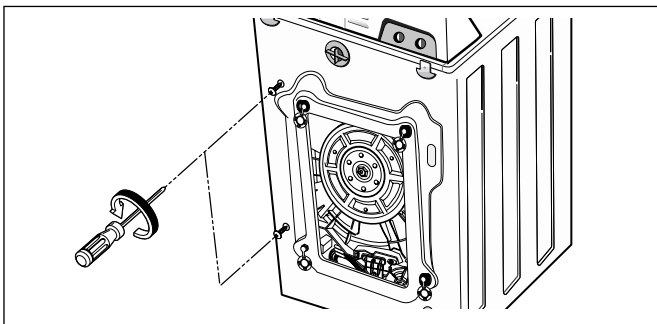


1. Remove 2 screws from cabinet.

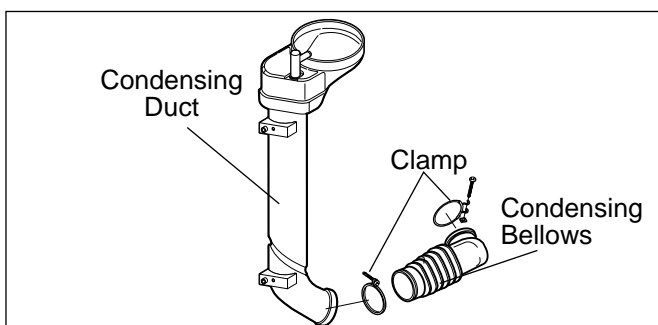


1. Remove clamp and condensing duct.

# 10. EXPLODED VIEW

## 10-1. CABINET & CONTROL PANEL ASSEMBLY

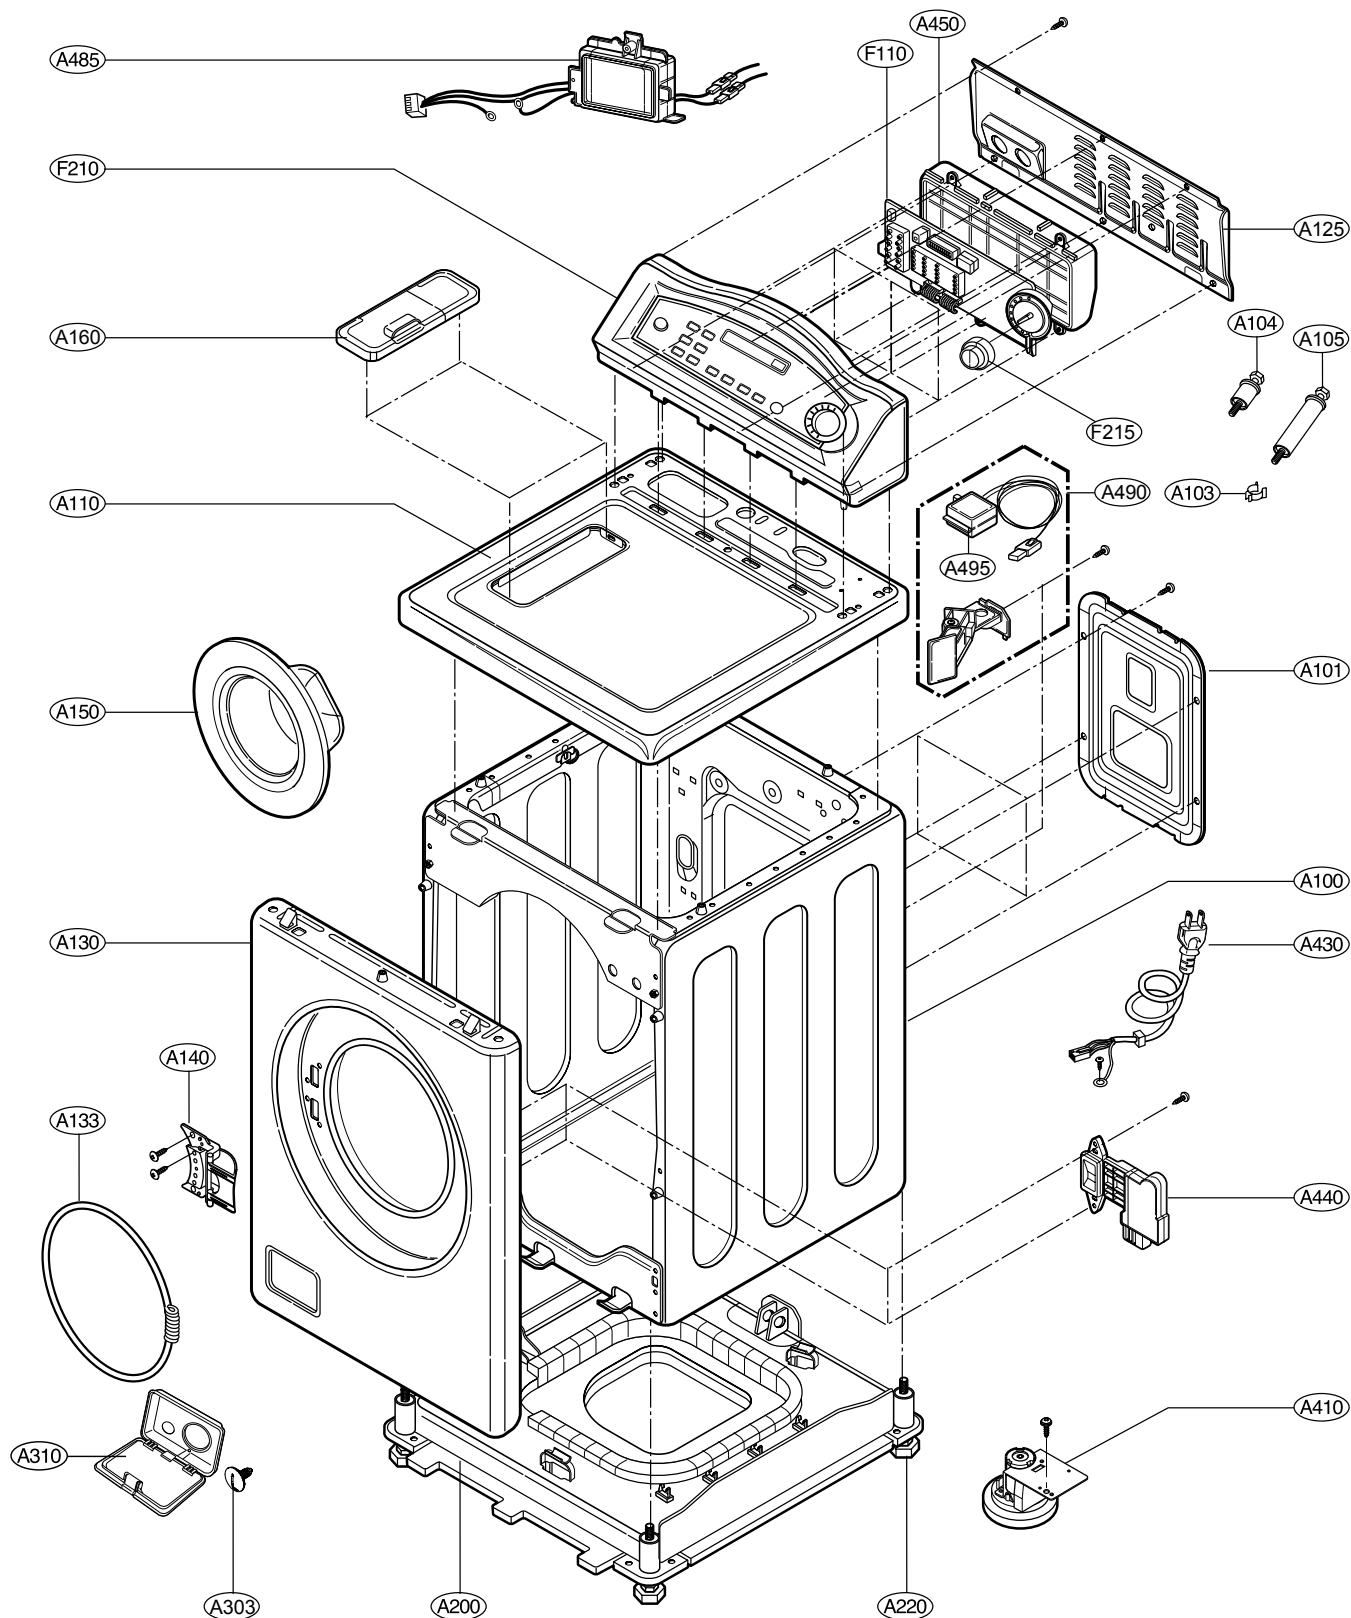


# 10-2. DRUM & TUB ASSEMBLY

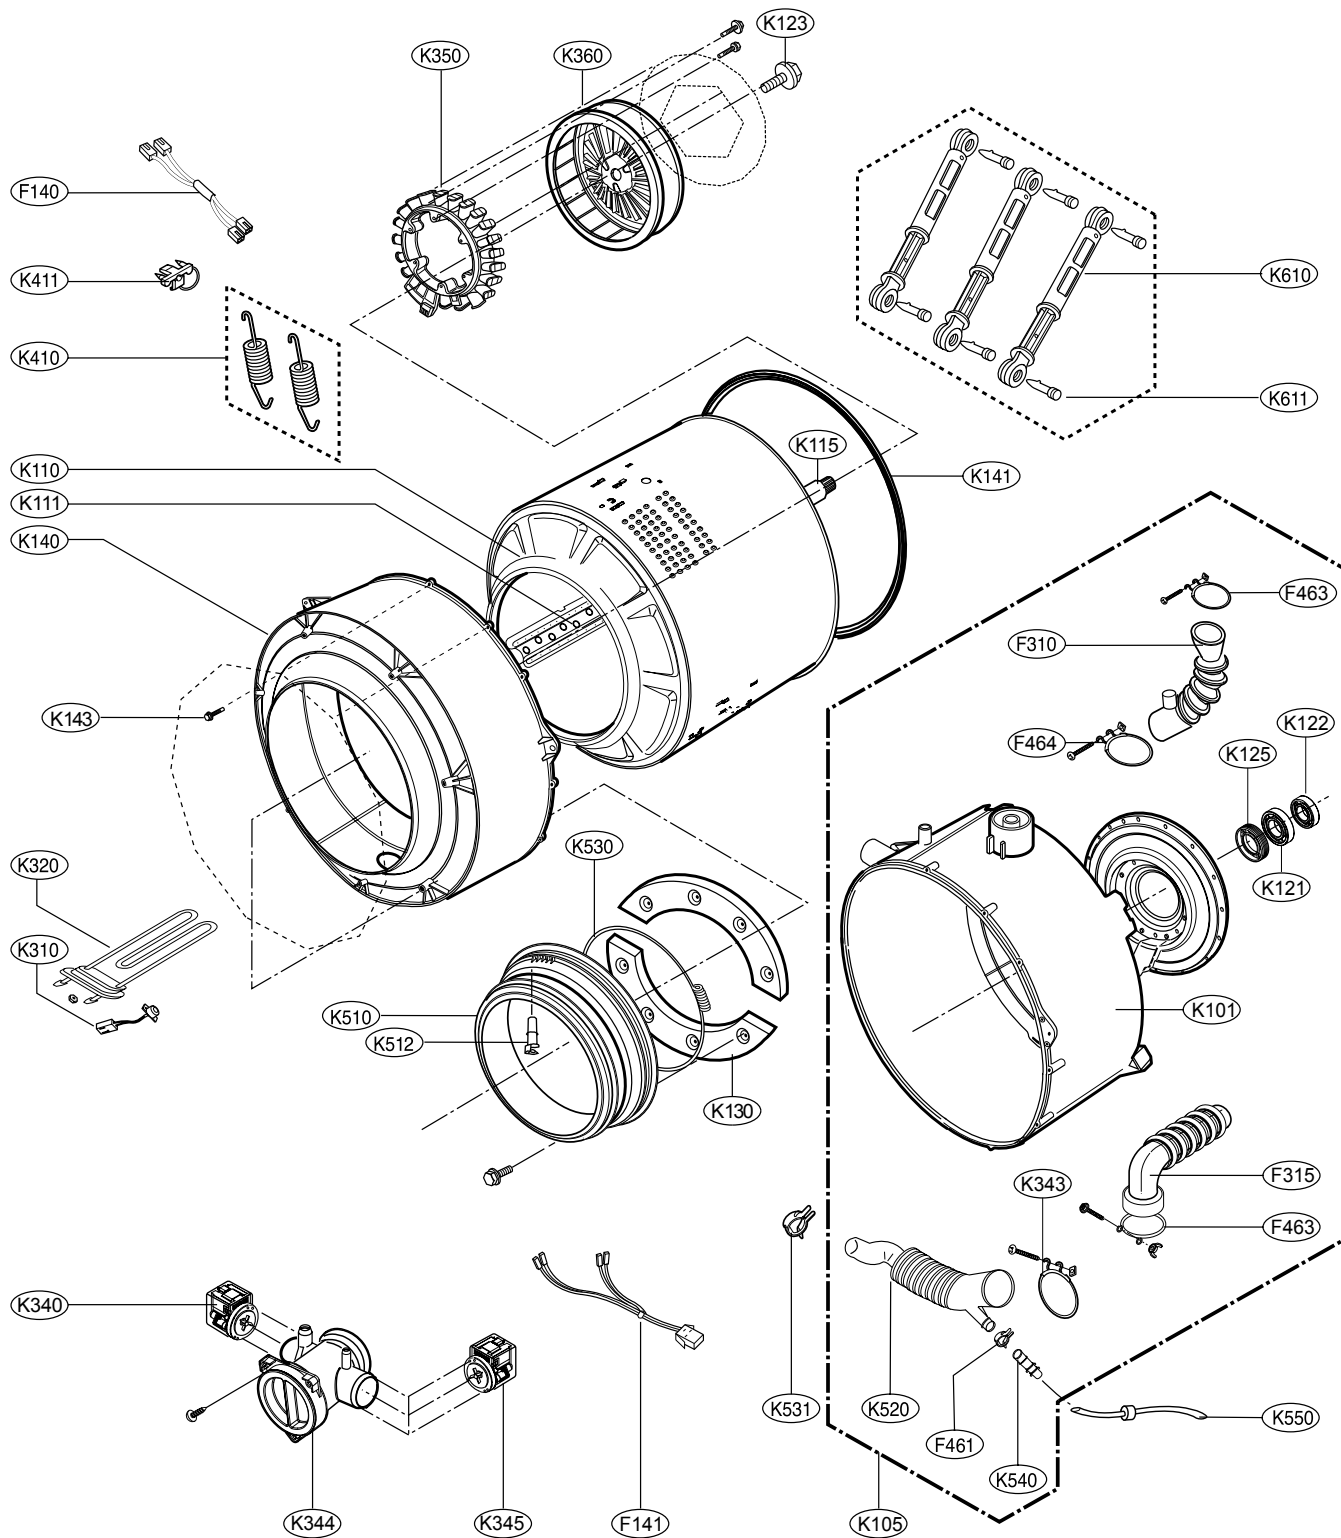




# 10-3. DISPENSER ASSEMBLY

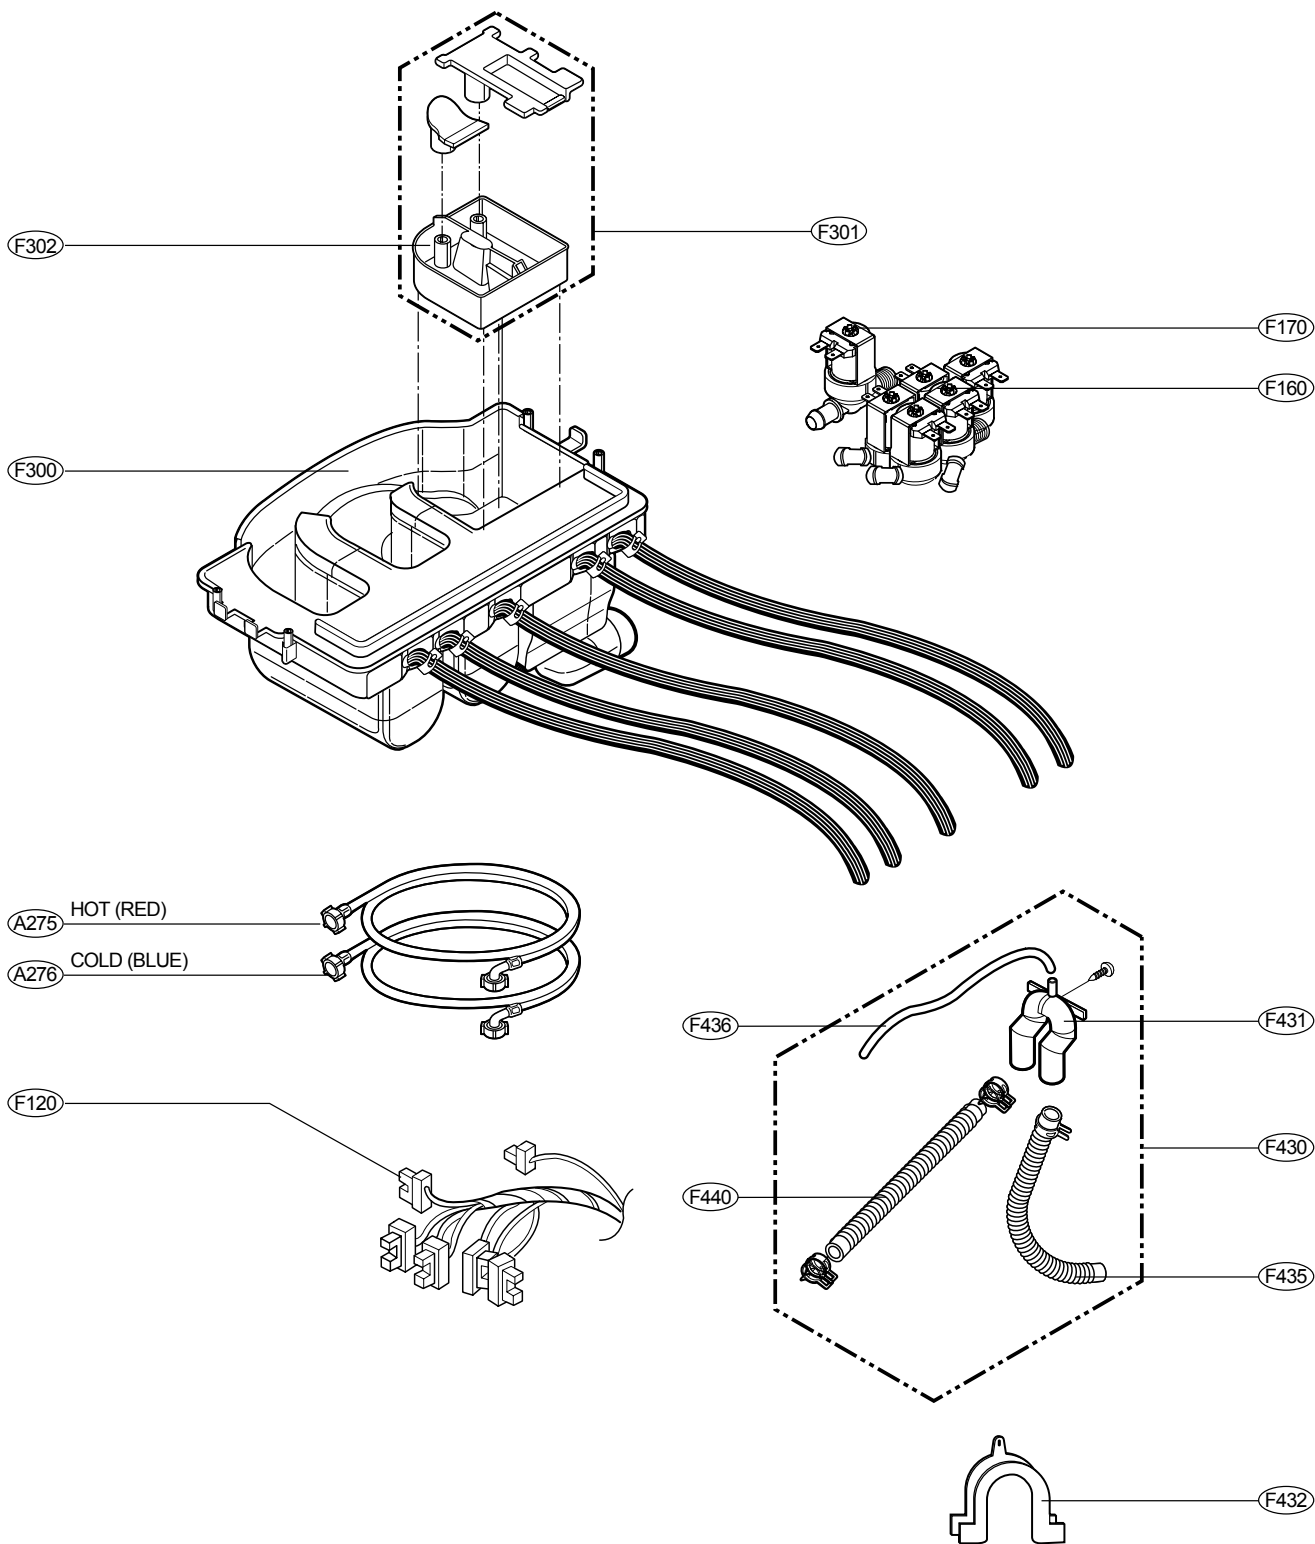

## 10-4. DRYER

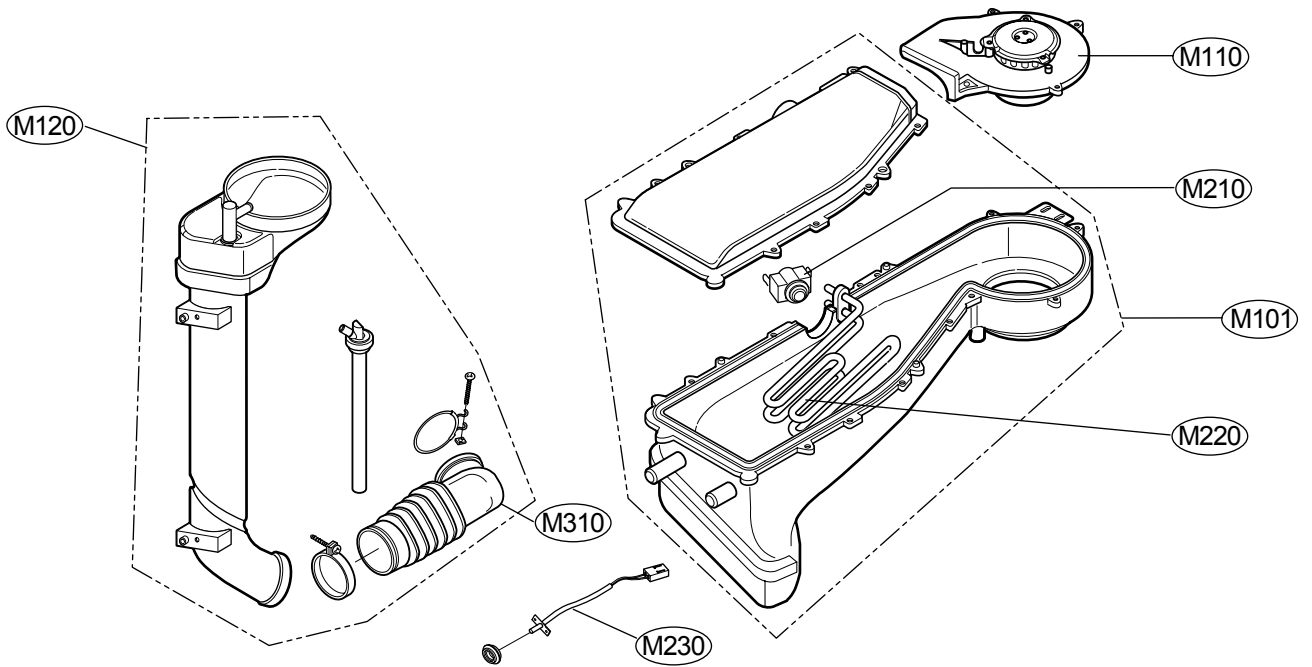



JAN. 2003 PRINTED IN KOREA

P/No.:3828ER3013X